



disklavier™

Mark III Series

Playback model with CD
Modèle avec lecteur CD
Abspielmodell mit CD

Operation Manual
Mode d'emploi
Bedienungsanleitung

FCC INFORMATION (U.S.A.)

1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

2. IMPORTANT: When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

3. NOTE: This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices. This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices. Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Corporation of America, Electronic Service Division, 6600 Orangethorpe Ave, Buena Park, CA 90620

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

IMPORTANT SAFETY INSTRUCTIONS

This product shall be connected to a MAINS socket outlet with a protective earthing connection. (GP Disklavier)

This product shall be connected to a MAINS socket outlet. (Other models)

As long as this unit is connected to the AC wall outlet, it is not disconnected from the AC power source when if you turn off this unit by POWER Switch.

The apparatus shall be instructed near the socket-outlet and make sure that plug of the power cable can easily be disconnected from the socket-outlet as a measure of precaution.

Warning : Excessive sound pressure from earphones and headphones can cause hearing loss.

IMPORTANT NOTICE FOR THE UNITED KINGDOM

Apply for Grand Pianos Connecting the Plug and Cord

IMPORTANT: The wires in mains lead are coloured in accordance with the following code:

GREEN-AND-YELLOW	: EARTH
BLUE	: NEUTRAL
BROWN	: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured GREEN and YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol or coloured GREEN and YELLOW.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

The Control Unit is classified as a Class 1 laser product. One of the labels below is located on the inside of the CD drive unit.

CLASS 1 LASER PRODUCT
LASER KLASSE 1
LUOKAN 1 LASERLAITE
KLASS 1 LASER APPARAT
APAREIL A LASER DE CLASSE 1
EN60825

CLASS 1 LASER PRODUCT
LASER KLASSE 1

Laser Diode Properties

- * Material: GaAlAs
- * Wavelength: 790/795 nm
- * Laser Output Power at the lens of the Laser Pick Up Unit: max. 0.34 mW

Apply for Upright Pianos


Uniquement pour les pianos droits

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

ATTENTION: POUR EVITER LES CHOCS ELECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JASQU'AU FOND.

Alleen voor klanten in Nederland

Bij dit produkt zijn
batterijen geleverd.
Wanneer deze leeg zijn,
moet u ze niet weggooien
maar inleveren als KCA.

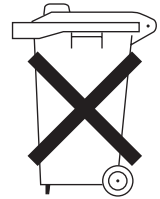

CAUTION—Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION—L'utilisation de commandes ou de réglages, ou l'exécution de procédures, autres que celles qui sont spécifiées ici peuvent conduire à une exposition à des rayonnements dangereux.

VORSICHT—Die Verwendung von Bedienungselementen oder Einstellungen, oder die Anwendung von Verfahren, die nicht in dieser Anleitung angegeben sind, kann zu gefährlicher Freisetzung von Strahlung führen.

IMPORTANT NOTICE FOR THE UNITED KINGDOM

Apply for Upright Pianos Connecting the Plug and Cord

IMPORTANT: The wires in mains lead are coloured in accordance with the following code:

BLUE	: NEUTRAL
BROWN	: LIVE

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:


The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

Making sure that neither core is connected to the earth terminal of the three pin plug.

SPECIAL MESSAGE SECTION


PRODUCT SAFETY MARKINGS: Yamaha electronic products may have either labels similar to the graphics shown below or molded/stamped facsimiles of these graphics on the enclosure. The explanation of these graphics appears on this page. Please observe all cautions indicated on this page and those indicated on the safety instruction section.

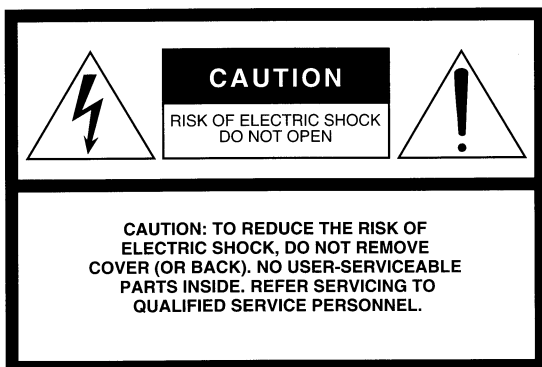

SEE BOTTOM OF ENCLOSURE OR LOWER FRONT PANEL FOR GRAPHIC SYMBOL MARKINGS



The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

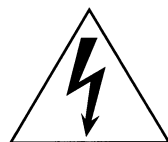

The lightning flash with arrowhead symbol within the equilateral triangle is intended to alert the user to the presence of uninsulated

“dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.

IMPORTANT NOTICE: All Yamaha electronic products are tested and approved by an independent safety testing laboratory in order that you may be sure that when it is properly installed and used in its normal and customary manner, all foreseeable risks have been eliminated. **DO NOT** modify this unit or commission others to do so unless specifically authorized by Yamaha. Product performance and/or safety standards may be diminished. Claims filed under the expressed warranty may be denied if the unit is/has been modified. Implied warranties may also be affected.

SPECIFICATIONS SUBJECT TO CHANGE: The information contained in this manual is believed to be correct at the time of printing. However, Yamaha reserves the right to change or modify any of the specifications without notice or obligation to update existing units.

ENVIRONMENTAL ISSUES: Yamaha strives to produce products that are both user safe and environmentally friendly. We sincerely believe that our products and the production methods used to produce them, meet these goals. In keeping with both the letter and the spirit of the law, we want you to be aware of the following:


Battery Notice: This product **MAY** contain a small nonrechargeable battery which (if applicable) is soldered in place. The average life span of this type of battery is approximately five years. When replacement becomes necessary, contact a qualified service representative to perform the replacement.

Warning: Do not attempt to recharge, disassemble, or incinerate this type of battery. Keep all batteries away from children. Dispose of used batteries promptly and as regulated by applicable laws. Note: In some areas, the servicer is required by law to return the defective parts. However, you do have the option of having the servicer dispose of these parts for you.

Disposal Notice: Should this product become damaged beyond repair, or for some reason its useful life is considered to be at an end, please observe all local, state, and federal regulations that relate to the disposal of products that contain lead, batteries, plastics, etc.

NOTICE: Service charges incurred due to lack of knowledge relating to how a function or effect works (when the unit is operating as designed) are not covered by the manufacturer’s warranty, and are therefore the owners responsibility. Please study this manual carefully and consult your dealer before requesting service.

NAME PLATE LOCATION: The graphic below indicates the location of the name plate. The model number, serial number, power requirements, etc., are located on this plate. You should record the model number, serial number, and the date of purchase in the spaces provided below and retain this manual as a permanent record of your purchase.

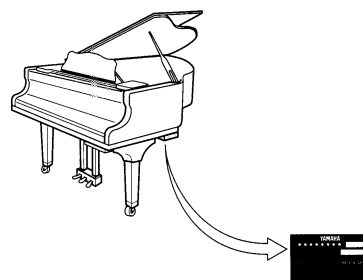

Model _____
 Serial No. _____
 Purchase Date _____

IMPORTANT SAFETY INSTRUCTIONS

INFORMATION RELATING TO PERSONAL INJURY, ELECTRICAL SHOCK, AND FIRE HAZARD POSSIBILITIES HAS BEEN INCLUDED IN THIS LIST.

WARNING— When using any electrical or electronic product, basic precautions should always be followed. These precautions include, but are not limited to, the following:

1. Read all Safety Instructions, Installation Instructions, Special Message Section items, and any Assembly Instructions found in this manual **BEFORE** making any connections, including connection to the main supply.

2. **Main Power Supply Verification:** Yamaha products are manufactured specifically for the supply voltage in the area where they are to be sold. If you should move, or if any doubt exists about the supply voltage in your area, please contact your dealer for supply voltage verification and (if applicable) instructions. The required supply voltage is printed on the name plate. For name plate location, please refer to the graphic found in the Special Message Section of this manual.

3. This product may be equipped with a polarized plug (one blade wider than the other). If you are unable to insert the plug into the outlet, turn the plug over and try again. If the problem persists, contact an electrician to have the obsolete outlet replaced. **DO NOT** defeat the safety purpose of the plug.

4. **DANGER**— **Grounding Instructions:** Disklavier Grand must be grounded and therefore has been equipped with a three pin attachment plug. If this product should malfunction, the ground pin provides a path of low resistance for electrical current, reducing the risk of electrical shock. If your wall socket will not accommodate this type plug, contact an electrician to have the outlet replaced in accordance with local electrical codes. **DO NOT** modify the plug or change the plug to a different type!

5. **WARNING:** Do not place this product or any other objects on the power cord or place it in a position where anyone could walk on, trip over, or roll anything over power or connecting cords of any kind. The use of an extension cord is not recommended! If you must use an extension cord, the minimum wire size for a 25' cord (or less) is 18 AWG. **NOTE:** The smaller the AWG number, the larger the current handling capacity. For longer extension cords, consult a local electrician.

6. **Ventilation:** Electronic products, unless specifically designed for enclosed installations, should be placed in locations that do not interfere with proper ventilation. If instructions for enclosed installations are not provided, it must be assumed that unobstructed ventilation is required.

7. **Temperature considerations:** Electronic products should be installed in locations that do not significantly contribute to their operating temperature. Placement of this product close to heat sources such as; radiators, heat registers and other devices that produce heat should be avoided.

8. This product was **NOT** designed for use in wet/damp locations and should not be used near water or exposed to rain. Examples of wet/damp locations are; near a swimming pool, spa, tub, sink, or wet basement.

9. This product should be used only with the components supplied or; a cart, rack, or stand that is recommended by the manufacturer. If a cart, rack, or stand is used, please observe all safety markings and instructions that accompany the accessory product.

10. The power supply cord (plug) should be disconnected from the outlet when electronic products are to be left unused for extended periods of time. Cords should also be disconnected when there is a high probability of lightning and/or electrical storm activity.

11. Care should be taken that objects do not fall and liquids are not spilled into the enclosure through any openings that may exist.

12. Electrical/electronic products should be serviced by a qualified service person when:

- a. The power supply cord has been damaged; or
- b. Objects have fallen, been inserted, or liquids have been spilled into the enclosure through openings; or
- c. The product has been exposed to rain; or
- d. The product does not operate, exhibits a marked change in performance; or
- e. The product has been dropped, or the enclosure of the product has been damaged.

13. Do not attempt to service this product beyond that described in the user-maintenance instructions. All other servicing should be referred to qualified service personnel.




14. This product, either alone or in combination with an amplifier and headphones or speaker/s, may be capable of producing sound levels that could cause permanent hearing loss. **DO NOT** operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist. **IMPORTANT:** The louder the sound, the shorter the time period before damage occurs.

15. Some Yamaha products may have benches and/or accessory mounting fixtures that are either supplied as a part of the product or as optional accessories. Some of these items are designed to be dealer assembled or installed. Please make sure that benches are stable and any optional fixtures (where applicable) are well secured **BEFORE** using. Benches supplied by Yamaha are designed for seating only. No other uses are recommended.

Mounting the Control Unit to the Grand Piano

Installation du boîtier de commande sur un piano à queue

Montieren des Steuergerätes an den Flügel

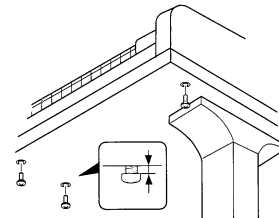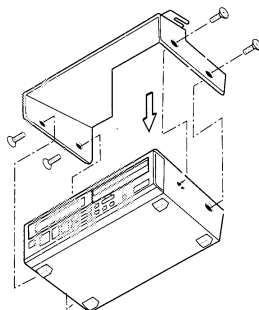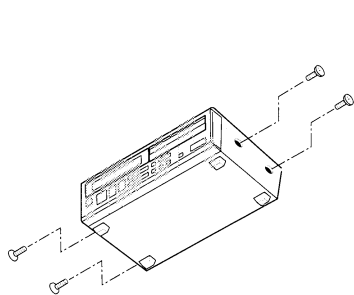

- (1) Remove the four screws from the sides of the Control Unit.
- (2) Place the metal suspension bracket, included with the Disklavier grand model, over the Control Unit, then secure the metal suspension bracket to the Control Unit using the same screws.
- (3) Insert the three restraining screws (attached) into the marked nuts underneath the treble side key bed, then tighten the screws, leaving a gap of about 5 mm between head of the screw and piano body.

- (1) Retirer les quatre vis sur les côtés du boîtier de commande.
- (2) Placer le support métallique (fourni avec le Disklavier pour piano à queue) sur le boîtier de commande, puis fixer le support métallique au boîtier de commande en utilisant les quatre vis à tête conique.
- (3) Introduire les trois vis de fixation dans les écrous marqués sous le clavier du côté des aigus, puis serrer les vis en laissant un espace d'environ 5 mm entre la tête de la vis et le corps du piano.

- (1) Entfernen Sie die vier Schrauben von den Seiten des Steuergerätes.
- (2) Schieben Sie den mit dem Disklavier gelieferten Metallhalter über das Steuergerät, und befestigen Sie ihn mit den vier Senkschrauben am Steuergerät.
- (3) Drehen Sie die drei Halteschrauben in die markierten Muttern an der Unterseite des Klaviaturbodens auf der Diskantseite ein, und ziehen Sie dann die Schrauben so weit an, daß ein Abstand von ca. 5 mm zwischen dem Schraubenkopf und dem Klaviaturboden bestehen bleibt.

Notes:



- 1) Handle the metal suspension bracket and the Control Unit carefully to avoid scratches.
- 2) Screws:
Restraining screws (5 × 12) 3
BWH screws (4 × 4) 4
- 3) When mounted correctly, the Control Unit is angled approximately 18° above horizontal.

Remarques :

- 1) Manipuler soigneusement le support métallique et le boîtier de commande pour éviter les rayures.
- 2) Vis :
Vis de retenue (5 × 12) 3
Vis BWH (4 × 4) 4
- 3) Lorsqu'il est monté correctement, le boîtier de commande est incliné d'environ 18° sur l'horizontale.

Hinweise:

- 1) Behandeln Sie den Metallhalter und das Steuergerät mit Sorgfalt, um Kratzer zu vermeiden.
- 2) Schrauben:
Halteschrauben (5 × 12) 3
BWH-Schrauben (4 × 4) 4
- 3) Bei korrekter Montage ist das Steuergerät um ca. 18° zur Horizontalen geneigt.

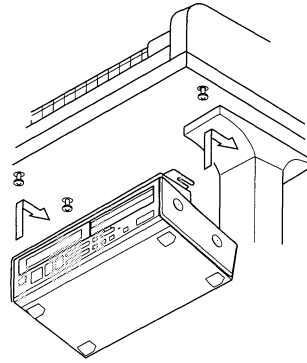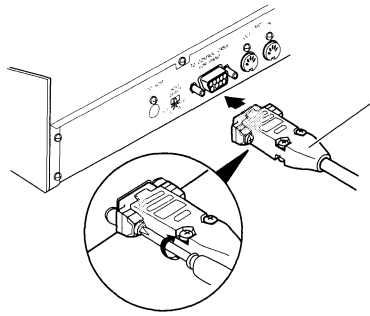

(4) Insert the control cable into the D-SUB connector on the back of the Control Unit, then securely tighten the two screws attached to the connector. Be sure to check the orientation of the D-SUB connector when inserting the cable.

(5) Fit the “slots” of the metal suspension bracket containing the Control Unit to the screws mentioned in step (3).

(6) After mounting the Control Unit, push the Control Unit back as far as it will go and then tighten the three screws to secure the bracket.

(4) Raccorder le câble de commande au connecteur D-SUB situé au dos du boîtier de commande, puis serrer correctement les deux vis du connecteur. Prendre soin de vérifier l'orientation du connecteur D-SUB en raccordant le câble.

(5) Glisser les “fentes” du support métallique contenant le boîtier de commande sur les vis mentionnées à l'étape (3).

(6) Après avoir installé le boîtier de commande, l'enfoncer jusqu'à l'extrémité et serrer les trois vis pour fixer le support.

(4) Schließen Sie das Steuerkabel an den D-SUB-Anschluss auf der Rückseite des Steuergerätes an, und ziehen Sie dann die beiden am Stecker angebrachten Schrauben fest an. Achten Sie beim Anschließen des Kabels auf korrekte Ausrichtung des D-SUB-Steckers.

(5) Hängen Sie die Schlitzlöcher des Metallhalters mit dem Steuergerät an die in Schritt (3) montierten Schrauben.

(6) Nachdem Sie das Steuergerät montiert haben, schieben Sie es bis zum Anschlag nach hinten. Ziehen Sie dann die drei Schrauben zur Sicherung des Halters an.



disklavier™

Mark III Series

Playback model with CD

Operation Manual

Welcome to the Yamaha Disklavier™!

Thank you for purchasing the Yamaha Disklavier piano!

The Disklavier is a fascinating instrument that integrates a classic Yamaha acoustic piano with innovative electronics to suit your entertainment and educational needs, while retaining the tone, touch and long-term value that have long made Yamaha pianos the world's finest.

Before using your Disklavier piano, please read this manual thoroughly and retain it for future reference.

This manual is designed to cover playback models with CD drive.

Trademarks & Copyright

Yamaha, Disklavier, Silent, PianoSoft, PianoSoft·Plus, PianoSoft·PlusAudio, PianoSmart, and Smart PianoSoft are trademarks of Yamaha Corporation.

Unauthorized copying of PianoSoft or PianoSoft·Plus disks is prohibited.

Important

Read the following before operating the Disklavier.

Warnings

- Do not locate the Disklavier in a place subject to excessive heat, low temperatures, or direct sunlight. This could be a fire hazard and may damage the finish and internal parts.
- Excessive humidity or dust can lead to fire or electric shock.
- Connect the plug on the Disklavier power cable to a compatible AC outlet. Failure to do so will present a fire and electric shock hazard. If the power cable plug is not compatible with your AC outlet, consult your dealer.
- Do not plug several devices into the same AC outlet. This can overload the AC outlet, and lead to fire and electric shock hazard. It may also affect the performance of some devices.
- Do not place heavy objects on the power cable. A damaged power cable is a potential fire and electric shock hazard. If the power cable runs under a carpet, make sure heavy objects, including the Disklavier, are not placed on top of the cable.
- If the power cable is damaged (i.e. cut or a bare wire is exposed), ask your dealer for a replacement. Using the Disklavier in this condition is a fire and shock hazard.
- When disconnecting the power cable from an AC outlet, always pull from the plug. Never pull the cable. Damaging the cable in this way is a potential fire and electric shock hazard.
- The cover of the unit should be removed only by qualified service technicians.
- Do not place liquid containers such as vases, potted plants, glasses, cosmetic bottles, medicines, etc., on top of the Disklavier.
- Do not try to modify the Disklavier, as this could lead to fire or electric shock hazard.
- When moving the Disklavier to another location, turn off the power, remove the power plug from the AC outlet, and remove all cables connected to external devices.

Cautions

- Turn off all audio devices when connecting to the Disklavier. Refer to the user's guide for each device. Use the correct cables and connect as specified.
- Set the volume level on all the devices to minimum before applying power.
- Do not play the Disklavier at a high volume for extended periods; you may damage your hearing. If you think your hearing ability is impaired, consult your doctor.
- If the Disklavier is worked extremely hard — that is, prolonged playback of very “busy” songs — the Disklavier's thermal relay may trip. The thermal relay will automatically reset when the Disklavier has cooled down.
- If you notice any abnormality — such as smoke, odor, or noise — turn off the Disklavier immediately, and remove the power plug from the AC outlet. Consult your dealer for repair.
- If a foreign object or water gets inside the Disklavier turn it off immediately, and remove the power plug from the AC outlet. Consult your dealer.
- If you plan not to use the Disklavier for a long period of time (such as when you are on vacation), disconnect the electrical mains.
- Always remove the power plug from the AC outlet before cleaning the Disklavier. Leaving the power plug connected presents a risk of electric shock.
- Do not use benzene, thinner, cleaning detergent, or a chemical cloth to clean the Disklavier.
- Do not place metal objects with rubber feet on top of the Disklavier. The color and finish of the Disklavier can be damaged.
- Do not place heavy objects on the Disklavier. Doing so can damage the Disklavier.

- Use a soft, dry cloth to clean the Disklavier. However, if you discover a stain, carefully use a soft damp cloth to remove it.

Interference

- The Disklavier uses high-frequency digital circuits that may cause interference to radios and TVs placed close to it. If interference does occur, relocate the affected equipment.

Handling Batteries

The remote control of this unit is powered by dry batteries. Improper use or misuse of the dry batteries can cause the dry batteries to heat up, leak electrolyte or burst which in turn may result in a fire, damage to equipment and/or nearby objects or in burns, injury or other bodily harm. Read through and familiarize yourself with the following safety precautions prior to use to ensure correct usage.

- Do not directly touch the chemicals (electrolyte) which have leaked from dry batteries.
 1. If electrolyte from dry batteries has made contact with your eyes, rinse your eyes thoroughly with clean water and seek medical treatment from a physician immediately.
 2. If electrolyte from dry batteries has touched your skin or clothing, rinse it off immediately with clean water.
 3. If electrolyte from dry batteries has found its way inside your mouth, gargle immediately and consult a physician.
- Do not install the dry batteries with the “+” and “-” poles reversed. Misaligning the poles of dry batteries can lead the dry batteries to be charged or shorted or it can cause them to heat up, leak electrolyte or burst which in turn may result in a fire, damage to nearby objects or in burns, injury or other bodily harm.
- Use only the designated batteries. Do not use used batteries with unused batteries or different types of batteries together. This can cause them to heat up, leak electrolyte or burst which in turn may result in a fire or in burns, injury or other bodily harm. Replace all the dry batteries at the same time. Do not use new and old dry batteries together. Do not use different types of batteries (alkaline and manganese batteries, batteries made by different manufacturers or different battery products made by the same manufacturer) together: this can cause them to heat up, ignite or leak electrolyte.
- When the battery-powered unit is not going to be used for a prolonged period of time, remove the dry batteries from the unit. Otherwise the batteries will run down and their electrolyte may leak, resulting in damage to the unit.
- Remove spent batteries immediately from equipment. Otherwise, batteries will overdischarge, causing them to heat up, leak electrolyte or burst which in turn may result in damage to nearby objects or in burns, injury or other bodily harm.
- Dispose of batteries in accordance with the applicable regulations and ordinances.

Please keep this manual for future reference.

Table of Contents

Basic Operations

Chapter 1 Setting Up Your Disklavier

Items Supplied with the Disklavier	1
Connecting the Control Unit	1
Connecting the Power Cable	2
Using the Remote Control	2
Connecting Other Equipment	2
Basic Disklavier Terminology	3

Chapter 2 Names of Parts and Their Functions

Control Unit — Front Panel	4
Control Unit — Rear Panel	5
Amplifier, Speakers & Foot Controller	6
Remote Control	7

Chapter 3 Floppy Disks and Memory Disks

Floppy Disks	9
Memory Disks	10

Chapter 4 Turning On/Off Your Disklavier

Turning On the Disklavier	11
Turning Off the Disklavier	11
Setting the Internal Calendar	12

Chapter 5 Display (LCD)

Chapter 6 Basic Playback

Playing Back a Floppy Disk or a Memory Disk	15
Playing Back a CD	15
Specifying a Disk	16
Starting Playback	17
Pausing Playback	17
Stopping Playback	17
Selecting Songs with the Control Unit	18
Selecting Songs with the Remote Control	18
Fast Preview & Review	19
Fast Forward & Reverse	20

Adjusting the Volume	21
Adjusting the Tone	22
Balancing the Ensemble Volume (TG Master Balance)	22
Balancing the CD Volume (CD Master Balance)	23
Changing the Tempo	24
Transposing a Song	25
Adjusting the Pitch of Audio CDs	25

Chapter 7 Repeat Playback

All Song, Single Song, Random Repeat	26
Segment A~B Repeat	27
Segment A~ (Return & Pause) Repeat	28
Starting Playback from a Specified Point (Search)	29

Chapter 8 Useful Functions for Learning Piano

Canceling the Left-Hand or Right-Hand Piano Part	30
Operating the Pedals Yourself	31
Using the Built-in Metronome	31
Playback with the Metronome	32
Using an Optional Foot Switch or Foot Controller	33

Chapter 9 Advanced Ensemble Song Playback

Tuning the Tone Generator (TG Master Tune)	34
Playing the Piano Parts on the Tone Generator	35
Displaying Ensemble Voices	36
Selecting Tracks for the Piano Parts	37

Chapter 10 Using the PianoSmart Feature

PianoSmart	38
PianoSmart Playback	38

Temporarily Suspending Playback	39
Stopping Playback	40
PianoSmart Manual Adjustment.....	40
To Delete the SPS Adjustment Value of a Song	41

Chapter 11 Using the AUX Connectors	
AUX OUT	43
AUX IN	44

Advanced Operations

Chapter 12 Storing and Managing Songs on Disks

Memory Disks	45
Specifying a Disk	45
Copying Songs.....	46
Copying the Entire Contents of a Disk (Disk Copy).....	48
Deleting Songs	49
Rearranging the Song Order (Song Sort)	50
Changing the Counter Display	51

Chapter 13 Chain Play — Playing Back Memory Disks in a Group

Registering a Group.....	53
Chain-Playing Disks in a Group	54
Canceling Group Functions	55

Chapter 14 Timer Play

Creating a Program	57
Timer Play Examples	59

Chapter 15 Disk and Song File Utilities

Song Format	61
Disk Types	61
Formatting Disks	62
Converting Song Format	63
Converting Disk Type	64

Chapter 16 The Disklavier & MIDI

Start/Stop Control of a MIDI Instrument with the Disklavier	66
Receiving Data from a MIDI Sequencer.....	67
Controlling the Disklavier in Real Time	69
Sending Song Data to a MIDI Instrument	70
Playing Back Import Files.....	71

Chapter 17 The Disklavier & Personal Computers

Connecting to a Personal Computer	73
Setting the HOST SELECT Switch.....	74
Playing Back Songs Created in a Computer ..	74
Playing Back More than 16 Channels	75

Chapter 18 Resetting Your Disklavier

Resetting Your Disklavier	76
---------------------------------	----

Chapter 19 Troubleshooting

Chapter 20 Display Error

Messages	81
----------------	----

Chapter 21 Glossary.....

Chapter 22 Internal XG Tone Generator Voice & Drum Kit List

Internal XG Tone Generator Basic Voice List.....	85
Internal XG Tone Generator Drum Kit List	86

Chapter 23 Specifications

MIDI Implementation Chart

.....	Inside back cover
-------	-------------------

Chapter 1

Setting Up Your Disklavier

This chapter provides information on the supplied items and how to set up your Disklavier.

Items Supplied with the Disklavier


Check that the following items are supplied with your Disklavier:

- 1 Remote Control
- 2 Batteries for the Remote Control
- 1 Disklavier Sample PianoSoft Disks
- 1 Operation Manual
- 1 Control Unit Suspension Bracket
- 1 Sample PianoSoft-PlusAudio™ CD software

Connecting the Control Unit

Make sure that the control cable extending from the piano is firmly connected to the TO CONTROL CABLE FOR PIANO connector on the rear panel of the Control Unit.

Also make sure that the CD control cable extending from the piano is connected to the CD CONTROL connector on the rear panel of the Control Unit.

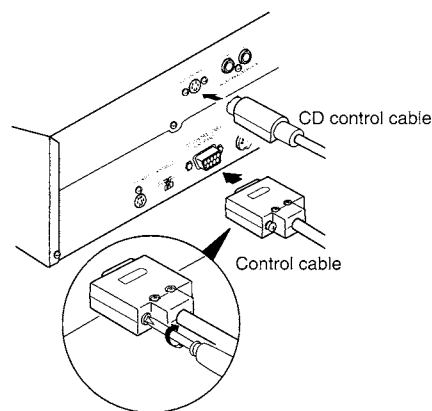

Note: The control cable should be connected to the Control Unit when the Disklavier is installed. If, however, it is not, carefully connect the control cable to the Control Unit's TO CONTROL CABLE FOR PIANO connector on the rear panel. See step (4) in "Mounting the Control Unit to the Grand Piano" at the beginning of this manual.

It is recommended to mount the Control Unit to the underside of the treble side key bed. See "Mounting the Control Unit to the Grand Piano" at the beginning of this manual.

Connecting the Power Cable

Connect the Disklavier's power cable to an AC wall outlet.

Important: Make sure that the voltage of the AC wall outlet matches that marked on the Disklavier's Serial No. plate.


Using the Remote Control

The Disklavier is equipped with a remote control which allows convenient control from almost anywhere in the room. This chapter provides notes on handling the remote control.

Installing Batteries in the Remote Control

Before the remote control can be used, the two batteries supplied with the Disklavier must be installed.

Remove the battery cover from the rear of the remote control, install the batteries, and then replace the cover.

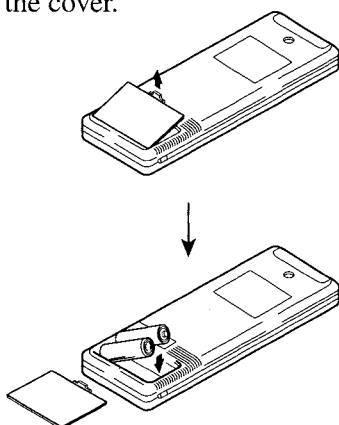

A diagram inside the battery compartment shows which way the batteries should be installed. Make sure you insert them correctly.

Battery Replacement

When the remote control fails to work from a distance, replace the batteries.


- Replacement batteries should be UM-3, AA, R6P, or LR6 type.
- Always replace both batteries.
- If the remote control is not to be used for a prolonged period of time, remove the batteries to prevent possible damage by battery leakage.

Important: Be sure to read the section on Handling Batteries on page ii of "Important" for details on the safe handling of dry batteries.

Using the Remote Control

To use the remote control, point it at the remote control sensor on the Control Unit.

Approx. 5 m (16 ft.)

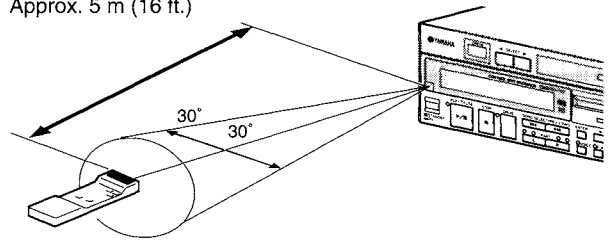

Connecting Other Equipment

- To connect audio instruments to the AUX connectors, see Chapter 11 "Using the AUX Connectors."
- To connect MIDI equipment, tone generator or a synthesizer to the Disklavier, see Chapter 16 "The Disklavier & MIDI."
- To connect a personal computer to the Disklavier, see Chapter 17 "The Disklavier & Personal Computers."

Basic Disklavier Terminology

The following is a list of several basic Disklavier words that you may need to know before proceeding with operational procedures in this manual. For additional Disklavier terminology, see the glossary provided in Chapter 21.

Disk

“Disk” is used as a generic term to refer to both floppy disks and internal Memory Disks.

Ensemble Song

An Ensemble song contains the same left and right-hand parts as an L/R song, and extra tracks that are played by the internal XG tone generator. Accompanying tracks can include acoustic bass, drums, strings, vibes, etc.

Floppy Disk

The magnetic storage medium that the Disklavier uses for song playback. The Disklavier uses 3.5 inch 2DD and 2HD floppy disks.

PianoSoft and PianoSoft-Plus are song disks specially for use with the Disklavier Series.

L/R Song

In a L/R song, the left-hand piano part is stored on track 1 (L) and the right-hand piano part is stored on track 2 (R). During playback you can cancel either part, and practice that part yourself.

Memory Disk

The Disklavier has a total of 16 Mbytes of internal flash memory named Memory Disks that allow you to store song data without a floppy disk.

MIDI

An acronym for Musical Instrument Digital Interface. MIDI allows electronic musical instruments to communicate with each other.

PianoSoft™

The PianoSoft Disk Collection is a library of prerecorded song disks made by Yamaha for use with the Disklavier Series. Many titles are available, and among the many musical styles included are classical, jazz, and popular. The disk includes songs for listening enjoyment, piano study disks for the piano student, and accompaniment disks for vocal and instrumental practice.

PianoSoft is sometimes used as a generic term for PianoSoft and PianoSoft-Plus.

PianoSoft-Plus

PianoSoft-Plus disks contain prerecorded Ensemble songs featuring instrumental accompaniment that can be played back on the Disklavier.

See your Disklavier dealer for a PianoSoft catalog.

PianoSoft-Plus audio

CD software made by Yamaha containing audio and MIDI signals for playing back on the Disklavier.

SMART PianoSoft™

Software made by Yamaha containing MIDI signals for playing back along with standard audio CDs.

Song

A “song” usually means a short piece of music with lyrics. However, in the Disklavier manuals the term “song” is used to refer to any piece of music.

Tone Generator

An electronic device that generates instrument voices. The Disklavier has an internal XG tone generator that can produce nearly 700 instrumental and percussion voices.

Voice

The sounds produced by a tone generator expressing various instruments.

XG


Yamaha XG is an extension of the GM (General MIDI) format. With greater polyphony, more voice, and effects, it improves song compatibility between MIDI devices. When a song in the Yamaha XG format is played on another XG compatible tone generator or synthesizer, it will play and sound as the original composer/creator intended.

Chapter 2

Names of Parts and Their Functions

This chapter describes the functions of the buttons and other parts of the Disklavier.

Control Unit — Front Panel

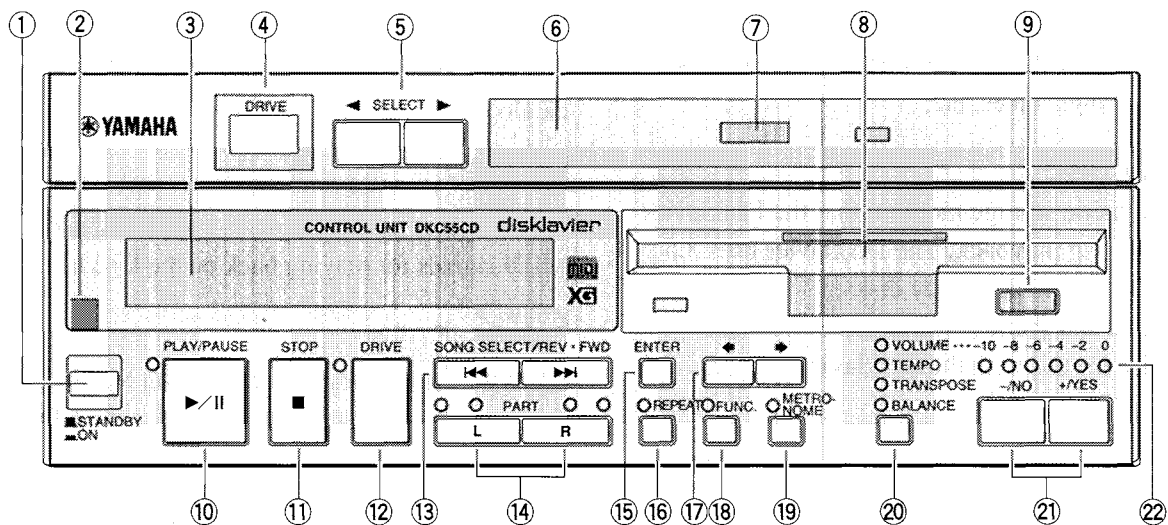

① [STANDBY / ON] button

Turns on the Disklavier or puts it in Standby mode. Press once to turn it on, and once again to put it in Standby mode.

Note: In Standby mode, the Control Unit is in effect turned off. However, electrically it is in a state in which a very small quantity of power is being consumed, as the MAINS switch is still on and the Disklavier is still connected to the AC power receptacle.

② Remote control sensor

When using the remote control, point it toward this sensor.

③ Display (LCD)

Shows various information.

④ DRIVE indicator

Indicates the selected disk.

⑤ [SELECT] buttons

Used to select a disk. Toggles the floppy disk, CD, and Memory Disks (0 ~ 9 and A ~ F).

⑥ CD drive

Insert a PianoSoft·PlusAudio or other audio or audio/MIDI CD here.

⑦ CD eject button

Used to open the CD drive.

⑧ Floppy disk drive

Insert a floppy disk here.

⑨ Floppy disk eject button

Used to eject the disk from the floppy disk drive.

⑩ [PLAY/PAUSE] button

Used to start and pause playback.

⑪ [STOP] button

Used to stop playback.

⑫ **[DRIVE] button**

Used to select a disk. Toggles the floppy disk, CD and Memory Disks (0 ~ 9 and A ~ F).

⑬ **[SONG SELECT/REV·FWD] buttons**

In Stop mode: Used to select songs.

In Play mode: Used to fast preview and review.

In Pause mode: Used to fast forward and reverse.

⑭ **PART [L] [R] buttons**

For L/R and Ensemble songs, these buttons allow you to choose which part to play back or record: L (left-hand) part, R (right-hand) part, or both.

The indicators light in green during playback.

Press both buttons together to turn pedal playback on or off so that you can play the pedals yourself.

⑮ **[ENTER] button**

Used to select and execute functions.

⑯ **[REPEAT] button**

Used to select one of the Repeat functions: ALL, RPT or RND.

⑰ **[◀] [▶] cursor buttons**

Used to move the cursor in the display.

⑱ **[FUNC.] button**

Used to access various Disklavier utility functions.

⑲ **[METRONOME] button**

Used to access the metronome.

⑳ **Selector button**

Used to select the feature you want to adjust from among Volume, Tempo, Tranpose, and Balance.

㉑ **[-/NO] [+/YES] buttons**


Used to select options and parameters and to adjust the volume.

㉒ **LED volume level indicators**

Indicates the playback volume level.

Also functions as a visual metronome.

Control Unit — Rear Panel

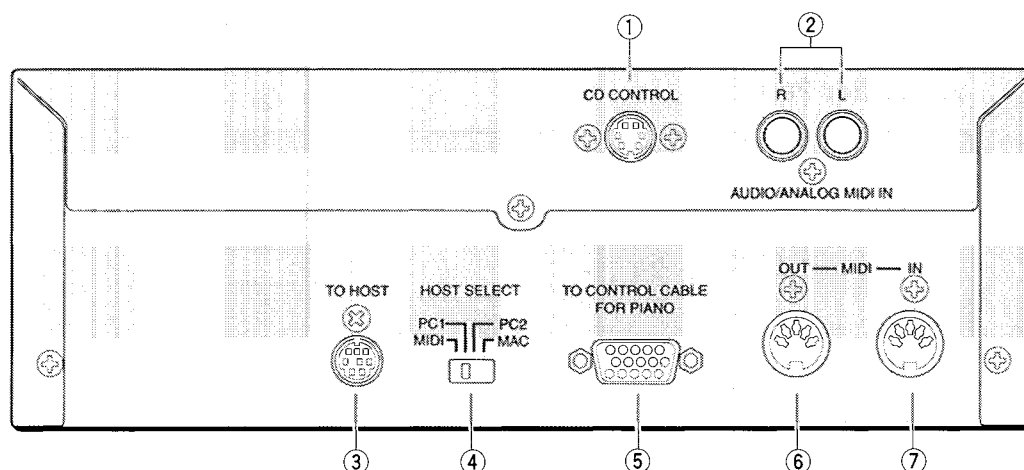

① **CD CONTROL**

Used to connect the line from the piano.

② **AUDIO/ANALOG MIDI IN**

Used to connect audio equipment such as an external CD changer.

③ **TO HOST (serial port)**

Used to connect the Disklavier with a personal computer.

④ **HOST SELECT**

Used to select the host computer connected to the TO HOST connector.

⑤ **TO CONTROL CABLE FOR PIANO**

Used to connect the control cable from the piano.


⑥ **MIDI OUT**

Used to connect external MIDI equipment for outputting MIDI data.


⑦ **MIDI IN**

Used to connect external MIDI equipment for inputting MIDI data.

Amplifier, Speakers & Foot Controller

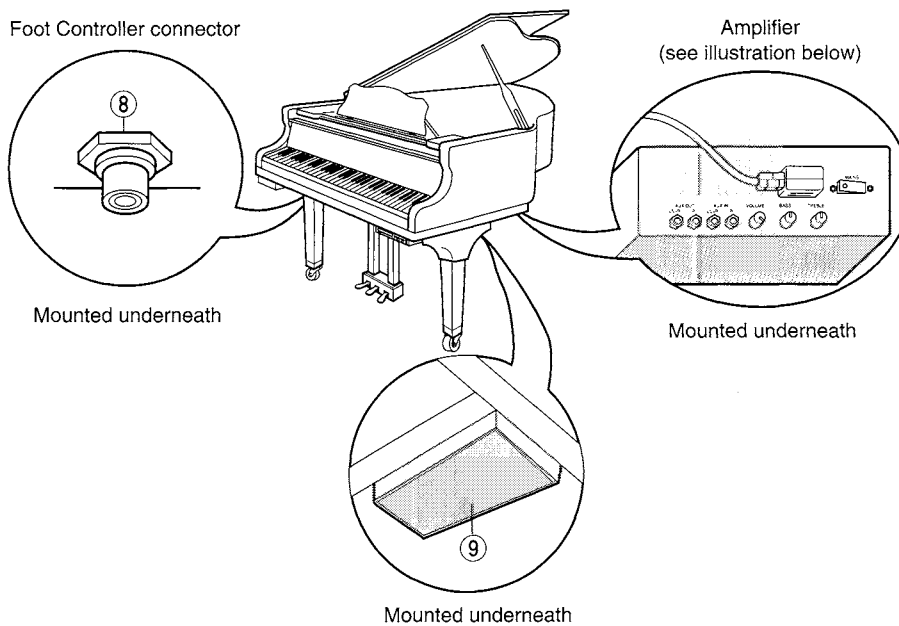

Amplifier Panel

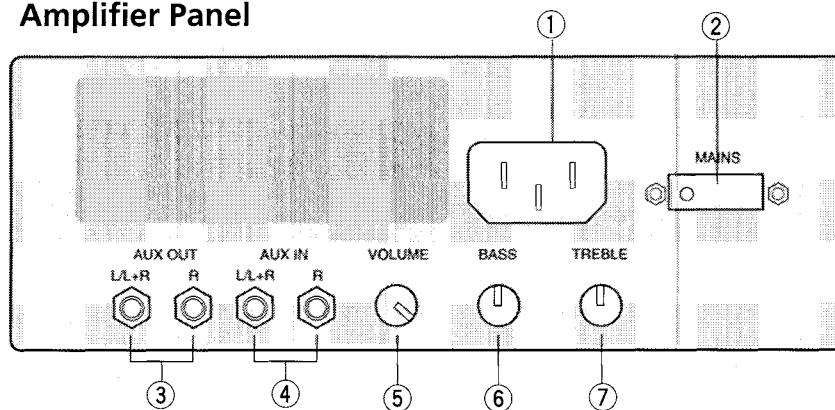

① **AC LINE INLET**

Connect the AC power cable here.

② **MAINS (ON/OFF) switch**

Press to switch on/off the Disklavier.

③ **AUX OUT L/L+R, R**

Used to connect external audio equipment.

④ **AUX IN L/L+R, R**

Used to connect external audio equipment.

⑤ **VOLUME knob**

Used to adjust the volume of the on-board speakers and the sound output from the AUX OUT connectors.

⑥ **BASS knob**

Used to adjust the bass sound of the built-in speakers.

⑦ **TREBLE knob**

Used to adjust the treble sound of the built-in speakers.


⑧ **Foot Controller connector**

Connect the optional YAMAHA FC-4, FC-5 or FC-7 foot controller here.

⑨ **Amplified speakers**

Amplified speakers are mounted to the underside of the piano.

Remote Control

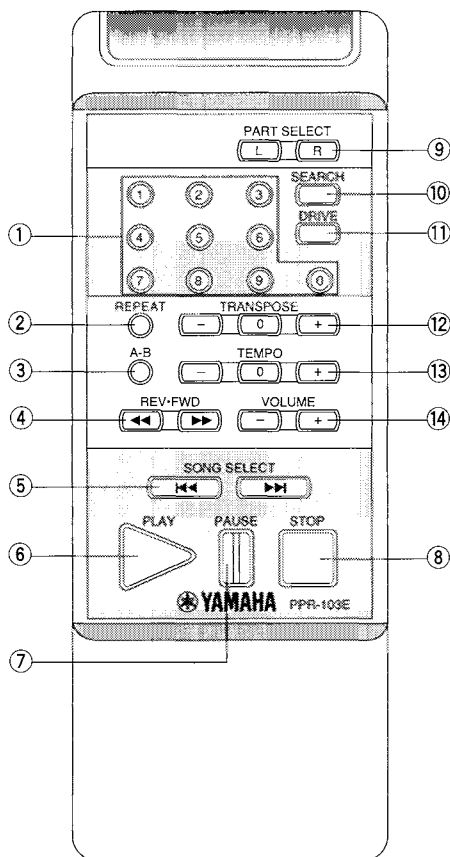

① **Number keypad***

Used for direct song selection and to enter a start time for song playback.

② **[REPEAT] button**

Used to select one of the Repeat functions: ALL, RPT, or RND.

③ **[A-B] button***

Used to enter A and B points for Segments A~B and A~ Repeat modes.

④ **[REV-FWD] buttons**

In Play mode: Used to fast preview and review.
In Pause mode: Used to fast forward and reverse.

⑤ **[SONG SELECT] buttons**

Used to select songs.

⑥ **[PLAY] button**

Used to start playback.

⑦ **[PAUSE] button**

Used to pause playback.

⑧ **[STOP] button**

Used to stop playback.

⑨ **[PART SELECT] buttons**

For L/R and Ensemble songs, these buttons are used to choose which part will play: left-hand part, right-hand part, or both parts.

⑩ **[SEARCH] button**

Used to access the Search function.

⑪ **[DRIVE] button**

Used to select a disk. Toggles the floppy disk, CD and Memory Disks (0 ~ 9 and A ~ F).

⑫ **[TRANPOSE] buttons**

Used to transpose song playback.

[-] transposes down, [+] transposes up, and [0] resets the transposition value to 00.

⑬ **[TEMPO] buttons**

Used to change the playback tempo.

[-] decreases the tempo, [+] increases the tempo, and [0] resets the tempo to 00.

⑭ **[VOLUME] buttons**

Used to adjust the volume.

[-] lowers the volume, [+] raises the volume.

* *Available on the remote control, but not on the Control Unit.*

Chapter 3

Floppy Disks and Memory Disks

The Disklavier can play back songs stored on floppy disks such as PianoSoft and PianoSoft-Plus song disks or on its internal Memory Disks.

Floppy Disks

Besides PianoSoft and PianoSoft-Plus song disks, the Disklavier can play back songs stored on 3.5-inch MS-DOS 720 Kbyte format 2DD floppy disks and MS-DOS 1.44 Mbyte format 2HD floppy disks.

Handling Floppy Disks


Be careful of the following when handling floppy disks.

- Do not touch the surface of a disk.
- Do not store or place disks near a television, radio, loudspeaker, or any other device that generates a magnetic field.
- Do not expose disks to extreme temperature or humidity. The working temperature range for disks is between 4°C and 52°C (40°F to 125°F).
- Do not use disks in a dusty, dirty or smoky environment.
- Remove the disk before you turn off the Disklavier.

Accidental Erasure Protection


Floppy disks have an erasure protection tab which protects valuable song data against accidental erasure and disk formatting. The protection tab is located on the reverse side of the disk in the bottom right-hand corner.

Protected

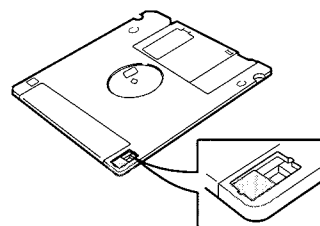

When the tab window is open, data is protected.

Unprotected

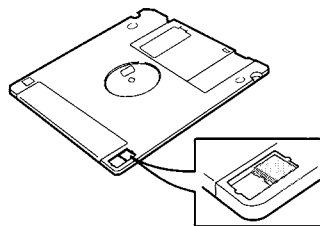


When the tab window is closed, data is not protected.

Inserting & Ejecting Floppy Disks


Inserting

Carefully insert the disk into the disk drive shutter first, label side up, as shown. Push it until it clicks into place and the Eject button pops out.

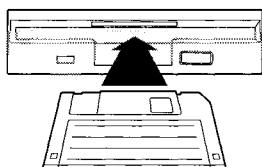

Ejecting

To eject a disk, press the Eject button.

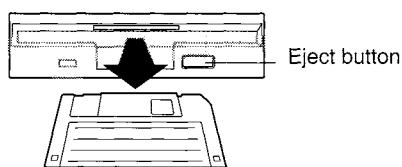

The disk will pop out. Remove the disk and return it to its case.

Note: Do not eject a disk during playback, as doing so could seriously damage the disk drive and the floppy disk.

Memory Disks

The Disklavier has 16 Mbytes (1 Mbyte \times 16 Memory Disks) of internal flash memory for storing song data. They are numbered 0 to 9 and A to F.

Memory Disks are ideal for storing many songs, especially when you want to program your Disklavier to automatically play back many songs with the Chain Play or Timer Play features. (See Chapter 13 “Chain Play — Playing Back Memory Disks in a Group” and Chapter 14 “Timer Play” for details.)

- Chapter 12 “Storing and Managing Songs on Disks” provides more detailed information on using Memory Disks.


Chapter 4

Turning On/Off Your Disklavier


This chapter describes how to turn on and off your Disklavier and how to set the internal calendar. Turning your Disklavier on/off is a basic and very important procedure. Always be sure to follow the steps described below when you turn on or off your Disklavier.

Turning On the Disklavier

- 1 Set the MAINS switch to ON.

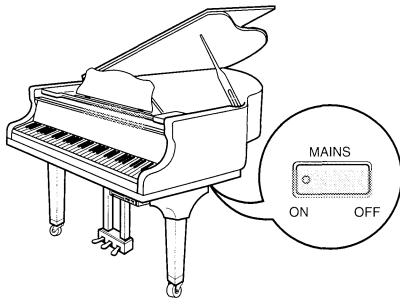

- 2 Press [STANDBY / ON] on the front panel of the Control Unit.

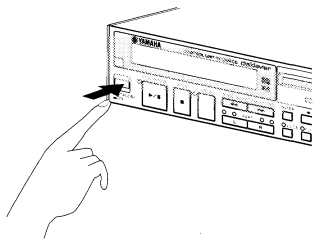

The following message appears on the display.

```
00 ***** YAMAHA *****  
00 ** DISKLAVER Playback **
```

Your Disklavier is now ready for use.

Turning Off the Disklavier

- 1 Press [STANDBY / ON] on the Control Unit.
- 2 Set the MAINS switch to OFF.

Setting the MAINS switch to OFF is effectively the same as disconnecting the power cable from an AC wall outlet. If the Disklavier is used regularly, you only need to use the [STANDBY / ON] button on the Control Unit. If the Disklavier is not going to be used for a long period, set the MAINS switch to OFF.

When the Disklavier is turned off, wait at least 5 seconds before turning it on again.

Note: The MAINS switch only needs to be switched off when you are not going to use the Disklavier for a long period of time. For daily use, only the [STANDBY / ON] button on the Control Unit needs to be turned on and off.

Setting the Internal Calendar

The Disklavier has an internal calendar that can be set from 1/1/1985 00:00:00 to 12/31/2084 23:59:59. Set the calendar accurately so that the Disklavier displays the correct current time during Stop mode.

 
 
Setting the correct time is also important for engaging timer-controlled programs (see Chapter 14 “Timer Play” for details).

Time is displayed in 24-hour format.

- 1 Hold down [FUNC.] and press [STANDBY / ON].




The setup menu appears.



- 2 Press [➡] until the cursor is next to the Clock Adjust option, then press [ENTER].



 
A display similar to the following appears, showing the current date and time.



- 3 Press [ENTER].



 A display similar to the following appears, with the clock stopped and the hours display flashing.



↑
Flashes

- 4 Use [←] and [→] to select year, month, date, hours, minutes, and seconds, and use the [-/NO] and [+/YES] buttons to set a value.



Pressing both [-/NO] and [+/YES] simultaneously in each respective field sets the year to 1990, month and day to 1, and the hours, minutes, and seconds to 0.

- 5 Press [ENTER].



The date and time are stored in the internal calendar, and the display returns to the current time display.

Calendar Memory

The date and time that you set are saved in the calendar memory when you turn off the Control Unit. The calendar memory can maintain the correct date and time for about a month. If you do not use the Control Unit for over a month, you must reset the calendar following the above procedure.


Note: The internal calendar is equipped with a storage battery (capacitor) that does not need to be replaced or recharged. However, the Control Unit must be turned on for at least 10 minutes a month in order to maintain power.

Chapter 5 Display (LCD)

Various information is shown in the display (LCD: Liquid Crystal Display) on the Control Unit. This chapter describes some of the frequently displayed indications.

Song Number


The number of the selected song is displayed in two large digits.

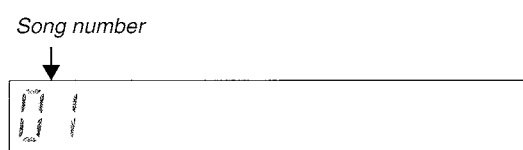

Selected Disk

Letters and numbers indicating the currently selected disk are displayed. "Fd" is displayed for the floppy disk, and "0" to "9" and "A" to "F" for the 16 Memory Disks.

("Fd" appears only when a floppy disk is inserted in the floppy disk drive.)

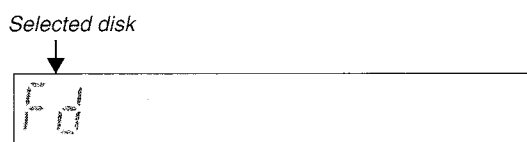

Disk Title


When you select a disk for playback, the title of the selected disk scrolls across the display.

Song Title

The title of a song appears during song playback.


Time Display

When the Disklavier is not playing, the current time is displayed in hours and minutes. The separator colon blinks each second.

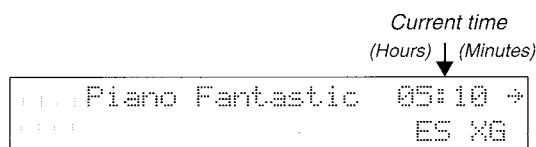


Counter Display

Playing time is indicated in one of two formats: **Minutes and seconds**, as shown below.

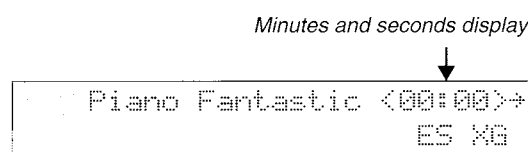

Or, **Measures and beats**, as shown below.

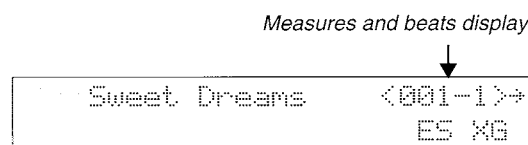

When the time display format is measures and beats, the tempo of the song is also shown on the display in beats per minute (bpm).


All PianoSoft disks use the minutes and seconds format.

- Songs recorded with the measures and beats format can be converted to the minutes and seconds format. See "Changing the Counter Display" on page 51.


Pedal Data

Songs supplied on PianoSoft disks may contain one of two types of pedal data: on/off pedal data or continuous pedal data (half pedal).

On/off pedal data turns the pedals on and off. It is indicated by angle brackets (< >) around the time display as shown below.

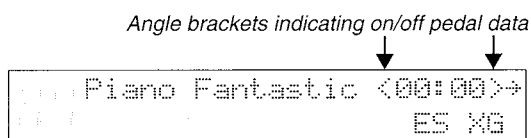


Continuous pedal data (half pedal) can actually position a pedal anywhere within its normal range (from fully up to fully down). It is indicated by parentheses around the time display as shown below.

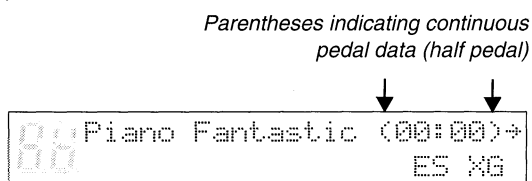

Song Format

There are a couple of general formats in which song data is stored on disks. The song format of the selected song is indicated on the display as ES, S0 or S1.


- See Chapter 15 "Disk and Song File Utilities" for details.

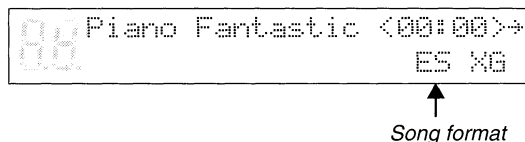

Symbol	Song format
ES	E-SEQ format
S0	SMF format 0
S1	SMF format 1


Tone Generator

The tone generator mode used by the selected song is indicated on the display: XG or GM. If the song uses the Disklavier's internal XG tone generator, the display will indicate XG. This display is replaced by the tempo display when tempo is being adjusted.

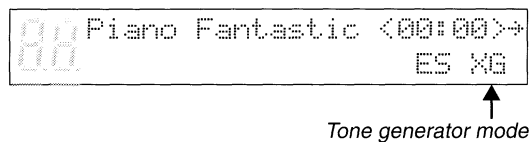


Piano Data Velocity Meters

The velocity of the piano part notes as they are played back is indicated on the display, as shown below.

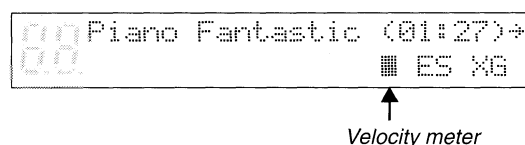


For L/R and Ensemble songs, two meters will appear, one for the left-hand part and one for the right-hand part, as shown below.

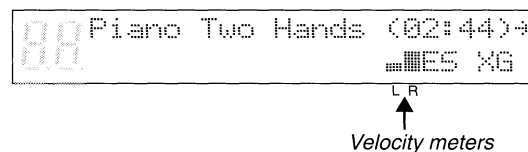


Previous/Next Display Indications

The arrows that appear on the far right of a display indicate that there is a relevant display before or after the current one. You can go to the previous or next display using the [◀] [▶] buttons.

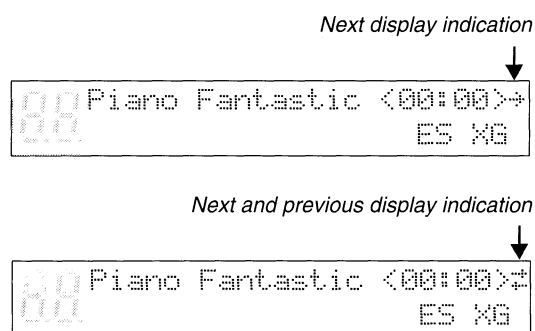

Cursor

The cursor indicates the currently selected parameter.

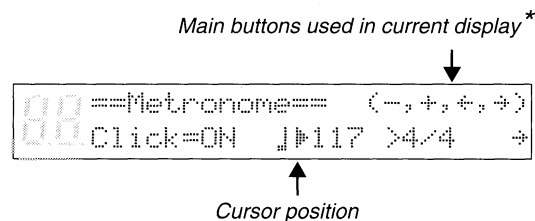

- * In this case, [-/NO] [+ /YES] [◀] and [▶] are used to set the parameters.

Chapter 6

Basic Playback

The Disklavier can play back floppy disks such as PianoSoft and PianoSoft-Plus disks, songs you store in the Memory Disks, and PianoSoft-PlusAudio CDs as well as audio/MIDI CDs of other companies and standard audio CDs.


- See Chapter 12 “Storing and Managing Songs on Disks” for information on how to store songs in the Memory Disks.

If you are using the Disklavier for the first time, you can use the enclosed sample floppy disk and PianoSoft-PlusAudio CD, or Memory Disk 0 which contains a short sample song.

Note: A sample PianoSoft-PlusAudio CD is supplied with your Disklavier. However, other PianoSoft-PlusAudio series CDs may not be available in some countries.

Playing Back a Floppy Disk or a Memory Disk

When you play back a song on floppy disks or Memory Disks, the Disklavier plays the piano parts, actually moving the keys up and down as if they were being played by a performer. For songs containing Ensemble parts in addition to piano parts, those parts are played by the internal XG tone generator and output from the built-in speakers.

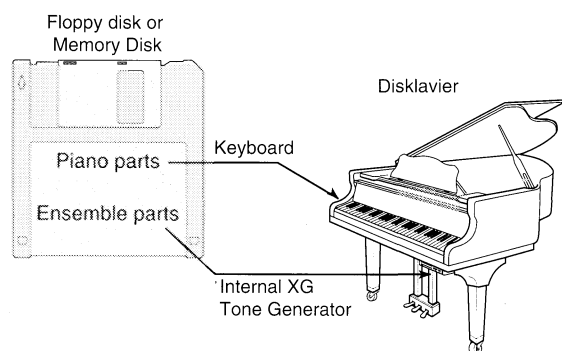


Playing Back a CD

Yamaha PianoSoft-PlusAudio™ and Other Audio/MIDI CDs

PianoSoft-PlusAudio (and audio/MIDI CDs of other companies) contain data recorded in two channels: Analog MIDI and audio.

When you play back a PianoSoft-PlusAudio, the Disklavier plays the piano parts which are recorded on the MIDI channel, and all other instrumental and vocal sounds recorded on the audio channel are output from the built-in speakers. The Disklavier will faithfully reproduce the audio sounds of the CD as a stereo system would, but with the additional feature of a live piano performance.

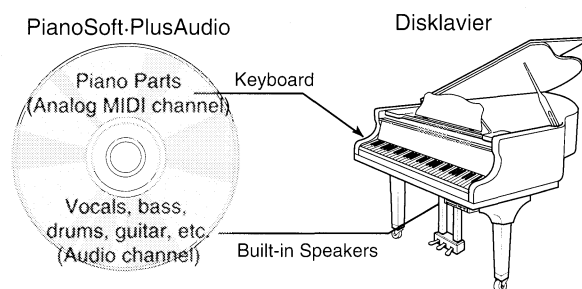

Standard Audio CDs


Standard CDs contain two audio channels (R and L). Both are output via the built-in speakers as a CD stereo system would.

Note: You can also connect an external CD changer to the AUDIO/ANALOG MIDI IN connector on the control unit (rear panel) and play back multiple audio CDs on the Disklavier.

Specifying a Disk

When you want to play back songs, you need to first specify which disk you want to play back, as the Disklavier has a total of 17 disks (1 floppy disk and 16 Memory Disks).

Press the [SELECT] or [DRIVE] buttons and specify a disk for playback.

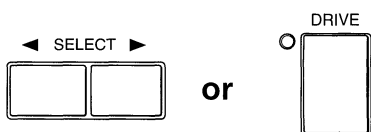

Each press of the [SELECT] button toggles the floppy disk, CD, and Memory Disks (0 to 9 and A to F) in the DRIVE indicator.

Note: When you insert a floppy disk or CD into their respective drives, the letters “Fd” and “Cd” automatically appear on the left side of the display.

Note: “Fd” and “Cd” appear only when a floppy disk or CD is inserted in their respective drives.

For floppy disks, the title of the disk scrolls across the display, then the number and title of the first song appear.

Pressing [STOP] will stop the disk title scrolling and display the number and title of the first song.

```
00 Aria Selections
00 [Floppy]
```



```
00 Piano Fantastic <00:00>+
00 ES XG
```

For CDs, the following displays appear.

```
00 [CD]
```



```
01 CD Song01 <00:00>+
CD GM
```

For Memory Disks, the disk number or letter also flashes in the bottom row of the display.

Note: “x” indicates Memory Disks that are unformatted or contain no songs.

```
00 Piano Favorites
00 [----] 12x45x890AbCdEF
```

 
↑
Flashes

Note: The disk drive may occasionally produce a sound when the disk begins to spin. This is the normal sound of the disk drive starting to read or write to the disk; it does not indicate that there is anything wrong with the disk or disk drive.

Starting Playback

1 Specify a disk.

2 Press [PLAY/PAUSE].




The PLAY/PAUSE indicator lights and song No.1 starts playing. The Disklavier plays the piano parts, actually moving the keys up and down, and the internal XG tone generator plays the instrumental parts. The time display starts counting up and the velocity meters show the velocity of the piano part notes currently being played, as shown.

```
00 Piano Fantastic <00:34>+
00          ■■ES XG
```


Pausing Playback

 1 Press [PLAY/PAUSE].




Playback stops and the PLAY/PAUSE indicator flashes.

 2 Press [PLAY/PAUSE] again to continue playback.



Stopping Playback

 Press [STOP].




Playback stops and the song returns to the beginning.

Pressing [STOP] while in Pause mode cancels Pause mode.

Selecting Songs with the Control Unit

Press [SONG SELECT ►►] to select the next song.

 Press [SONG SELECT ◄◄] to select the previous song.



To select other songs on the disk, press and hold down [SONG SELECT ►►] or [SONG SELECT ◄◄] until the number of the desired song appears.

If the current song is the first song on the disk, pressing [SONG SELECT ◄◄] causes the disk title to scroll across the display. To stop the title scrolling, press [STOP].

Selecting Songs with the Remote Control

You can also select songs at any time using the [SONG SELECT] buttons or number pad on the remote control.

Using the [SONG SELECT] Buttons

Press [SONG SELECT ◄◄] to select the previous song.


Press [SONG SELECT ►►] to select the next song.



Remote Control

Using the Number Pad


1 To select a song from 1 to 9, press the corresponding number button.

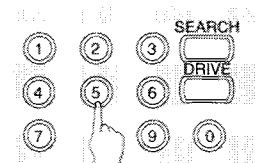


Remote Control

To select song number 5 for example, simply press [5].

- 2** To select a song numbered 10 and above, enter the first digit, then **within 2 seconds**, enter the second digit.

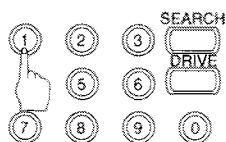

Remote Control

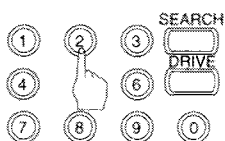

Remote Control

To select song number 12 for example, press [1], then [2].

 
If a song number higher than that of the last song on the disk is entered, the last song on the disk is selected.

Fast Preview & Review

During playback, Fast Preview and Review allow you to quickly search through a song **while listening to the sound**. This is useful for locating a desired position within a song.


Note: No sound is produced by the piano when fast-previewing or reviewing PianoSoft-PlusAudio CDs.

- 1** To preview, press [SONG SELECT ►►].



Remote Control

 To review, press [SONG SELECT ◀◀].



Remote Control

- 2** Press [PLAY/PAUSE] to continue normal playback. Press [STOP] to engage Pause mode.


If a song is reviewed all the way to the beginning, Pause mode is engaged. Pressing [PLAY/PAUSE] starts playback from the beginning.

If a song is previewed all the way to the end, Pause mode is engaged. Pressing [PLAY/PAUSE] starts playback of the next song.


Fast Forward & Reverse

In Pause mode, fast forward and reverse allow you to quickly locate a desired position in a song. Fast Forward and Reverse search faster than preview and review and **the piano does not play**. Reverse can also be used to return a song to the beginning, ready to play again.

- 1 To fast forward a song that is currently playing, press [PLAY/PAUSE] to engage Pause mode, then press [SONG SELECT ▶▶].**

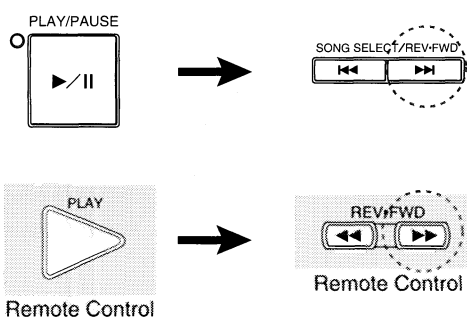

To reverse a song that is currently playing, press [PLAY/PAUSE] to engage Pause mode, then press [SONG SELECT ◀◀].

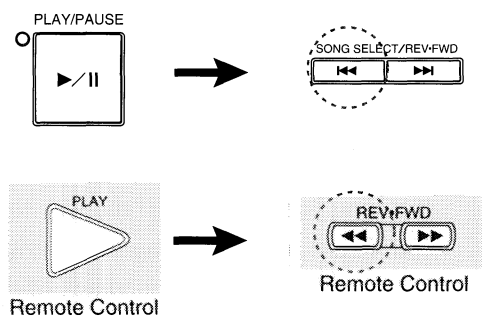

The PLAY/PAUSE indicator flashes quickly and the time display shows the current position.

- 2 Press [PLAY/PAUSE] to continue normal playback. Press [STOP] to engage Pause mode.**

If you fast forward a song all the way to the end, Pause mode is engaged. Pressing [PLAY/PAUSE] starts playback of the next song.

If you reverse a song all the way to the beginning, Pause mode is engaged. Pressing [PLAY/PAUSE] starts playback from the beginning.

Adjusting the Volume

You can adjust volume with the Control Unit or with the remote control as described below. Since all piano songs are recorded at the maximum volume level of 0, volume can be decreased down to -10, the softest volume at which the piano can play.


For Ensemble songs, the volume of the piano and internal XG tone generator are adjusted simultaneously, so it is a good idea to first balance the volume of the piano and XG tone generator.

- See “Balancing the Ensemble Volume (TG Master Balance)” on page 22.

For songs on PianoSoft·PlusAudio, you should first balance the volume of the MIDI piano and Audio parts.

- See “Balancing the CD Volume (CD Master Balance)” on page 23.

The LED volume level indicators show volume levels in the manner shown below. For example, when two consecutive indicators are lit, the volume level is between these two levels.

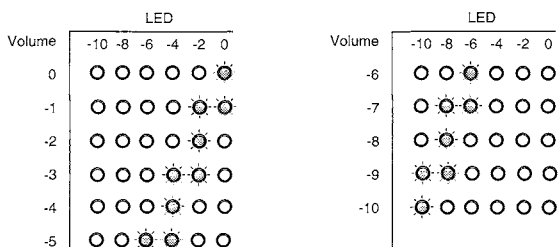


Note: Make sure the VOLUME knob on the Amplifier is set to an appropriately audible level. If the volume knob on the Amplifier is turned fully counterclockwise, no sound may be produced even when you adjust the volume on the Control Unit.

Once you set the volume of the Amplifier, you do not need to adjust it frequently.


The volume level setting is saved when another song is selected, another disk inserted or selected, or when the Disklavier is turned off.

Note: This setting does not affect manual playing.

- a** On the Control Unit, press the Selector until the VOLUME indicator lights. Then press [-/NO] to decrease or [+ /YES] to increase the volume.

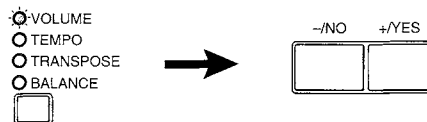

 - b** On the remote control, use the [VOLUME] buttons to adjust the volume.



[-] decreases the volume, and [+] increases the volume.


Adjusting the Tone

You can also adjust the tone using the BASS and TREBLE knobs on the Amplifier, if necessary.

BASS knob: Turning it clockwise increases and counterclockwise decreases the bass sound.

TREBLE knob: Turning it clockwise increases and counterclockwise decreases the treble sound.

Turn the knobs until the desired tone is attained.

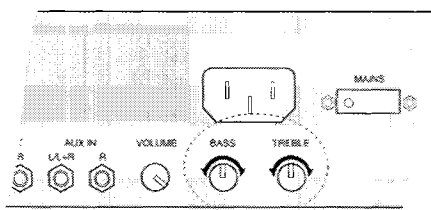

Balancing the Ensemble Volume (TG Master Balance)


When playing back Ensemble songs, it is useful to be able to balance the volume levels of the piano and Ensemble voices. In other words, the volume of the XG tone generator should not be too loud or too quiet compared to the piano played by the Disklavier.

Once you adjust the volume using the Tone Generator Master Balance function, you can use the [VOLUME] buttons on the remote control to conveniently increase or decrease the overall volume in a normal fashion.


These balance settings are stored in the Control Unit, and are saved even when the Disklavier is turned off.

1 Play back an Ensemble song.


2 Press the Selector until the **BALANCE** indicator lights.

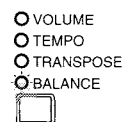

The following display appears.

 

 3 Use the [-/NO] and [+ /YES] buttons to adjust the volume of the internal XG tone generator.



TG Master balance can adjust the volume from 0 to 127 and OFF. (0: mutes the sound of the internal XG tone generator; OFF: does not link with the internal XG tone generator.) This setting is shown in the display on the right of the bar graph.

Adjust the level so that the Ensemble voices played by the internal XG tone generator are balanced with the volume of the Disklavier piano.

4 Press the Selector until the VOLUME indicator lights.



The volume levels of the piano and Ensemble voices are now balanced. You can use the [VOLUME] buttons on the remote control to increase or decrease the overall volume.

Balancing the CD Volume (CD Master Balance)


Before playing back PianoSoft-PlusAudio and other audio/MIDI CDs, it is a good idea to first balance the volume levels of the MIDI piano and Audio parts.

Once you adjust the volume using the CD Master Balance function, you can use the [VOLUME] buttons on the remote control to conveniently increase or decrease the overall volume in a normal fashion.

These balance settings are stored in the Control Unit, and are saved when the Disklavier is turned off.

1 Play back a CD.


2 Press the Selector until the BALANCE indicator lights.

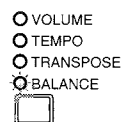


The TG Master Balance display appears.

3 Press the Selector once more.

 
The CD Master Balance display appears.



 4 Use the [-/NO] and [+/YES] buttons to adjust the volume of the Audio channel.



 5 Press the Selector until the **VOLUME** indicator lights.



Changing the Tempo



You can speed up or slow down the playback tempo. Slowing down the playback tempo can be useful when practicing a difficult piano part.

These tempo settings remain in effect until the disk is ejected or the Disklavier is turned off.

Note: You cannot change the playback tempo of songs on CDs.

To change the tempo, use one of the following options:

a On the Control Unit, press the Selector until the **TEMPO** indicator lights. Then, press [+ / YES] to increase or [- / NO] to decrease the tempo.

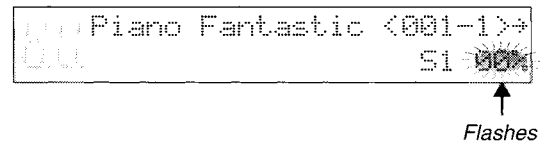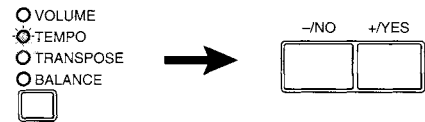

Playback tempo can be adjusted from -50% to +20% in 1% increments.

b On the remote control, use the [TEMPO] buttons to adjust the tempo.



Remote Control

[-] decreases the tempo, and [+] increases the tempo. [0] resets the tempo to 00%.

Once the tempo has been changed, the new tempo value is shown continuously on the display.

Transposing a Song


Playback can be transposed up or down by up to two octaves. This is useful, for example, when you want to sing along (karaoke) in a different key from the original music.

Note: This function cannot be used to transpose songs from external devices connected to the AUX IN connector.

Transposition changes remain in effect until the disk is ejected, or the Disklavier is turned off.

To transpose a song, use one of the following options:

- a** On the Control Unit, press the Selector until the TRANSPOSE indicator lights. Then, press [+ / YES] to increase or [- / NO] to decrease the transposition value.

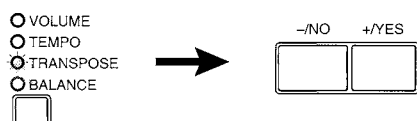

A display similar to the following appears.



Flashes

Playback can be transposed in half-step increments up or down two octaves (-24 to +24).

Note: Be careful when transposing songs on CDs, as increasing or decreasing the transposition value too much may have an adverse effect on the sound quality.

- b** On the remote control, use the [TRANSP] buttons.



Remote Control

[-] decreases the transposition value, and [+] increases the transposition value. [0] resets the transposition value to 00.

Once transposed, the transposition value is shown continuously on the display.

 
Adjusting the Pitch of Audio CDs

You can temporarily adjust the pitch of an audio CD for your listening pleasure.

Pitch adjustments are effective until the CD is ejected or the Disklavier is turned off.


Note: This function cannot be used to adjust the pitch of external audio CDs connected to the AUX IN connector.

- 1** Either insert an audio CD into the CD drive, or press [SELECT] to select the audio CD already inserted in the CD drive.




The title of the first song appears.

 
- 2** Press [←].



The following display appears.

 

 - 3** With the cursor next to the AudioPitch parameter, use the [-/NO] and [+ / YES] buttons to adjust the pitch.



The pitch can be adjusted from -050 to +050 in 1-cent increments (100 cents equals 1 semitone).

Chapter 7

Repeat Playback

This chapter describes various repeat playback functions that you may want to use for entertainment and study purposes. You can repeatedly play back songs or specific passages within a song.

All Song, Single Song, Random Repeat

There are three Repeat modes (ALL, RPT, RND) as described below.


The functions differ slightly when a Memory Disk group is selected and when it is not selected. (See Chapter 13 “Chain Play – Playing Back Memory Disks in a Group” for details on Memory Disk groups.)

	Group selected	Group not selected (OFF)
ALL	Repeatedly plays back all songs on all disks in the group that contain songs.	Repeats all songs on the selected disk only.
RPT	Repeats one song only.	
RND	Shuffles the order of disks in the group and plays back all songs on each disk once in random order, and then repeats the cycle. Playback switches to the next disk only after all songs on the previous disk have been played back.	Shuffles the order of songs on the selected disk and repeats the cycle.

- 1 Press [REPEAT] on the Control Unit or remote control to select a Repeat mode: ALL, RPT, or RND.




 Each press of the [REPEAT] button toggles the three Repeat modes and OFF. The REPEAT indicator lights and the selected mode flashes on the display.



↑
Flashes

- 2 Press [PLAY] to start Repeat playback.

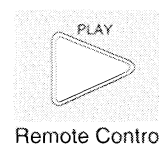

- 3 To cancel Repeat mode, press [REPEAT] again until “OFF” appears on the display.




Segment A~B Repeat

In Segment A~B Repeat, playback is repeated between two specified points in a song: point A and point B. This function is useful when practicing or memorizing a difficult section of a song.


Once specified, points A and B are saved until the disk is ejected or the Disklavier is turned off.

Note: This function can be set with the remote control only.


- 1** To set point A, play back a song and press [A-B] on the remote control at the desired point.

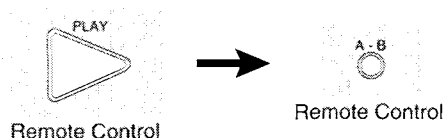

Point A is memorized and the "B" of "A-B" flashes on the display.

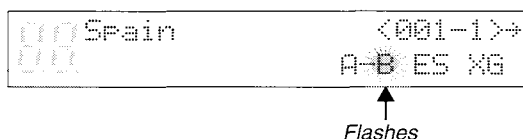

 - 2** To set point B, press [A-B] again.




Point B is memorized and the "B" of "A-B" stops flashing.




Playback stops, the song returns to point A, and Pause mode is engaged.

- 3** Press [PLAY] to play back the specified section.

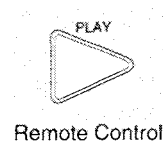

Playback starts from point A, continues up to point B and then stops. The song returns to point A and Pause mode is engaged.

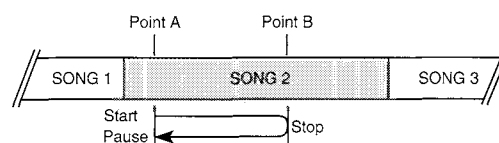

- 4** To cancel Segment A~B Repeat, press [REPEAT] so that "OFF" flashes on the display.



Note: The [REPEAT] button on the Control Unit can also be used for this step.

Segment A~B Repeat is turned off, but points A and B are still saved. Pressing [A-B] re-enables the mode.




Segment A~ (Return & Pause) Repeat


In Segment A~ Repeat, playback can be repeatedly restarted from a specified point in a song. This is similar to Segment A~B Repeat except that only point A is specified. Like Segment A~B Repeat, this function is useful for practicing.

Note: This function can be set with the remote control only.


- 1** To set point A, play back a song and press [A-B] on the remote control when the desired point is reached.

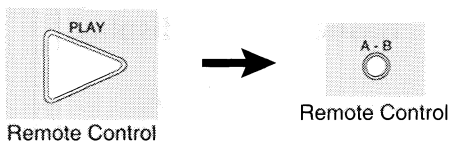


Point A is memorized and the "B" of "A-B" flashes on the display.

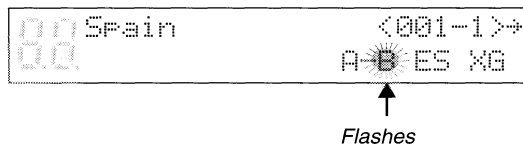

 
- 2** When you want to return to point A, press [SONG SELECT <<].




Alternatively, you may press [PAUSE] followed by [SONG SELECT <<] to return to point A.

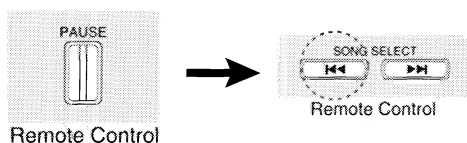



In this case, playback stops, the song returns to point A, and Pause mode is engaged.

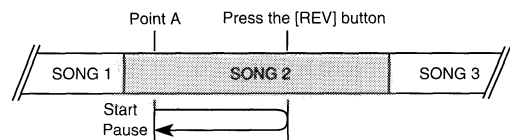

- 3** Press [PLAY] to start playback from point A.

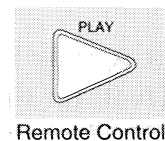

 - 4** To cancel Segment A~ Repeat, return to point A, and in Pause mode press [A-B] so that "OFF" flashes on the display.

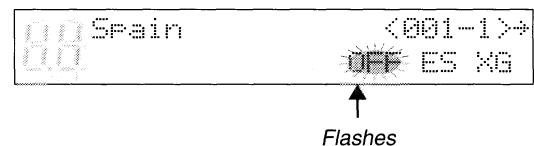

Note: Segment A~ Repeat cannot be canceled during playback.

Starting Playback from a Specified Point (Search)

Playback can be started from a specified point in a song. Instead of using fast forward or preview, you can use this function to go directly to a desired point within a song.

If the current song uses the minutes and seconds time format, you specify the point in minutes and seconds. If it uses the measures and beats time format, you specify the point in measures and beats.

Once a time value has been entered, it is saved until the disk is ejected or the Disklavier is turned off. If you want to search for the same point again, just press the search button again.

Note: This function can be set with the remote control only.

 
1 Press [SEARCH] on the remote control.



Remote Control


The time counter on the display flashes.

Flashes




2 Enter the time that you want to search for.

For example, to search for 2:56, first press [2], then [5], then [6].

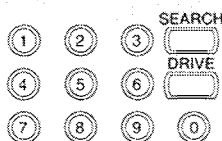

Remote Control

 

If the time value is less than 10, that is, between 00:01 and 09:59, remember to press [0] first to set the first digit to zero.

If you enter a value higher than the entire song time, the search goes to the end of the song.

3 Press [SEARCH] again to begin the search.



Remote Control

If the Disklavier was already playing when you pressed [SEARCH], playback will continue from the new point when the search is complete. If the Disklavier was not playing, Pause mode is engaged when the search is complete.

To search for a new point, repeat step 2.

Chapter 8

 
Useful Functions for Learning Piano

This chapter describes useful functions for piano study, such as practicing one hand while the Disklavier plays the other, operating the pedals, and using the built-in metronome.


Canceling the Left-Hand or Right-Hand Piano Part

In L/R and Ensemble songs, the left-hand piano part is stored on track 1 (L) and the right-hand piano part is stored on track 2 (R). Either part can be cancelled using this Part Select function. This is useful when you want to practice one part yourself with the Disklavier playing the other.

- 1 When an L/R song is selected, the PART indicators light as shown.




 - 2 To cancel the left-hand part, press [PART L].
To cancel the right-hand part, press the [PART R].



The corresponding PART indicator flashes to show you that the part has been canceled.

 - 3 To switch a part back on, press the corresponding [PART] button again.



- 4 A part can also be canceled by using the [PART SELECT] buttons on the remote control.



Remote Control

 
 
You can use this Part Select function in conjunction with the Pedal Cancel function described on the next page to practice playing one part while the Disklavier plays the other.

Operating the Pedals Yourself

During playback, the Disklavier pedals play the pedal data that was recorded with the song. If, however, you want to practice your pedal playing, you can cancel pedal playback and play them yourself.



The Pedal Cancel function is set in the Control Unit.

- 1 Hold down [PART L] and [PART R] until "PDoff" appears on the display.



You can now play the pedals yourself. "PDoff" remains on the display until the pedals are turned on again.

  - 2 To turn the pedals back on, hold down [PART L] and [PART R] until "PD on" appears on the display.




"PD on" flashes on the display for a few seconds, then goes off. The pedals now play as normal.

Using the Built-in Metronome

You can sound the built-in metronome to practice playing songs on the Disklavier.

With each beat of the metronome a digital click is produced by the Control Unit. The click can be turned off. In addition to the click, the LED volume indicators function as a visual metronome. On the first beat of each measure, all the indicators flash. On the remaining beats, the left half and right half of the indicators flash alternately.

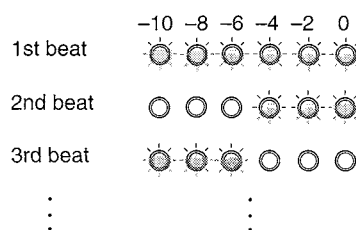


All metronome parameters are reset when a disk is ejected or when the Disklavier is turned off.

- 1 Press [METRONOME].



The METRONOME indicator lights, the metronome starts, and the following display appears.

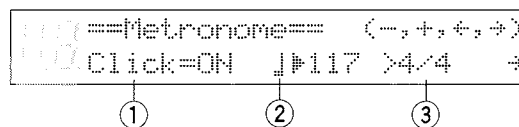

The \sharp symbol is used to show the currently selected parameter. It is moved by pressing [◀] and [▶].

The following table shows the metronome parameters that can be set.

Parameter	Range	Default	Notes
1 Click	ON/OFF	ON	If set to off, the volume indicators still flash
2 Tempo	30 to 400 bpm	117	1 beat = 1 quarter note (crotchet)
3 Time Signature	1/4, 2/4, 3/4, 4/4, 5/4, 6/4, 7/4, 8/4, 9/4		

 
- 2** Use the [←] and [→] to position the cursor next to the parameter that you want to set: click, tempo, or time signature.



```

00 ==Metronome== (-,+,+,+)
00 Click=ON  ↓>117  ↓4/4  →
  
```

- 3** Use the [-/NO] and [+ /YES] buttons to set the selected parameter.



- 4** To stop the metronome, press [METRONOME] again.



Playback with the Metronome

For songs recorded with the metronome using the measures and beats time format, you can sound the metronome along with song playback.

- 1** Play back a song recorded using the measures and beats time format.

- 2** Press [METRONOME].



The METRONOME indicator lights and the metronome starts to click to the tempo of the song.

- 3** To stop the metronome, press [METRONOME] again.



Note: This function cannot be used with songs recorded using the minutes and seconds time format.

Using an Optional Foot Switch or Foot Controller


An optional Yamaha foot switch or foot controller can be used to operate various Disklavier functions.

Using a Start/Stop Foot Switch


Start/stop functions can be controlled using an optional Yamaha FC-4 or FC-5 foot switch.

The following table shows which functions can be controlled using the foot switch.

Current Mode	One Press	Press Again
STOP	PLAY	PAUSE
PAUSE	PLAY	PAUSE

 

FC-4 Foot Switch

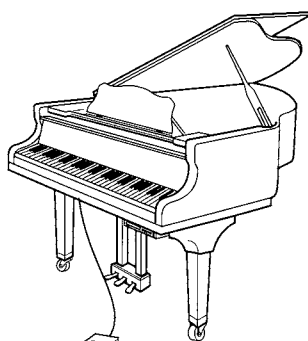



FC-5 Foot Switch

Using a Foot Controller to Control the Tempo

By connecting an optional Yamaha FC-7 controller pedal, playback tempo can also be controlled.

The following table shows which functions can be controlled using the controller pedal.

Current Mode	Pedal Down	Pedal Up
STOP	PLAY	PAUSE
PAUSE	PLAY	PAUSE
PLAYBACK	PLAY (Tempo 100%)	PAUSE
	See illustration below.	See illustration below.

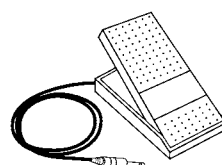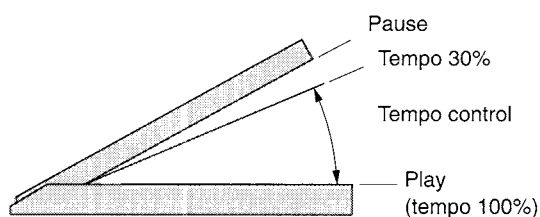

FC-7 Foot Controller

Chapter 9

Advanced Ensemble Song Playback

This chapter describes functions that will help you to better enjoy playing back Ensemble songs. These include tuning the tone generator, playing the piano parts on the tone generator, displaying Ensemble voices, and selecting tracks for the piano parts.

Tuning the Tone Generator (TG Master Tune)

The TG Master Tune function allows you to tune the internal XG tone generator to match the Disklavier's acoustic piano. This is helpful when playing Ensemble songs.

 
Tuning settings are saved even when the Disklavier is turned off. Each time the Disklavier is turned on, the tuning settings are sent automatically to the internal tone generator, so you need only perform this fine tuning operation once.

This function can also be used to tune a MIDI device connected to the MIDI OUT connector.


- 1 Press [FUNC.].




The FUNC. indicator lights and the Function menu appears.



 
- 2 Press [▶] until the cursor is next to the M-Tune option, then press [ENTER].



 
The following display appears, and a note (the A below middle C) is sounded from the internal XG tone generator.



- 3 Play the same note on the Disklavier keyboard.

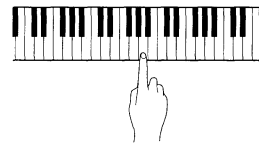

 - 4 Use the [-/NO] and [+ /YES] buttons to tune the pitch of the digital piano (internal XG tone generator).




The tone generator can be tuned from -050 to +050 in 1 cent increments (100 cents equals 1 semitone).

- 5 Press [ENTER] to return to the normal display.

Changing the Tuning Note

TG Master Tune sounds the A key below Middle C by default, but you can change it to a different A key.

 - 1 From the TG Master Tune display, press [▶].




The following display appears.

```

==TG Master Tune==
+▶Note=A3 (<←, -, +, ENT)
  
```

- 2 Use the [-/NO] and [+ /YES] buttons to select a different key.

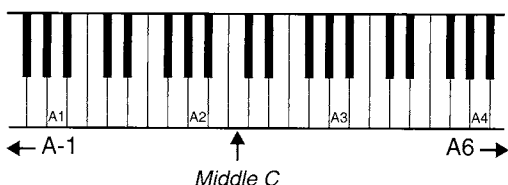

Playing the Piano Parts on the Tone Generator

Normally, piano parts are played back by the piano. You can, however, change this so that the piano parts are also played by the internal XG tone generator or a MIDI instrument connected to the MIDI OUT connector.

You can use this to double up the Disklavier piano parts with a different voice, say strings or vibes. This technique is sometimes referred to as voice layering or unison.

- 1 Press [FUNC.].



The FUNC. indicator lights and the Function menu appears.

```

▶Disk          *MIDI Setup
▶M-Tune
  
```

- 2 Press [▶] until the ▶ cursor is next to the MIDI Setup option, then press [ENTER].



The MIDI Setup menu display appears.

```

▶Piano Part *MIDI Out
▶Rernote
  
```

 
- 3 With the ▶ cursor next to the Piano Part option, press [ENTER].




The following display appears.

```

▶Piano Rcv Ch=01
>Delay In(500ms)=ON
  
```

 - 4** Press [➡] until the  cursor is next to the Piano Part ESBL Out parameter.




```

00 +Import File L=01 R=##
00 PianoPart ESBL Out➡OFF

```

 - 5** Use the [-/NO] and [+/YES] buttons to set the option to ON.



```

00 +Import File L=01 R=##
00 PianoPart ESBL Out➡ON

```

 
The piano parts are now played by the internal XG tone generator with the corresponding MIDI data sent to the MIDI OUT connector.

Displaying Ensemble Voices

When an Ensemble song starts playing back, MIDI Program Change messages are sent to the internal XG tone generator. These Program Change messages tell the tone generator which voices to select for each ensemble track.

During playback, you can display the voice assignments of each track and make changes.

- 1** Play back an Ensemble song, and press [➡] until the following display appears.





```


00 +05 001<GrandPro>Vol=100
00 + 00xLo 00000 000... _ ➡

```

 - 2** Use the [-/NO] and [+/YES] buttons to select the track whose voice you want to display.



 - 3** To change the voice, press [➡] until the  cursor is next to the voice number, then use the [-/NO] and [+/YES] buttons to select a voice.



```

00 +05➡001<GrandPro>Vol=100
00 + 00xLo 00000 000... _ ➡

```

- See the Chapter 22 “Internal XG Tone Generator Voice & Drum Kit List” for a listing of basic voices.

Selecting Tracks for the Piano Parts


Normally, the piano plays tracks 1 and 2 which are the left- and right-hand piano parts. However, you can temporarily change this so that the piano plays different tracks. For example, a vibraphone part on track 5, or a marimba part on track 7 can be played by the piano.

These assignments remain active throughout the song. However, when another PianoSoft or Disklavier song is played back, the piano will play tracks 1 and 2 as normal (L=01 and R=02).


The rhythm track (track 10) can also be played on the piano. However, since this is a percussion part, the results are odd, to say the least.

You can choose from the following options.

Option	Description
##	The piano does not play.
01 - 16	The piano plays the specified track.
Prg	The piano plays the smallest track that contains a piano group voice.
Prg(all)	The piano plays all tracks that contain a piano group voice.

The number of the chosen track appears next to L= or R=, and the  symbol moves across the display, to indicate which track the Disklavier will play.

 - 1 Play back an Ensemble song, then press [].




A display similar to the following appears.

```

00 (00:00) L=01 R=02 (-,+)  

 
+ 00x_0 00000 000_ _ - +
  
```

From the above display we can see that the Disklavier is currently set to play tracks 1 and 2. That is, “L=01” (track 1), and “R=02” (track 2).

- 2 Press [] to select the part whose track you want to change.



- 3 Use the [-/NO] and [+ /YES] buttons to choose a different track.



Chapter 10

Using the PianoSmart Feature

A special-purpose floppy disk (Smart PianoSoft) that supports CDs available on the market and a CD can be played back simultaneously.

PianoSmart

Simply insert a commercial CD into the Disklavier's CD drive and a PianoSmart floppy disk into the floppy disk drive. The floppy disk contains a recorded piano accompaniment to the commercial CD, and the acoustic piano accompaniment will play back matching with the commercial CD. Yamaha's new Smart PianoSoft library will offer professionally arranged MIDI piano files for major albums in every musical genre, starting with some of the best-selling records of all time.

PianoSmart Playback

A special-purpose floppy disk (Smart PianoSoft) that supports CDs available on the market and a CD can be played back simultaneously.

Using SPS (Smart PianoSoft) disks (made by Yamaha) purchased on the market, the Smart PianoSoft Adjustment function automatically corrects the synchronization shift between the CDs as they are being played back, and it stores the song information in the control box.

Note: Even CDs which are paired with Smart PianoSoft and which have the same title, may have a slightly different start position and/or tempo depending on the version used.

It also enables adjustments to be performed manually when automatic compensation is not performed successfully.

 
1 Specify the CD that is to be played back.

The CD must be inserted first without fail so that the CD drive is selected.

When you insert CD into the CD drive, the letter "Cd" automatically appear on the left side of the display.


2 Specify a FD (Smart PianoSoft).

The following display appears.




↑
This means "PianoSmart".

 "SPS Type Disk" appears as the disk title display when a Smart PianoSoft disk purchased on the market has been inserted.



 
Note: 1. The following display appears if a different CD has been inserted in the CD drive when Smart PianoSoft was selected. The song name display will be restored after a few moments. (The song name display is restored in a few seconds.)



2. When the floppy disk which has been recognized is Smart PianoSoft, the selected drive will not change to the CD drive even when a CD is inserted.

3 Press [PLAY/PAUSE].

 The PLAY/PAUSE indicator lights. The following display appears (during automatic measurement).




The synchronization may shift during the first playback of each song, but normal operation will be restored starting with the second and subsequent times. If operation fails to return to normal, proceed with the adjustments in the manual mode which is described later.

The "Registering" display does not appear during the second and subsequent playbacks of a song that is being played repeatedly.

Note: If the initial playback is stopped at any time or if pause or fast forward is initiated, the song information will not be stored.


This measurement is repeated during the next playback.

 The PLAY/PAUSE indicator lights, and sync playback of the CD and MIDI songs starts. The Disklavier plays the piano parts, actually moving the keys up and down. The CD sound is heard through the speakers. The time display starts counting up and the velocity meters show the velocity of the piano part notes currently being played, as shown.




Temporarily Suspending Playback

 1 Press [PLAY/PAUSE].




Playback stops and the PLAY/PAUSE indicator flashes.

 2 Press [PLAY/PAUSE] again to continue playback.



Stopping Playback

 Press [STOP].



Playback stops and the song returns to the beginning.

Pressing [STOP] while in Pause mode cancels Pause mode.

Note: Unlike regular MIDI song playback, the following restrictions apply to the CD playback function.

- You cannot change the playback tempo of songs on CDs.
- You cannot hear the MIDI sound during fast forward or reverse of the sound. When the normal playback mode has been established, the MIDI sound is simultaneously played back properly as well.
- During PianoSmart playback, the sound is played back with the CD pitch adjusted to the pitch of the live piano (TG Master Tune value). The CD pitch is automatically adjusted to the pitch of the live piano, and the CD playback is heard as monaural sound.

• See “Tuning the Tone Generator (TG Master Tune)” on page 34.

 
PianoSmart Manual Adjustment

Compensation can be performed manually in the case of CDs for which automatic adjustment is not performed successfully (such as ones whose tempo cannot be adjusted or ones which, once in a while, fail to play back).

1 Specify the SPS disk and target CD, and check that “PS@” appears on the song name display.



2 Press [←] twice (or three times in the *Silent* mode), and return to the last but one screen.




[#***] indicates the status.

MEASURING	The SPS adjustment value has not been recorded.
REGISTERED	The SPS adjustment value has been recorded.
MANUAL	The SPS adjustment value is set manually.

Note: “REGISTERED” appears in this context since automatic adjustment has already been performed once.

 3 Press [+ / YES] in the stop status, and set to “SPS Adjust = [MANUAL].”



- 4** Press [➡], and align the cursor with "Top."

```
000 SPS Adjust[MANUAL ]
000 Top▶+001
```

- 5** Start playback, and check the timing.

```
000 SPS Adjust[MANUAL ]
000 Top▶+001 *QUIT
```

Top: This indicates the amount by which the synchronization shift at the beginning of the song is to be adjusted.

A change of +1 increases the speed of the MIDI (piano) part by approximately 13ms. The setting range is from -999 to +999. During playback, adjust "Top" using [-/NO] and [+/YES].

If synchronization is not achieved at the completion of the song, adjust "End" near the end of the song.

- 6** To change "End," align the cursor with "Top," and press [ENTER].

```
000 SPS Adjust[MANUAL ]
000 End▶ 000 *QUIT
```

"End" is now displayed.

To change "Top" again, press [ENTER] again.

If necessary, it must be set again.

End: This indicates the amount by which the synchronization shift near the end of the song is to be adjusted.

A change of +1 decreases the speed of the MIDI (piano) part by approximately 13ms. The setting range is from -999 to +999.

Upon completion of the adjustments:

- 7** Align the cursor with QUIT, and press the [ENTER] button.

- 8** To register the adjustment value, press [+/YES]; to cancel the registration, press [-/NO].

```
000 SPS Adjust[MANUAL ]
000 Top==+000 REG? (Y/N)
```

- 9** After the SPS adjustment value has been recorded, the "SPS Adjust" screen is restored.

The status changes to "REGISTERED."

To Delete the SPS Adjustment Value of a Song

- 1** Specify the SPS disk and target CD, and check that "PS@" appears on the song name display.

```
000/TITLE (00:00)≠
000 PS@GM
```

- 2** Press [←], and align the cursor with "DEL."

```
000 SPS Adjust[REGISTERED]▶
000 Top==+001 ▶DEL
```

- 3** Press [ENTER].

```
000 SPS Adjust[REGISTERED]
000 Top==+001 DEL? (Y/N)
```

To delete the adjustment value, press [+/YES]; to cancel the deletion, press [-/NO].

- 4** After the SPS adjustment value has been deleted, the "SPS Adjust" screen is restored.

The status changes to "MEASURING."

The cursor returns to “SPS Adjust.”
(Additional checkpoints for function)

Operations on the SPS Adjust screen can be performed only in the stop status.

When factory reset is performed, all the SPS adjustment values will be deleted.


Chapter 11

Using the AUX Connectors

You can connect the Disklavier to external audio devices, such as speakers, a tape recorder or a CD player.

AUX OUT

You can output sound through external devices connected to the AUX OUT connectors on the Amplifier mounted to the underside of the piano. For example, this allows you to hook up the Disklavier to your home audio system and bring Ensemble music through remote speakers to other rooms or even outdoors.

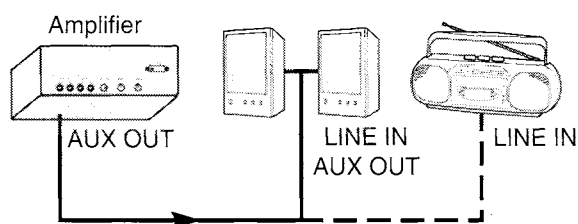

1 With the Disklavier turned off, use an audio cable (optional) to connect the Disklavier's AUX OUT connectors to the appropriate connectors (LINE IN or AUX IN) on the external device you want to connect to.

2 Set the VOLUME knob on the Amplifier to an appropriately audible level.



You can also adjust the volume using the Volume knob on the Amplifier.


Note: The volume of the Amplifier is linked with the AUX IN connectors. If it is turned fully counterclockwise, no sound may be produced even when you adjust the volume on the external device.

3 Turn on the Control Unit first, then turn on the external device.

Turning on the Disklavier first will prevent any unwanted pops or loud noises which could damage your speakers or tape recorder.

AUX IN

You can also connect an external device such as a CD player or tape recorder to the Disklavier.

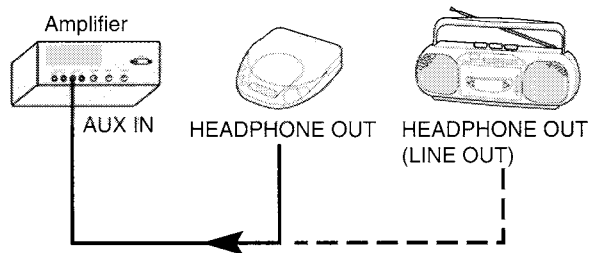

be adjusted for sound that is output from the LINE OUT jack. In this case, use the headphone jack on the external device instead of the LINE OUT jack.

1 With the Disklavier turned off, use an audio cable (optional) to connect the HEADPHONE jack or LINE OUT jack on the external device to which you want to connect to the AUX IN connectors on the Amplifier.

2 Turn on the external device, then turn on the Disklavier.

3 Gradually turn up the volume on the external device until a desirable volume is obtained.

Note: The volume of the Amplifier is linked with the AUX IN connectors. Make sure the VOLUME knob on the Amplifier is set to an appropriately audible level. If it is turned fully counterclockwise, no sound may be produced even when you adjust the volume on the external device.

With many external devices, volume cannot