

---

## Thank You

We appreciate your purchase of the PianoDisc System. PianoDisc elegantly integrates advanced player piano technology and modern music production capabilities, and will provide you with many years of enjoyment. In order to utilize the system to its fullest extent, please read and understand all the information contained in this User's Guide. For your future reference, please copy the serial number of your system below and fill in the purchase date and the name and telephone number of your PianoDisc dealer.

Serial Number: \_\_\_\_\_  
Purchase Date: \_\_\_\_\_  
Dealer Name: \_\_\_\_\_  
Dealer Phone Number: \_\_\_\_\_

© 2005 - 2006 Opus7 User Guide

PianoDisc®  
4111 North Freeway Boulevard  
Sacramento, California 95834  
(916) 567-9999  
(916) 567-1941 Fax

The PianoDisc System is covered under the following U.S. Patents:  
5,083,491; 5,237,125; 5,521,529; 5,521,795; 5,524,521; 5,542,328; 5,546,842; 5,756,910;  
5,834,669; 5,841,050.  
5,905,220; 5,911,169; 6,153,819; 6,209,838; 6,687,636

Other patents pending.

PianoDisc and QuietTime are registered trademarks of Burgett, Inc.

Opus7 is a trademark of Burgett, Inc.

Macromedia Flash is a registered trademark of Macromedia, Inc.; Macintosh is a registered trademark of Apple Computer, Inc.; and Microsoft Windows is a registered trademark of Microsoft Corporation.

At the time of printing, all information contained in this manual was deemed to be completely accurate.

PianoDisc reserves the right to change specifications or design at any time without prior notice.

February 28, 2006


---

# Important: Read This First!

## Safety Instructions



This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the product.

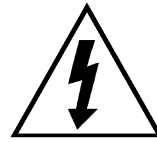

This symbol is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

### **CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN**

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK,  
DO NOT REMOVE COVER OR BACK.  
NO USER-SERVICEABLE PARTS INSIDE.  
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**IMPORTANT NOTICE:** Complete safety of operation is assured by PianoDisc when the system is properly installed and operated in its normal fashion. Do not attempt, or commission others, to modify any portion of the PianoDisc system unless specifically authorized by PianoDisc.

---

## **Important Safety and Installation Instructions**

**INFORMATION RELATING TO POSSIBLE PERSONAL INJURY, ELECTRIC SHOCK, AND FIRE HAZARD POSSIBILITIES HAS BEEN INCLUDED IN THIS LIST.**

**WARNING:** — When using electrical appliances, basic precautions should always be followed:

1. Read and understand all instructions before using the product.
2. Do not open the cover under any circumstances.
3. Power is supplied through a three-prong, grounded AC connector. Connect only to a three-prong, grounded outlet.
4. Keep the power cord away from other objects. Make sure that the cord is not twisted, placed in any lane of traffic, or trapped under the piano.
5. Locate your PianoDisc unit away from direct sunlight, water or moisture, or hot or cold air currents.
6. If the PianoDisc unit is to remain unused for an extended period of time, the power supply should be disconnected.
7. If repair is necessary, refer only to authorized service personnel.
8. This product, either alone or in combination with an amplifier and headphones or speakers, may be capable of producing sound levels that could cause permanent hearing loss. Do not operate for a long period of time at a high volume level or at a level that is uncomfortable. If you experience any hearing loss or ringing in the ears, you should consult an audiologist.
9. The product should be located so that its location or position does not interfere with its proper ventilation.
10. Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
11. The product should be serviced by qualified service personnel when:
  - The power supply cord or plug has been damaged; or
  - Objects have fallen, or liquid has been spilled onto the product; or
  - The product has been exposed to rain; or
  - The product does not appear to operate normally or exhibits a marked change in performance, or;
  - The product has been dropped, or the enclosure is damaged.

**SAVE THESE INSTRUCTIONS**

---

### FCC Information

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

---

## **DISCLAIMERS**

ALL PROPRIETARY SOFTWARE, DATA, AND SCRIPTS ARE COPYRIGHT (C) 2001-2006 PIANODISC. ALL RIGHTS RESERVED. COPYING OR REPRODUCTION OF THE PROPRIETARY SOFTWARE TO ANY OTHER COMPUTER, SERVER OR LOCATION FOR FURTHER REPRODUCTION OR RE-DISTRIBUTION IS EXPRESSLY PROHIBITED. WITHOUT LIMITING THE FOREGOING, PIANODISC'S PROPRIETARY SOFTWARE CANNOT BE COPIED, MODIFIED, OR RE-DISTRIBUTED WITHOUT THE EXPRESS WRITTEN PERMISSION OF PIANODISC.

CERTAIN COMPONENTS OF THIS SYSTEM ARE LICENSED UNDER THE GPL. PURSUANT TO THE GPL, PIANODISC WILL GLADLY HONOR ALL WRITTEN REQUESTS FOR A CD CONTAINING THE OPEN SOURCE COMPONENTS OF OUR SYSTEM. ALL REQUESTS MUST BE SENT TO US AT PIANODISC, ATTN: OPUS7 LICENSING MANAGER, 4111 N. FREEWAY BLVD., SACRAMENTO, CA 95834. A \$10 SHIPPING AND HANDLING FEE, WHICH COVERS OUR COSTS, MUST ACCOMPANY ALL REQUESTS. ALTERNATELY, THE SAME INFORMATION MAY BE OBTAINED FROM THE FOLLOWING WEB SITE:

**<http://licensing.pianodisc.com>**

PianoDisc makes no representations; extends no warranties of any kind, either express or implied; and assumes no responsibilities whatever with respect to the compatibility of Opus7 with any services provided by an Internet Service Provider (ISP). Purchaser expressly acknowledges that services provided by ISPs vary and that many ISPs have usage policies that do not permit the connection of more than one device. Some ISPs supply equipment that must be installed in your computer and such installations may not be compatible with the Opus7 hardware or software.

Purchaser further acknowledges that purchaser is responsible for verifying that Opus7 can be installed and operated under the usage policies of the purchaser's ISP, and that the ISP provides compatible equipment. Certain Internet dependent features of Opus7 may not be available to the purchaser if a suitable Internet connection is not available. Purchasers should contact their existing ISP with questions concerning Opus7 compatibility and usage policies.

---

Opus7 uses several techniques to improve network security. First, the Wireless Router acts as a NAT firewall, which blocks external computers from gaining direct access to the PianoDisc system(s). Second, Opus7 includes a built-in firewall that limits access by external systems.

Opus7 attempts to achieve a delicate balance between security and usability in its network implementation. However, a determined hacker may still be able to defeat these security measures and utilize the network of the Purchaser in an unauthorized manner. Since each network is different, only the Purchaser can determine whether the security measures discussed here are adequate to protect the network.

Purchaser acknowledges that connection to the Internet and use of the Internet features of the Opus7 System is done at the risk of the Purchaser. In no event shall PianoDisc, its subsidiaries or employees be responsible for unauthorized access to, loss or alteration of the data of the Purchaser or be liable for any damage from intrusions.

1. In no event will PianoDisc, its officers, directors, employees, contractors, and representatives be held liable for any damages of any kind, including without limitation compensatory, direct, indirect, or consequential damages, loss of income or data, loss of or damage to property, and claims of customers or third parties arising from the installation and use of, or the inability to use the Opus7 system.
2. PianoDisc does not provide any warranty of the Opus7 system whatsoever, whether express, implied, or statutory, including, but not limited to, any warranty of merchantability or fitness for a particular purpose or any warranty that the function of the system will be error free. Notwithstanding the foregoing, in no event shall the total liability of PianoDisc for all damages, losses, and causes of action (whether in contract, tort or otherwise) exceed the total amount paid by the Purchaser for purchasing the Opus7 System or the cost to repair or replace the Opus7 system whichever is lower.

---

Nothing in the License agreement shall be construed as:

1. Granting by implication, estoppel or otherwise, any license or rights under the patents of PianoDisc;
2. Conferring the right to use in advertising, publicity or otherwise any trademark or trade name of PianoDisc;
3. Conferring an obligation to furnish any manufacturing, configuration of technical information to Purchaser;
4. Conferring to the Purchaser the right to duplicate, alter, enhance or transfer any source or object code;

Opus7 uses wireless networking technology to connect the control unit, conductor tablet, and Internet (if applicable). The range and reliability of these devices will vary based on environmental conditions. In some installations, it may be necessary to add additional access points, antennas, or other wireless equipment. You and your dealer are responsible for ensuring that wireless access is adequate in the desired coverage area. Due to the individualized nature of each installation, we recommend consulting a professional home networking consultant to ensure optimum results. PianoDisc assumes no responsibility for installation or support of the wireless networking components.

---

*Intentionally Blank*



---

# CONTENTS

## QuickStart

Tabs .....	14
Buttons .....	15
Power .....	16
Control Box .....	16
Conductor Tablet .....	17
Wireless Router .....	17
Media Source .....	18
Play Music .....	19
Stop Music .....	21
Shuffle Music .....	21
Schedule Music .....	22
Record Music .....	23
Volume .....	25
Restore System Settings .....	26

---

## Reference

### Chapter 1: Hardware

Conductor Tablet .....	30
Control Box.....	33
Wireless Router .....	34
SilentDrive.....	35
Serial MIDI Interface Box (SMI).....	35
Using MIDI In .....	35
Using MIDI Out .....	36

### Chapter 2: Product Interface

Tabs.....	38
Status Bar .....	39
<b>Main Tab</b> .....	40
Media Sources .....	40
PianoSync .....	42
Karaoke .....	44
Schedule .....	45
Copy .....	46
Merge .....	48
Move .....	50
Name .....	51
Delete .....	52
Record Music .....	53
New Library .....	56
New List .....	57
Edit List .....	59
<b>Volume Tab</b> .....	62
Master .....	62
Piano .....	63
Symphony .....	63
Digital .....	64

---

Auxiliary .....	65
Microphone .....	65
<b>Program Tab</b> .....	66
Play Mode .....	66
Schedule .....	68
<b>Performance Tab</b> .....	69
Tempo .....	69
Transpose .....	70
Sync .....	71
Metronome .....	71
Instrument .....	72
Channel Mask .....	73
Key Mask .....	75
<b>Backstage Tab</b> .....	77
Symphony .....	77
Updates .....	78
Defaults .....	79
Info .....	80
Import .....	80
Alerts .....	81
Date & Time .....	81
Recording .....	83
Network .....	84
Setup .....	85

---

<b>Chapter 3: Connectivity</b>	
<b>Network Connection</b> .....	87
System Requirements .....	88
PC Connection .....	88
Access MX3 from your PC .....	89
Network Security .....	90
<b>Internet Access</b> .....	91
Internet Connection .....	91
PianoCast .....	92
Electronic Music Delivery .....	93
<b>Stereo / Home Theater Connection</b> .....	96
<b>Chapter 4: File Formats</b>	
Supported File Formats.....	97
<b>Glossary</b> .....	100
<b>Appendix</b>	
<b>Customized Playlist</b> .....	106
Playlist Components.....	107
File Format .....	107
Structure .....	107
Commands .....	107
Operators .....	108
Media .....	108
Repeat Suffix .....	109
Playlist Examples .....	110
<b>Figures</b> .....	113
<b>FAQs</b> .....	115
<b>INDEX</b> .....	117

---

**OPUS7 MX3  
Music List**

Candlelight & Wine ..... 130  
Christmas..... 132  
Classical ..... 135  
Country & Western ..... 139  
Jazz..... 141  
Musical Memories ..... 144  
Musicals ..... 145  
New Age ..... 146  
Popular ..... 147  
Ragtime & Stride..... 150  
Sacred ..... 153  
Sampler ..... 155  
Theme ..... 156  
Vintage Selections ..... 158  
World Music ..... 159

# QuickStart

QuickStart contains abbreviated overviews and instructions to commonly used features to help you get started. For definitions of industry and software terms, see the **Glossary** at the end of the manual. For detailed information on the Opus7 System, see the **Reference** section of this manual.

## Tabs

Opus7 software uses a web browser to display the *product interface* or the screen containing the tabs, menus and commands used to interact with the system.






Tabs enable you to play, record and organize music, customize audio controls and performance features, as well as set up network, stereo and PC connectivity.

Tab	Description
Main	Home screen. Lists all available media sources. Select, organize, manage and create music libraries and playlists.
Volume	Manage the volume for the master recording and individual audio components.
Program	Select playback modes and schedule the start and stop of music.
Performance	Customize performance and playback by changing instrumental settings.
Backstage	Network setup, PC connectivity, recording modes and sources, download Opus7 software updates and more.

---

## Buttons

**Opus7** has buttons that mirror a typical stereo or CD player.

Button	Description
	Restart current song
	Stop music
	Play music
	Fast forward
	Select next song

---

## Power

Verify that the following **Opus7** system components have power:

- Control Box
- Conductor Tablet
- Wireless Router

### Control Box

This is a small CPU mounted underneath the piano. It stores the the Opus7 software and the Music Expansion 3 (**MX3**) hard-drive.

**NOTE:** The hardware is designed to be powered-on at all times. For optimal performance, do not turn off the Control Box.

### To turn the power on:

1. Locate the **Control Box** mounted under the piano.
2. Push the power switch.
  - This turns the Opus7 system on and off.



---

## Conductor Tablet

The Conductor Tablet is a wireless webpad that uses a web browser to display the user interface.

### To turn the power on:

1. Press and release the power button.
  - This gives you access to the **product interface**.
2. Locate three LED lights.
  - The first LED light indicates that the tablet is on and has power.
  - If the light is on but the screen is black, the tablet may be in **sleep mode**. Tap the screen to wake it up.

## Wireless Router

This is a wireless device that allows communication between the **Control Box** and **Conductor Tablet**.

### To turn the power on:

1. Plug in the unit. (The unit does not have a power switch.)
  - Status Lights come on to indicate that the unit has power.

---

## Media Source

A media source is a drive or directory that stores music. Opus7 has four possible media sources: *MX3* (Music Expansion 3), *CD*, *floppy disk (FD)* and *Internet*.

- The status bar and the **Main** tab lists the **media sources** that are available on your system.
- Each media source may contain individual songs, music libraries and playlists.
- Each **library** contains a number of songs from the title genre.
- You can play **all** the music within a media source or select a **single** music library, playlist or song.

### To select a media source:

1. Tap the **Main** tab.
  - A list of available or connected media sources appear.
2. Tap a media source.
  - It contains songs, music libraries and playlists. (**Note:** You can only record to the MX3 drive.)

**Note:** Media sources are opened and closed with a single tap or click.

---

## Play Music

You can play all the music stored on a media source or play individual songs, libraries or playlists. The play mode default is **Normal** (music plays in sequential order). You can change the order of playback by changing the play mode.

### To play all music on a media source:

1. Double-tap the media source (MX3, CD, Floppy or Net) that contains the music libraries and playlists you want to hear.
  - Playback starts with the first song listed and ends with the last song in the media source.

### To play all music in a library or playlist:

1. Tap a media source.
2. Double-tap the music library or playlist you want to hear.
  - Playback starts with the first song listed and ends with the last song in the library or list.
  - If you single-tapped to open the library or list, you can double-tap any song to start playback.

 


### What's the difference between double-tap and single-tap?

A double-tap/click of a music selection automatically starts playback.

A single-tap/click of a title or circle indicator (*next to title*) **selects** the media source, music library, playlist or song.

- The circle indicator fills-in to confirm your selection.
- Tap the **Play** button to start playback.





### Why do the library and song titles appear in different colors?

Library and music titles are displayed in different colors to help you distinguish between the different types of music files.

- Digital files and music stored on the CD, Floppy and Internet drives are displayed in **blue**.
- Wave files are displayed in **blue**.
- Karaoke files are displayed in **green**.
- Library names are underlined and displayed in **violet**.
- Media Source names are displayed in **gray**.
- MIDI files are displayed in **black**.
- MIDI files with accompaniment are displayed in **copper**.
- Playlist names are underlined and displayed in **purple**.

---

## Stop Music

Tapping the **Stop** button stops music from playing, resets the system, ejects a CD or deselects the floppy drive from active media.

### To stop music:

- Tap the **Stop** button to stop a song from playing.

### To reset the system:

- Tap the **Stop** button while no songs are playing.

### To eject a CD:

- Tap the **Stop** button while no songs are playing. (**Note:** The CD media source must be selected.)

### To deselect the floppy drive:

- Tap the **Stop** button while no songs are playing. You can now safely remove the floppy disk. (**Note:** The Floppy Drive media source must be selected.)

## Shuffle Music

Use this feature to play music in random order.

### To shuffle music using the Program tab:

1. Tap the **Program** tab.
2. Tap **Shuffle** in the play mode list (center).
3. Tap the **Main** tab.
4. Select a media source or music library.

---

### To shuffle music from the Status Bar:

1. Tap  .
2. Select a media source or music library.

## Schedule Music

Use this feature to set automatic start and end times for playing music.


### To schedule music for playback using the Program tab:

1. Tap the **Main** tab.
2. Select a media source, library, playlist or song.
3. Tap **Schedule** (menu bar).
4. Tap **Yes**.
5. Tap the **Program** tab.
6. Tap **Schedule** (menu bar)
  - The *Schedule* screen appears,
7. Tap **Enable**.
8. Set a start and end time and tap **Change**.

**NOTE:** Playback starts at the time you set. Playback ends in one of three ways:

- The set stop time is reached.
- All music ends before the stop time.
- Pressing **Stop**.

### To schedule music playback from the status bar:

1. Tap  .
  - Schedule is now enabled.
  - Previously selected and scheduled music will play and end at the set times.

- 
- If you want to change the music and/or playback time:
    - a. Tap the **Program** tab.
    - b. Tap **Schedule** (menu bar)
    - c. The *Schedule* screen appears.
    - d. Set the start and end times.
    - e. Tap **Change**.

**NOTE:** Playback ends in one of three ways:

- The set stop time is reached.
- All music ends before the stop time.
- Pressing **Stop**.

## Record Music

You can record music from your piano or an external source onto the Opus7 MX3 drive.

### To record a new song:

1. Tap the **Main** tab.
  - Opus7 instrument default is your piano. If you want to record another instrument, select **Performance > Instrument**.
  - The default record mode is **Normal**. If you want to change the mode and/or source, select **Backstage > Recording**.
2. Tap **MX3**.
3. Tap **Record** (menu bar).
  - A confirmation message appears. It lists the track name, track type, source and instrument.
  - The song name is automatically determined. You can change the name after recording.
  - The track is saved to the **My Recordings** library on the MX3 drive.
4. Tap **Record** (button)
5. Tap **Stop** (button) when finished.

---

### To record a new track to an existing recording:

1. Tap the **Main** tab.
  - Opus7 instrument default is your piano. If you want to record another instrument, select **Performance > Instrument**.
  - The default record mode is **Normal**. If you want to change the mode and/or source, select **Backstage > Recording**.
2. Tap **MX3**.
3. Tap **My Recordings** and select the existing recording.
4. Tap **Record** (menu bar).
  - A confirmation message appears. It lists the track name, track type, source and instrument.
5. Tap **Record** (button).
  - The modified recording is saved to the **My Recordings** library on the MX3 drive.
  - The previous recording of the track is played through the Symphony Pro card.
6. Tap **Stop** (button) when finished.

**IMPORTANT:** The first time a song is recorded, it is saved as a Type 0 MIDI file. New tracks recorded to the song cause the recording to save as a Type 1 Standard MIDI file.

## Volume

Use this function to customize the volume levels of your music.

### To adjust volume levels:

1. Tap the **Volume** tab.
  - The *Master* volume-screen appears.
2. Tap an instrument and/or device to adjust.
3. Drag the slider or tap the left/right arrows to increase or decrease the volume.



---

### To mute a sound:

1. Tap the **Volume** tab.
2. Select an audio source to mute (menu bar).
3. Select the **Mute** box.
  - The audio source is highlighted on the status bar.
  - As a reminder that the audio source is muted, it remains highlighted no matter which tab you are using.
4. Select the **Mute** box again to un-mute the audio source.

### To mute a sound from the status bar:

1. Tap the audio source you want to mute.
  - The audio source is highlighted.
  - As a reminder that the audio source is muted, it remains highlighted no matter which tab you are using.
2. Tap the audio source again to un-mute the sound.



### Which audio source volume levels can I adjust?

Opus7 is capable of incorporating music from six audio sources:

- master
- piano
- symphony
- digital audio
- microphone
- auxiliary source

Each source has its own volume level control. The **Master** audio control proportionately increases or decreases the mixed volume of the other five audio sources.

---

## Restore System Settings

Default system settings are optimized by the Technician during installation. If you change the system settings, you can return to the default settings.

### To restore the default system settings:

1. Tap the **Backstage** tab.
2. Tap **Defaults** (menu bar).
3. Tap **Restore**.
  - The system returns to the default settings stored on your system.

---

*Intentionally Blank*

# Reference

---

The Reference section of the Opus7 User Guide provides detailed information and instructions for setting up, using and maintaining the Opus7 system.

In these sections you will learn about:

- Opus7 Hardware
- Product Interface
- Network & Internet Connectivity
- Stereo & Home Theater Connectivity
- File Formats

---

# CHAPTER 1: HARDWARE

The Opus7 system is comprised of several hardware components. The hardware is mounted within the body of the piano. The Conductor Tablet is used to access the system from anywhere within your home or business.

Although hardware and software is installed and configured by an Installation Technician, we have provided overview information to help you explore the Opus7 system.

The Opus7 System contains the following hardware components:

- Conductor Tablet
- Control Box
- Wireless Router
- SilentDrive
- Serial MIDI Interface
- CD Drive
- Floppy Drive (optional)

# Conductor Tablet

The Conductor Tablet is a wireless webpad that uses a web browser to display the product interface.

## To turn on the Conductor Tablet:

1. Press and release the power button.
  - If the Power Light is on but the screen is black, the tablet may be in **sleep mode**. Tap the screen to wake it up.

FIGURE 1-1. Conductor Tablet - Front Panel

1. Power Light
2. Battery Light
3. Indicator not used
4. Soft keyboard
5. Navigation
6. Enter




**Note:** Three buttons in the upper right are not currently in use.

Component	Description
Power Light	<u>On</u> : The tablet is turned on.
Battery Light	<u>On</u> : Battery pack is charging. <u>Red</u> : Battery pack has reached a low-battery condition.
Soft Keyboard	Optional: Displays a soft keyboard.
Navigation	Navigate throughout the screen
Enter	Enter or activate a command

**Note:** The Conductor Tablet pictured may not match the one you received. PianoDisc may change the device and user interface at anytime. See the system documentation accompanying your Conductor Tablet for detailed information.

FIGURE 1-2. **Conductor Tablet - Side View**

1. Power Button
2. USB Port
3. DC-Input Jack
4. Stylus

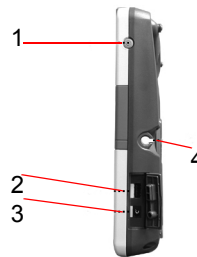


Component	Description
Power Button	<p><u>On:</u> Press and release to turn on.</p> <p><u>Suspend Mode:</u> Turn on. Briefly press and release again. System prompts to suspend. Press and release again to resume.</p> <p><u>Off:</u> Press and hold for more than four seconds. System shuts down.</p>
USB Port	USB Host only. Not used with Opus7
DC-Input Jack	Connect AC Adapter to supply power
Stylus	Interacts with the tablet PC whenever the tip is touching the screen.

FIGURE 1-3. **Conductor Tablet - Rear Panel**

---

1. Battery Cover
2. Battery Pack
3. Battery Latch
4. Battery Release Switch
5. IDE Slot Cover

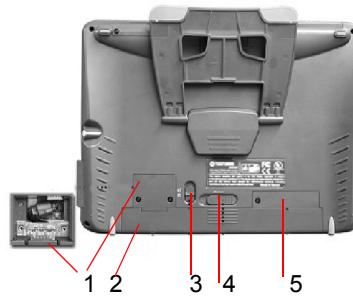

The IDE Compact Flash Card Slot is not used with Opus7.



## Control Box

This is a CPU mounted underneath your piano. It stores the Opus7 software and the Music Expansion 3 (MX3) hard-drive.

**NOTE:** The Control Box is designed to be powered-on at all times. For optimal performance, do not turn it off.

### To turn the Control Box on:

1. Locate the box mounted under the piano.
2. Push the power switch.

FIGURE 1-4. Control Box



**Note:** Some ports are not currently used for the Opus7 system, but are available for future system expandability.

Component	Description
Power Switch	Push this switch to turn the Control Box on and off. This turns the Opus7 system on and off.
USB Ports	Use these ports to attach an external CD drive or floppy disk drive.
Serial Port (COM 1)	Connect the serial MIDI interface to this port.
Serial Port (COM 2)	Connect the IR Receiver to this port.
Power Jack	Attach the power adapter to this jack.
Audio Out Jack (green)	Use this jack to connect audio output of the Control Box to the MIDI interface.
Line-In Jack (blue)	Connect an auxiliary device to this port.
LAN	Use the ethernet jack to connect to a wireless or wired network.

## Wireless Router

This hardware is a wireless network device used to enable communication between the *Control Box* and the *Conductor Tablet*, and serves as a connection point for Internet access.

### To turn the unit on:

1. Plug in the unit. (The unit does not have a power switch.)
  - If the unit has power, one or more status lights are on.

FIGURE 1-5. **Wireless Router**

---



PianoDisc provides an Ethernet cable that links the Router to the Control Box. However, you have the option of using a power-line network device or a wireless bridge to enable communication between the Control Box and Router.

## SilentDrive

This component is an electro-mechanical system that plays the piano by controlling the keys and pedals.

The Installation Technician installs the SilentDrive hardware and configures the accompanying software.

## Serial MIDI Interface Box (SMI)

The Serial MIDI Interface is used to connect the Control Box to the SilentDrive. On the SMI interface are MIDI In and MIDI Out ports. The sections below explain how to use each port.

**Using MIDI In.** MIDI In connects your piano to a variety of optional external MIDI sequencers, instruments, and audio devices. To use MIDI In, you need:

### What You'll Need:

- MIDI controller
- 5-pin MIDI cable

### To connect a MIDI Controller to Opus7:

1. Obtain a 5-pin MIDI Cable.
2. Connect one end of the MIDI cable to your MIDI Controller out port.
3. Connect the other end of the cable to the Serial MIDI Interface's in port.
  - Your external device now controls playback of the piano and symphony.
  - If an external MIDI device is installed your piano plays music set to instrument (patch) 1 or 2. All other music is played via symphony.

**Note:** PianoDisc cannot guarantee that external software and MIDI devices are compatible with the PianoDisc system. Please consult all equipment user manuals and your PianoDisc dealer for more information. Results may vary.

**Using MIDI Out.** Connect an external MIDI Sound Module to the Opus7 MIDI Out port for use as a symphony accompaniment device.

**What You'll Need:**

- External General MIDI sound module
- MIDI cable

**To connect a MIDI Sound Module to Opus7:**

1. Obtain a 5-pin MIDI Cable
1. Connect one end of the cable to the SMI out port.
2. Connect the other end of the cable to your MIDI Sound Module in port.
3. Set your MIDI Sound Module to play from **MIDI In**. (*Refer to the instructions of your MIDI Sound Module.*)
4. Set the symphony accompaniment type in Opus7 to External MIDI.
  - Tap the **BackStage** tab.
  - Tap **Symphony** (menu bar).
  - Tap **External**.

---

## CHAPTER 2: INTERFACE

Opus7 software uses a web browser to display the product interface. The interface is designed with tabs, menus and buttons to help you select and use the features of the system.

There are three (3) types of interfaces you can use to access and interact with the Opus7 system:

- **Flash** - The original interface. Although it is available for use, it does not support all of the new features and functions added to the 2.0 version of Opus7.
- **Simplified HTML** - Use this interface to access Opus7 using devices with limited web browser capability. (e.g. PDAs, cell phones, T.V.s, etc.)
- **Full HTML** - New interface for Opus7 2.0. It is designed to help users easily navigate through the system and provide new and upgraded features.

FIGURE 1-6. Opus7 User Interfaces

---



## Tabs

The **HTML interface** has tabs to help you navigate the Opus7 system. Tabs include features that allow you to play, record and organize music; customize audio controls and performance features, as well as setup network, stereo and PC connectivity.

The tabs are:

- **Main**
- **Volume**
- **Program**
- **Performance**
- **Backstage**



Tab	Description
Main	Home screen. Lists all available media sources. Select, organize, manage and create music libraries and playlists.
Volume	Manage the volume for the master controller, and additional audio sources.
Program	Select playback modes, create custom playlists and schedule the start and stop of music.
Performance	Customize performance and playback.
Backstage	Setup network and PC connectivity, set recording modes and sources, download Opus7 software updates and more.

**NOTE:** The current iteration of the Opus7 User Guide is written for the HTML interface. For help using the Flash interface, refer to previously published **Opus7 User Guides**.

## Status Bar

The Status Bar contains commands for setting the play mode, scheduling music playback, activating mute for various audio sources, and a selection of available media sources.



Function	Commands
Play Modes - tap a mode to customize music playback.	Repeat - repeats a song, music library or an entire media source. Shuffle - randomly plays music within a library or an entire media source Cue - music plays in sequential order, Pause is automatically activated before each song. Tap Play to start playback Single - playback of only one song
Schedule Music - tap to enable scheduled playback.	Schedule playback - schedule music to start and end at set times
Mute Music - tap the audio source you want to mute	Volume Piano Symphony Digital Audio
Media Source icons	MX3 CD Floppy Internet

## Main Tab

This tab is the Home screen. It contains *Media Source* selection, and the following functions: *Schedule, Copy, Merge, Move, Name, Delete, Record, New Library, New List* and *Edit List*.

## Media Sources

A media source is a drive or directory that music is stored in. Opus7 has four possible media sources: MX3 (Music Expansion 3), CD, floppy disk and Internet. In this section, learn about:

- Selecting a media source
- Using PianoSync

Component	Description
<b>MX3</b>	The Opus7 high storage capacity hard drive. Pre-loaded with 40 hours of free PianoDisc music. Also stores your recorded performances and customized playlists.
<b>CD</b>	Play PianoCDs or standard audio CDs from this drive. Copy PianoCDs or standard audio CDs (without playing the piano) to MX3 for storage and playback. <b>Note:</b> If an iMic is installed, music playback from the CD Drive is unavailable. If you attempt to play music from the CD drive, an error message appears. <b>Note:</b> To maintain the beauty and classic lines of your instrument, only connect the CD drive when you are ready to use it.
<b>Floppy</b>	Play PianoDisc music diskettes and Type 1 and 0 Standard MIDI files from this drive. <b>Note:</b> To maintain the beauty and classic lines of your instrument, only connect the Floppy drive when you are ready to use it.
<b>Internet</b>	Play music from the Internet. <b>Note:</b> Must have broadband web access and an ISP provider to use the Internet as a media source.



---

**To select a media source:**

1. Tap the **Main** tab.
  - A list of available or connected media sources appears.
2. Tap a media source.
  - It contains songs, music libraries or playlists. (**Note:** You can only record to the MX3 drive.)

**What do media sources contain?**


The **Main** screen lists the media sources that are available for music retrieval.

- Each media source contains songs, music libraries or playlists.
- Each library contains a number of songs from the title genre (e.g. Christmas, Classical, Musical etc.).

You can play all the music within a media source or select a single music library, playlist or song.

FIGURE 1-7. **Media Sources**

---

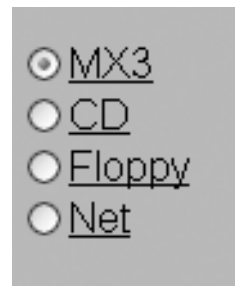

**Note:** Media sources are opened and closed with a single tap or click.

### **Can I see song titles?**



When a CD is inserted into a removable drive, Opus7 uses the Internet (if available) to retrieve a list of track names. If an Internet connection is not available and the CD is a PianoDisc CD, Opus7 attempts to read track names directly from the CD.

This process usually takes about thirty seconds, but can take up to a minute or more, depending on the CD. If you'd rather not wait, press stop to leave track names as untitled.

## **PianoSync**

The PianoSync feature allows Opus7 to play along with your favorite music from major recording artists.

### **To load a PianoSync performance:**

1. Purchase a PianoSync performance in CD or downloadable music file format.
  - Go to Step 7 if the PianoSync performance was downloaded from the PianoDisc eMusic Store.
2. Purchase the matching audio CD from a music retailer.
3. Attach the CD-ROM drive to the USB port on the Opus7 access panel.
4. Verify that playback is stopped (not paused).
5. Insert the PianoSync CD into the CD-ROM drive.
  - Opus7 starts processing the PianoSync CD within 60 seconds. Do NOT eject the CD or use the system until the data is completely loaded onto your system.
6. Remove the PianoSync CD after the lid of the CD-ROM drive opens.
7. Insert the audio CD into the CD-ROM drive.

- 
8. Copy the audio CD directly to MX3 or into the music library of your choice.
    - Music from the audio CD is stored in the music library you selected. Song titles are alphabetically sorted and listed among all the songs within the library.
    - A playlist of the audio CD is automatically created within the **Catalog** library. It is a convenient way of accessing the album you just copied.



#### **Do I need to use Merge to play PianoSync performances?**

Merge is not needed to play or copy PianoSync performances or a matching CD.

#### **How do I find an audio CD to match the PianoSync CD?**

You can find the UPC code for the matching CD in the PianoSync album literature. PianoSync performances are customized for a specific CD and do not work with alternate or “close” versions of the matching CD.

#### **How do I receive PianoSync performances purchased from the PianoDisc eMusic Store.**

During purchase, select a music file format: **PD, CD, OP CD** or **OP Downloadable**. If you have a broadband Internet connection, you can download **OP Downloadable** music files directly to your Opus7 system. PDs, CDs, and OP CDs are mailed to you via USPS or UPS. For more information, go to [www.pianodisc/emusic.com](http://www.pianodisc/emusic.com).

## Karaoke

Use this function to play and display the words of a song. Karaoke songs are stored on the MX3 drive and appear in green.

### To select karaoke music:

1. Tap the **Main** tab and select **MX3**.
2. Double-tap a karaoke song (displayed in green).
  - The song loads, starts to play and the lyrics appear on the screen.
3. Tap **Exit Karaoke** when done.
4. Repeat steps 1 - 3 to select another song.

**Note:** A single-tap/click of a title or circle indicator (*next to title*) **selects** the karaoke song.

- The circle indicator fills-in to confirm your selection.
- Tap the **Play** button to start playback.

**Note:** PianoDisc does not guarantee the quality and accuracy of KAR files obtained from the Internet.

## Schedule

Use this feature to set start and end times for playing music. Playback starts at the time you set.

**Note:** Make sure the time and time zone are set correctly. (See **Backstage Tab** for more information.)

### To schedule music for playback:

1. Tap the **Main** tab.
2. Select a media source, library, playlist or song.
3. Tap **Schedule** (menu bar).
4. Tap **Yes**.
5. Tap the **Program** tab.
6. Tap **Schedule** (menu bar)
  - The *Schedule* screen appears,
7. Tap **Enable**.
8. Set a start and end time and tap **Change**.

**NOTE:** Playback starts at the time you set. Playback ends in one of three ways:

- The set stop time is reached.
- All music ends before the stop time.
- Pressing **Stop**.

## Copy


Use this function to copy songs onto the MX3 or external drive. You can copy music from the Internet, CD and floppy disk drives.

### To copy all music on a media source onto the MX3 drive:

1. Tap the **Main** tab.
2. Select the media source to copy.
3. Tap **Copy** (menu bar).
4. Select a destination to copy music into. Select either:
  - MX3 to copy music onto the drive as is.
  - A music library to copy the music into.
5. Tap the **Copy** button (scroll down) to start copying.
  - The Progress Bar shows the progress of the operation. A message appears when the copy is complete.

FIGURE 1-8. Destination of copied music

---

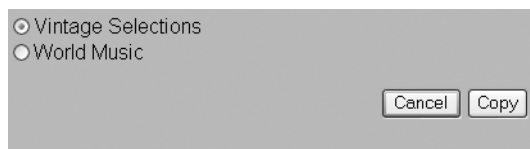

### To copy a music library:

1. Tap the **Main** tab.
2. Open the media source and select the music library.
3. Tap **Copy** (menu bar).
4. Select a destination to copy music into.
5. Tap the **Copy** button (bottom).
  - The Progress Bar displays the progress of the operation. A message appears when the copy is complete.

---

### To copy specific songs:

1. Tap the **Main** tab.
2. Open the media source > select the music library > select a song.
3. Tap **Copy** (menu bar).
4. Select a destination to copy music into.
5. Tap the **Copy** button (bottom) to start copying.
  - The Progress Bar shows the progress of the operation. A message appears when the copy is complete.



### How long does it take to copy a CD?

Copying music from a CD takes the same amount of time as playing the CD. If the CD is damaged, the copy may take longer. You can set Opus7 to attempt to fix any skips or errors during the copy.

### Are there any copy restrictions?

Due to copyright restrictions, the following limitations apply:

- Music on the MX3 drive can only be copied from one music library to another on the MX3 drive.
- Pre-loaded or purchased music on the MX3 drive cannot be copied onto an external drive.
- Songs recorded to the *My Recordings* music library can be copied to an external drive or music libraries on MX3.
- Music from MX3 or external drives cannot be copied to *My Recordings*.

## Merge

Use this feature to play your piano or recording along with an artist's original audio recording. You need the artist's audio CD, and the MIDI files designed to accompany the audio CD.

This feature is especially useful if you want to produce your own performances or have access to non-PianoDisc formats.

### **MIDI files must have the following:**


- A matching track on the artist's CD for each MIDI file.
- Each MIDI file must be the exact same length as the matching track.
- Each MIDI file must be named 01, 02, 03, etc. to match the track number on the CD.

### **To merge a set of MIDI files with an audio CD:**

1. Tap the **Main** tab.
2. Open the media source containing the audio CD tracks (CD-ROM drive or MX3).
3. Select the individual track.
4. Select **Merge** (menu bar).
5. Open the media source and music library containing the MIDI file(s).
6. Select the matching MIDI file(s).
7. Tap **Set Source** (bottom).
  - The *Select Destination Library* appears.
8. Tap **MX3**.
9. Select a music library to copy both the MIDI files and merged music into.
10. Tap **Set Library** (bottom).
  - The *Merge* screen appears with the system message: "Are you sure you want to merge (CD name) with (MIDI File name) and install into (Music Library name)?"
11. Tap **Yes**.



FIGURE 1-9. Merge - Select MIDI Source

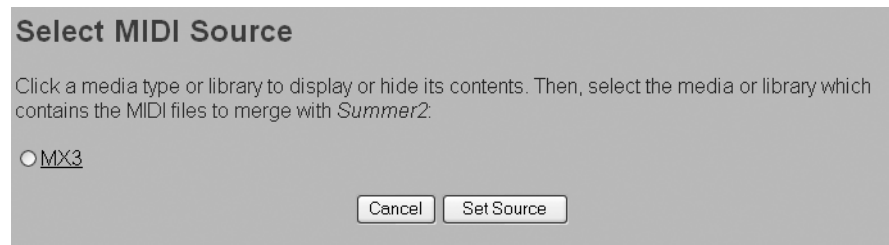

### What music sources can I merge?

The merge feature is for *non-PianoDisc* music sources. Merged files are saved within music libraries on the MX3 drive.

#### To play merged music:

1. Tap the **Main** tab.
2. Tap **MX3**.
3. Select the music library you saved the merge file(s) into.
  - If you merged more than one track, a playlist is automatically created and saved in the **Albums** music library.
  - You may want to rename the playlist.

**NOTE:** PianoDisc does not guarantee compatibility with non-PianoDisc music formats.

The Merge feature is provided for customers who want to produce their own performances or have access to competing formats.

## Move

Use this function to move songs between libraries on the MX3 drive or external drives. Songs are removed from the original location to a new location (e.g. music library or external drive).

### To move music between libraries:

1. Tap the **Main** tab and select MX3.
2. Select a music library.
3. Select all songs or specific songs to move.
4. Tap **Move** (menu bar).
5. Select a music library as a move destination.
6. Tap the **Move** button.
  - A message appears when the move is complete.



### Are there any move restrictions?

Due to copyright restrictions, the following limitations apply:

- Music on the MX3 drive can only be moved from one music library to another on the MX3 drive.
- Music on the MX3 drive cannot be moved onto an external drive.
- Songs recorded to the *My Recordings* music library can be moved to an external drive.

## Name

Use this function to rename music libraries and song titles.

### To rename a **music library**:

1. Tap the **Main** tab.
2. Select the media source.
3. Select the music library.
4. Tap **Name** (menu bar).
  - The *Rename* screen appears with the library's current name in the text field.
5. Type in the new name.
  - Use the virtual keyboard if accessing Opus7 from the Conductor Tablet.
6. Tap the **Rename** button.

### To rename a **song**:

1. Tap the **Main** tab.
2. Select the media source.
3. Open the music library and select the song.
4. Tap **Name** (menu bar).
  - The *Rename* screen appears with the song's current name in the text field.
5. Type in the new name.
  - Use the virtual keyboard if accessing Opus7 from the Conductor Tablet.
6. Tap the **Rename** button.

## Delete

Use this function to delete music libraries and songs from libraries.

### To delete a **music library**:

1. Tap the **Main** tab.
2. Select the media source.
3. Select the music library.
4. Tap **Delete** (menu bar).
  - A system message appears: "Are you sure you want to delete (*library name*)?"
5. Tap **Yes**.

### To delete a **song** from a music library:

1. Tap the **Main** tab.
2. Select the media source.
3. Open the music library and select a song.
4. Tap **Delete** (menu bar).
  - A system message appears: "Are you sure you want to delete (*song name*)?"
5. Tap **Yes**.

---

## Record Music

You can record music from your piano or an external source onto the Opus7 MX3 drive.

### To record a new song:

1. Tap the **Main** tab.
  - Your piano is the default instrument. If you want to simulate another instrument's sound, select **Performance > Instrument**.
  - **Normal** is the record mode default. If you want to change the mode and/or source, select **Backstage > Recording**.
2. Tap **MX3**.
3. Tap **Record** (menu bar).
  - A confirmation message appears. It lists the track name, track type, source and instrument.
  - The song name is automatically determined. You can change the name after recording.
  - The song is saved to the **My Recordings** library on the MX3 drive.
4. Tap **Record** (button).
5. Tap **Stop** (button) when finished.

**To record a new track to an existing recording:**

1. Tap the **Main** tab.
  - Your piano is the default instrument. If you want to simulate another instrument's sound, select **Performance > Instrument**.
  - **Normal** is the record mode default. If you want to change the mode and/or source, select **Backstage > Recording**.
2. Tap **MX3**.
3. Tap **My Recordings** and select the existing recording.
4. Tap **Record** (menu bar).
  - A confirmation message appears. It lists the track name, track type, source and instrument.
5. Tap **Record** (button).
  - The modified recording is saved to the **My Recordings** library on the MX3 drive.
  - The previous recording of the track is played through the Symphony Pro card.
6. Tap **Stop** (button) when finished.

**IMPORTANT:** The first time a song is recorded, it is saved as a Type 0 MIDI file. New tracks recorded to the song cause the recording to save as a Type 1 Standard MIDI file.



### What are recording modes and how do I change them?

Recording modes are settings that determine whether or not lag time is recorded. Lag time is the period between the start of recording and the start of playing music. Opus7 has two recording modes:

- **Normal Mode** - recording begins the moment you tap the *Record* button. Lag time is recorded.

**Note:** This is the default mode.

- **Smart Mode** - recording begins the moment you begin playing the piano. Lag time is not recorded.

**Note:** The Smart Mode is only used for the first track of a recorded song. Normal mode is used for additional tracks of the recording.

The system's recording mode is automatically set to **Normal**. If you want to change the mode, tap **Backstage** tab > **Recording** (menu bar). Change the mode to **Smart**.

## New Library


A Music Library is a collection of music usually organized by genre. Use this function to create new music libraries.

### To create a new music library:

1. Tap the **Main** tab.
2. Select **MX3**.
3. Tap **New Library** (menu bar).
  - The *Add Library* screen appears.
4. Type the name of the new music library.
5. Tap **Add**.

FIGURE 1-10. Main Tab - New Library

---

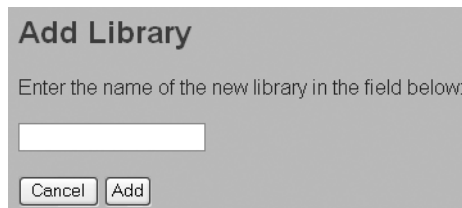



## New List

A playlist is a customized list or group of song titles that you create to organize your music. Playlists can include music libraries, songs and links to PianoCasts.

Adding a song to a playlist does not remove it from the media source or music library; it places a hyperlink or reference to the song in the playlist. If your favorite songs are stored within several different libraries, creating a playlist helps you to conveniently access them from one location.

### To create a playlist:

1. Tap the **Main** tab.
2. Select **New List** (menu bar).
  - The *New Play List* screen appears.
3. Type a name for the playlist in the text field.
4. Tap **Add**.
  - The *New Play List* screen displays a message: "Are you sure you want to create *Playlist name* on (*music library* or *MX3*)?"
5. Tap **Yes**.
  - The playlist is created and is ready for adding and arranging libraries and individual songs.

### To add music to a playlist:

1. Create a playlist.
2. Tap **Add**.
  - The *Select Media* screen appears.
3. Select a media source.
4. Select a music library (s) and/or song(s).
5. Tap **Add**.
  - The music libraries and songs are displayed in the playlist.
  - To further customize your playlist, tap the *play mode*, *number of songs*, and *repeat* drop down lists, and

select an option. Tap **Change**. If you want to keep the initial settings, go to Step 6.

6. Tap **Done**.

FIGURE 1-11. Main tab - New List

- **Play Mode** - includes play, shuffle and cue
- **Song(s)** - select the number of songs to play



### To exclude music from a playlist:

After you create a playlist, you can further customize how its played by excluding songs from playback.



1. Create a playlist or select an existing playlist.
2. Tap a music library or song.
  - The **+ sign** next to the library or song title indicates that it is available for playback.
3. Tap **Toggle +/-**.
  - A **- sign** appears next to the library or song title to indicate that the song is not available for playback.
4. Tap **Done**.
5. Select a music library(s) and/or song(s).
6. Tap **Add**.
  - The music libraries and songs are displayed in the playlist.

---

## Edit List

After creating a list of songs (playlist), edit or change it to suit your needs.

### To move songs up or down the playlist:

1. Tap the **Main** tab.
2. Select the media source storing the playlist.
3. Select the playlist.
4. Tap **Edit List**.
5. Select a song or library and tap   to customize the music's listed order.
6. Tap **Done** when you are finished.

### To add additional music:

1. Tap the **Main** tab.
2. Select the media source storing the playlist.
3. Select the playlist.
4. Tap **Edit List** (menu bar).
5. Select **Add**.
  - The **Select Media To Add** screen appears.
6. Select a media source.
7. Select a music library(s) and/or song(s).
8. Tap **Add**.
  - The playlist appears with selected libraries or songs listed at the bottom.
9. Tap **Done**.

### To delete songs:

1. Tap the **Main** tab.
2. Select the media source storing the playlist.
3. Select the playlist.
4. Tap **Edit List** (menu bar).

- The playlist appears.
- 5. Select a song or music library.
- 6. Tap **Delete**.
  - The song is removed from the list.
- 7. Tap **Done**.

**To exclude songs from playback:**

1. Create a playlist or select an existing playlist.
2. Tap a music library or song.
  - The **+ sign** next to the library or song title indicates that it is available for playback.
3. Tap **Toggle +/-**.
  - A **- sign** appears next to the library or song title to indicate that the song is not available for playback.
4. Tap **Done**.

**To include songs for playback:**

1. Tap the **Main** tab.
2. Select the media source storing the playlist.
3. Select the playlist.
4. Tap **Edit List** (menu bar).
5. Tap a music library or song.
  - The **- sign** next to the library or song title indicates that it is not available for playback.
6. Tap **Toggle +/-**.
  - A **+ sign** appears next to the library or song title to indicate that the song is now available for playback.
7. Tap **Done**.

**To change the play mode:**

1. Tap the Main tab.
2. Select the media source storing the playlist.
3. Select the playlist.
4. Tap Edit List.
5. Tap *play mode* drop-down list and select a play mode:
  - Play - music plays in sequential order
  - Shuffle - music plays in random order
  - Cue - music plays in sequential order, but you must tap Play (button) before each song.
6. Tap *number of songs* drop-down list and select how many songs you want to play.
7. Tap the *repeat* drop-down list and select the number of times you want the playlist to play.
8. Tap **Change**.
9. Tap **Done**.

**Tip:** Because playlists are customized to list the music you want and play in the order you determine, the Play Mode commands on the status bar do not affect playlists.

Use only the play mode options available on the **New List** and **Edit List** screens for playlists.

## Volume Tab

The Opus7 system incorporates music from five audio sources: piano, symphony, digital audio, microphone and auxiliary. Each source has its own volume level control.

### Master

Use the master controller to proportionately increase or decrease the mixed volume of the five audio sources.

#### To adjust master audio:

1. Tap the **Volume** tab.
  - The *Master* volume-screen appears.
2. Drag the slider or tap the left/right arrows to increase or decrease (0, 50, 100) volume.

#### To mute the master audio:

1. Tap **Mute** to mute all audio sources.
  - The audio source is highlighted on the status bar.
  - As a reminder that the audio source is muted, it remains highlighted no matter which tab you are using.
2. Tap **Mute** again (center) to remove the mute.
  - The master audio source on the status bar is no longer highlighted.

**NOTE:** The Master audio control proportionately increases or decreases the mixed volume of the other five audio sources.

---

## Piano

Use the piano audio control to balance the piano audio level with symphony accompaniment or digital audio.

### To adjust piano audio:

1. Tap the **Volume** tab.
  - The *Master* volume-screen appears.
2. Tap **Piano** (menu bar).
  - The *Piano* volume screen appears.
3. Drag the slider or tap the left/right arrows to increase or decrease (0, 50, 100) volume.

### To mute the piano audio:

1. Tap **Mute**.
  - The piano audio source is highlighted on the status bar.
  - As a reminder that the audio source is muted, it remains highlighted no matter which tab you are using.
2. Tap **Mute** again (center) to remove the mute.
  - The piano audio source on the status bar is no longer highlighted.

## Symphony

Use the symphony audio control to adjust the symphony accompaniment volume. Symphony is played via MIDI and is not the same as digital audio.

### To adjust symphony audio:

1. Tap the **Volume** tab.
  - The *Master* volume-screen appears.
2. Tap **Symphony** (menu bar).
  - The *Symphony* volume screen appears.
3. Drag the slider or tap the left/right arrows to increase or decrease (0, 50, 100) volume.

### To mute the symphony audio:

1. Tap **Mute**.
  - The symphony audio source is highlighted on the status bar.
  - As a reminder that the audio source is muted, it remains highlighted no matter which tab you are using.
2. Tap **Mute** again (center) to remove the mute.
  - The symphony audio source on the status bar is no longer highlighted.

## Digital

Use the digital audio control to adjust digitally recorded vocals and instruments. **Note:** Standard MIDI files are not digital audio. Adjusting digital audio does not affect the volume of MIDI files.

### To adjust digital audio control:

1. Tap the **Volume** tab.
  - The *Master* volume-screen appears.
2. Tap **Digital** (menu bar).
  - The *Digital* volume screen appears.
3. Drag the slider or tap the left/right arrows to increase or decrease (0, 50, 100) volume.

### To mute the digital audio control:

1. Tap Mute.
  - The digital audio source is highlighted on the status bar. As a reminder that the audio source is muted, it remains highlighted no matter which tab you are using.
2. Tap Mute again (center) to remove the mute.
  - The digital audio source on the status bar is no longer highlighted.



---

## Auxiliary

You can connect an Auxiliary audio device to the *Line Input* port on the **Control Box**. Use this function to adjust the volume of the Auxiliary audio.

### To adjust auxiliary audio control:

1. Tap the **Volume** tab.
  - The *Master* volume screen appears.
2. Tap **Auxiliary** (menu bar).
  - The *Auxiliary* volume screen appears.
3. Drag the slider or tap the left/right arrows to increase or decrease (0, 50, 100) volume.

### To unmute the auxiliary audio control:

1. Tap **Mute**.
2. Tap **Mute** again (center) to add the mute.

**Note:** The default setting is Mute.

## Microphone

You can connect a microphone to the *Microphone Input* port on the **Control Box**. Use this function to adjust the volume of the Microphone audio. **Note:** The default value is mute.

### To adjust microphone audio control:

1. Tap the **Volume** tab.
  - The *Master* volume screen appears.
2. Tap **Microphone** (menu bar).
  - The Microphone volume screen appears.
3. Drag the slider or tap the left/right arrows to increase or decrease (0, 50, 100) volume.
4. Tap **Mute** to unmute the audio source.
  - Tap **Mute** again (center) to add the mute.

## Program Tab

Use this tab to select playback modes and schedule the start and stop of music.

### Play Mode

#### To set the play mode:

1. Tap the **Main** tab.
2. Select a media source.
3. Tap the **Program** tab.
  - The *Play Mode* screen appears.
4. Select a mode.
  - **Normal** - music plays in sequential order.
  - **Shuffle** - music plays in random order. This can be used for a library or entire media source.
  - **Cue** - music plays in sequential order, but **Pause** is automatically activated before each song. To start playback, tap **Play**.
  - **Single** - playback of only one song.
  - **Repeat** - playback is repeated. This can be used for a song, library or entire media source in Normal, Shuffle and Single modes. Playback is repeated until you tap Stop.


**Note:** You can also activate and deactivate play modes from the Status Bar.

**Tip:** Because playlists are customized to contain the music you want and play in the order you determine, the Play Mode commands on the status bar and Program tab do not affect playlists.

Use only the play mode options available on the **New List** and **Edit List** screens for playlists.

---

FIGURE 1-12. Normal Play Mode

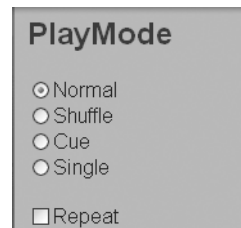


Selecting any of the play modes will highlight it on the Status Bar.

As a reminder that the mode is enabled, it remains highlighted no matter which tab you are using.

---

FIGURE 1-13. Program - Play Mode

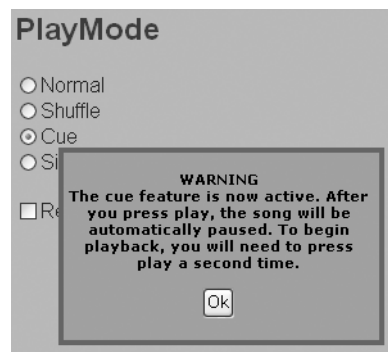

## Schedule

Use this feature to set start and end times for playing music.

### To schedule music:

1. Tap the **Main** tab.
2. Select a media source, library, playlist or song.
3. Tap **Schedule**.
4. Tap **Yes**.
5. Tap the **Program** tab.
6. Tap **Schedule** (menu bar).
  - The *Schedule* screen appears.
7. Tap **Enable**.
  - Current start and end times are displayed.
8. Set new start and end times.
9. Tap **Change**.



### Can I enable Schedule from the Status Bar?

Yes. Tap **Scheduled Playback**. Music previously selected and scheduled will play at the set time.

If this is your first time using the feature or you want to change start and end times, follow Steps 1 - 9 above.

## Performance Tab

From this tab set playback performance parameters.

### Tempo

Use this function to modify the playback speed of a MIDI file. A value of zero (0) sets the playback speed to the original tempo. Increase or decrease the BPM (beats-per-minute) to modify the tempo.

**Note:** Adjusting the tempo has no affect on digital audio files or sources.

#### To set the tempo:

1. Tap the **Performance** tab.
  - The *Tempo* screen appears.
2. Drag the slider or tap the left/right arrows to increase or decrease the (-60, 0, 60, 180) volume.

## Transpose

Use this function to transpose the key of a song.

Note:

- Raise or lower the key of a song in half-step increments.
- Set the value before playback. If you set a transpose value during playback, it is applied to the next song.

Digital audio is transposed to a key nearest the original audio. The piano will transpose up or down, a full 24 half steps. This ensures the music is in tune and minimizes degradation.

### To transpose the key of a song:

1. Tap the **Performance** tab.
2. Tap **Transpose** (menu bar).
3. Drag the slider or tap the left/right arrows to increase or decrease the (-24, 0, 24) volume.

## Sync

Opus7 automatically synchronizes music based on song type and volume level.

Use this function to adjust the synchronization between the piano and any accompaniment.

### To manually sync the piano and any accompaniment:

1. Tap the **Performance** tab.
2. Tap **Sync** (menu bar).
  - Left side of the slider adjusts the accompaniment sync delay.
  - Right side of the slider adjusts the piano sync delay.
  - The center of the slider (set to zero) is the default sync delay.
3. Drag the slider or tap the left/right arrows to increase or decrease (-150, 0, 150) to the desired sync rate.

**Note:** Sync rate change values are in milliseconds.

## Metronome

Opus7 includes a metronome to mark time during live play of the piano. It provides a steady tempo reference in the form of audible clicks.

Use this function to activate the metronome and adjust the tempo to match the speed of your music.

### To enable the metronome:

1. Tap the **Performance** tab.
2. Tap **Enable**.
  - The slider appears.
3. Drag the slider to the desired tempo speed.

**NOTE:** The metronome is designed as a practice tool only. It does not function as a *click track* for advanced synchronization requirements nor synchronizes with recorded songs or existing music.

## Instrument

Use this feature to select an instrument. Selecting an instrument allows you to:


- Accompany a live or recorded piano performance.
- Record other instrument sounds.

### To enable instrument selection:

1. Tap the **Performance** tap.
2. Tap **Instrument** (menu bar).
3. Select **Enable**.
  - The *Instrument* drop-list appears.
4. Select an instrument.

FIGURE 1-14. Performance tab - Instrument

---

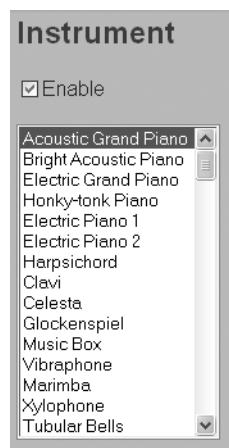




## Channel Mask

Use this function to mask (turn off) an instrument on a specific MIDI channel. Channel masking is useful for silencing one or more symphony instruments during playback.

### To mask a channel:

1. Tap the **Performance** tab.
2. Select **Channel Mask** (menu bar).
  - A list of available instruments and channels to mask appear.
3. Select an instrument or channel to mask.
4. Tap **Mask**.
  - Masked channels are displayed in parenthesis.

FIGURE 1-15. Performance tab - Channel Mask

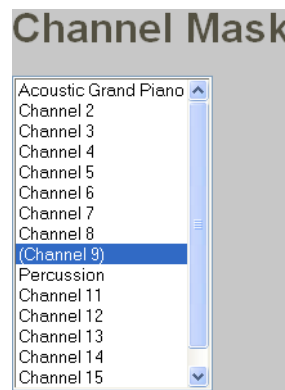

**To unmask a channel:**

1. Tap the **Performance** tab.
2. Select **Channel Mask** (menu bar).
  - Masked channels are displayed in parenthesis.
3. Select an instrument or channel to unmask.
4. Tap **Unmask**.
  - To return the system to default settings, tap **Reset**.

**NOTE:** During symphony accompaniment playback, each channel indicates its assigned instrument. Some songs may assign more than one instrument to a channel.

---

## Key Mask


Use this function to mask (turn off) a range of piano keys. Key masking allows Opus7 to play a range of keys within a song while you play the other range.

### To mask a key(s):

1. Tap the **Performance** tab.
2. Select **Key Mask** (menu bar).
  - A list of key ranges appear.
3. Select a key(s).
4. Tap **Mask**.
  - Masked keys are displayed in parenthesis.

FIGURE 1-16. Performance - Key Mask

---

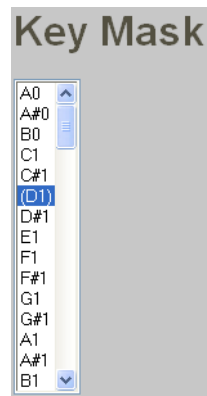

**To unmask a key(s):**

1. Tap the **Performance** tab.
2. Select **Key Mask** (menu bar).
  - Masked keys are displayed in parenthesis.
3. Select a key(s) to unmask.
4. Tap **Unmask**.
  - To return the system to default settings, tap **Reset**.

## Backstage Tab

Features and functions on the Backstage tab, allow you to adjust Opus7 technical settings.

### Symphony

The Opus7 Opulence package includes a built-in sound card with 128 different sampled sounds that individually accompany piano performances. You can connect an external MIDI device to provide your own symphony accompaniment.

#### To select a symphony accompaniment type:

1. Tap the **Backstage** tab.
  - The *Symphony* screen appears.
2. Select either:
  - **None** - no symphony accompaniment.
  - **Symphony Pro** - Opus7 internal symphony accompaniment. This is the default setting.
  - **External** - symphony accompaniment from an external MIDI device.

**Note:** This is an optional feature. The sound card may or may not be installed on your system.

## Updates

Download system updates for Opus7 if broadband Internet access is available. Updates are downloaded manually or automatically. (**Note:** Update CDs can be ordered from PianoDisc or your piano dealer.)

### To manually download updates:

1. Tap the **Backstage** tab.
2. Tap **Updates** (menu bar).
3. Tap **Update Now**.
  - A series of messages appear.
  - Opus7 is offline for at least one minute if an update is found. Then the system restarts.

### To automatically download updates:

1. Tap the **Backstage** tab.
2. Tap **Updates** (menu bar).
3. Select **Automatic**.
  - Now your system daily connects to PianoDisc to search for and download updates.

## Defaults

The original system settings are optimized by the Installation Technician. If you have changed your system settings, use the **Default** function to return to the original settings.

### To restore the default system settings:

1. Tap the **Backstage** tab.
2. Tap **Defaults** (menu bar).
3. Tap **Restore**.
  - The system returns to the default settings stored on your system.

### To copy the default system settings to floppy disk:

1. Tap the **Backstage** tab.
2. Tap **Copy to Floppy**.

### To load default settings from floppy disk:

1. Tap the **Backstage** tab.
2. Tap **Load from Floppy**.
  - The system returns to the default settings stored on the floppy.

## Info

System configuration and status information is available for your review. **Note:** PianoDisc Technical Support asks for this information during tech support calls.

### To display system configuration and status information:

1. Tap the **Backstage** tab.
2. Tap **Info** (menu bar).
3. Tap **Show Info**.

## Import

Usually, CDs are virtually error-free and do not require a rigorous verification process. Because Opus7 does not automatically check for errors during import it is compatible with a greater variety of CDs and has faster import times.

To import a slightly damaged CD, enable *Use error correction when copying CDs*. With error correction enabled, Opus7 attempts to correct any CD errors found during import.

### To set the system to fix CD errors and skips:

1. Tap the **Backstage** tab.
2. Tap **Import** (menu bar).
3. Select **Use error correction when copying CDs**.
  - The system is now set to fix errors during every CD copy.

**Note:** This feature corrects minor problems, but does not fix audio from a severely damaged CD. In most cases, it is best to leave error correction disabled.



## Alerts

Use this feature to hear audible sounds alerting that an action has occurred.

### To enable alerts:

1. Tap the **Backstage** tab.
2. Tap **Alert** (menu bar).
3. Select **Use audible alerts**.

## Date & Time

The correct date and time enables the schedule feature to:

- Start and stop music at the set time and
- Enables the system to search for and download updates at the appropriate time.

### To set the time zone:

1. Tap the **Backstage** tab.
2. Tap **Date & Time** (menu bar).
  - The *Date & Time* screen appears.
3. Select the appropriate time zone.
  - The time zone and date are used to determine adjustments such as daylight savings time.
4. Tap **Change**.
  - The *Success* confirmation screen appears.
  - Depending on the time zone selected, the time automatically changes.
  - If the new time zone is a day ahead or behind the current time zone, the date and time automatically change.

FIGURE 1-17. Backstage - Date & Time

---



**To set date and time:**

1. Tap the **Backstage** tab.
2. Tap **Date & Time** (menu bar).
  - The *Date & Time* screen appears.
3. Select the appropriate hour, minute, month, day and year.
4. Tap **Change**.
  - The *Success* confirmation screen appears.

## Recording

The system's recording mode is automatically set to **Normal**. Use this feature to change the recording mode and/or source.

### To change the recording mode and or source:

1. Tap the **Backstage** tab.
2. Tap **Recording** (menu bar)
  - The *Recording* screen appears.
3. Select a recording mode:
  - **Normal Mode** - recording begins the moment you tap the *Record* button. Lag time is recorded.  
**Note:** This is the default mode.
  - **Smart Mode** - recording begins the moment you begin playing the piano. Lag time is not recorded.  
**Note:** The Smart Mode is only used for the first track of a recorded song. Normal mode is used for additional tracks of the recording.
4. Tap the source.
  - **Piano** - is the default setting. This records your piano performance. (**Note:** Recording from the piano is only available with the optional Performance Package.)
  - **MIDI In** - Musical Instrument Digital Interface (MIDI), is the standard connection between computers, keyboards, sound modules and sound effects devices. Select this setting to record from your external MIDI equipment.

## Network


Use this function to allow file sharing and remote debugging, as well as viewing your IP, Gateway and DNS addresses.

### To enable file sharing:

1. Tap the **Backstage** tab.
2. Tap **Network** (menu bar.)
3. Select **File Sharing**.
4. Tap **Change**.

FIGURE 1-18. Backstage - Network

---

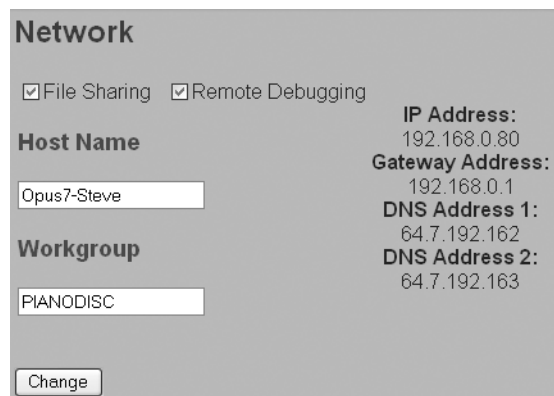

### What is the default status for file sharing?

The default status for file sharing is OFF. After enabling this feature, be aware that others with access to your network have the ability to add, delete or rearrange files on the MX3 drive. Since file sharing requires opening network ports, your system may become less secure.

**To enable remote debugging:**

1. Tap the **Backstage** tab.
2. Tap **Network** (menu bar).
3. Select **Remote Debugging**.
4. Tap **Change**.

**What is Remote Debugging?**

Use this feature to enable PianoDisc Technical Support to remotely access your Opus7 system to troubleshoot any software problems.

**NOTE:** Remote debugging is only available if your Opus7 is configured to use a public IP address.

**Setup**

This function requires a password and is only accessed by a certified PianoDisc Technician.

---

## CHAPTER 3: CONNECTIVITY

Opus7 has the capability of connecting to your home network and the Internet.

With your home network and PC, you can:

- Use the Opus7 system with your PC's web browser.
- Manage, add and edit music on the MX3 drive using your PC's file manager.

With a broadband Internet connection, you can:

- Listen to songs from the Internet
- Listen to PianoCast Broadcasts
- Receive system updates
- Display CD song titles

---

## Network Connection

If your home computer has a network adapter, it can communicate with Opus7 over a network.

### The following sections explain:

- System requirements for connecting to the network.
- Connecting Opus7 to your personal computer.
- Accessing the MX3 drive from your personal computer.
- Network security.



PianoDisc makes no representations; extends no warranties of any kind, either express or implied; and assumes no responsibilities whatsoever with respect to the compatibility of Opus7 with any services provided by an Internet Service Provider (ISP). Purchaser expressly acknowledges that services provided by an ISP vary and that many ISPs have usage policies that do not permit the connection of more than one device. Some ISPs supply equipment that must be installed in your computer and such installations may not be compatible with the Opus7 hardware or software. Purchaser further acknowledges that purchaser is responsible for verifying that Opus7 can be installed and operated under the usage policies of the purchaser's ISP, and that the ISP provides compatible equipment. Certain Internet dependent features of Opus7 may not be available to the purchaser if a suitable Internet connection is not available. Purchaser should contact their existing ISP with questions concerning Opus7 compatibility and usage policies.

Connecting Opus7 to the Internet requires PC networking experience. We recommend consulting an IT professional for assistance.

## System Requirements

### What do I need to access Opus7 from a PC?

- Modern web browser (e.g. Internet Explorer or Firefox).
- Wired or wireless network interface card (NIC).

### What do I need to access the MX3 drive from a PC?

- Windows networking support, Appleshare, AppleTalk or SAMBA

## PC Connection

### To connect Opus7 to your PC:

1. Plug one end of an **Ethernet cable** into your PC.
2. Plug the other end into the **Wireless Router**.
  - Skip steps 1 & 2 if you have wireless networking.
3. Configure your PC to obtain IP addresses and settings from DHCP.
  - See your PC's documentation for detailed instructions.
4. Reboot.
  - The **Wireless Router** may prompt to enter your ISP, user account name, and password. *See the Wireless Router hardware documentation for more information.*
5. Access Opus7 from your web browser.
  - Open your web browser.
  - Enter **192.168.0.7** (IP address) in the **Address** field.
  - Tap **Enter**. The **user interface** appears.



## Access MX3 from your PC

Use your PC's file manager to access the MX folder. (**Note:** Within a PC's file manager the MX3 displays as the MX folder.)

After accessing the folder you can:

- View, add, delete, rename and copy music libraries, playlists and songs.

### To access the MX3 folder using a PC:

1. Open your web browser.
2. Enter the IP address for Opus7.
  - The **user interface** appears.
3. Enable file sharing within Opus7.
  - Click the **Backstage** tab.
  - Click **Network** (menu bar).
  - Enable **File Sharing**.
  - Click **Change**.
4. Open Windows<sup>®</sup> Explorer and search for the MX folder.
  - Right-click **Start**.
  - Click **Explore**. Windows<sup>®</sup> Explorer appears.
  - Right-click **My Network Places**.
  - Click **Search for Computers...**
  - Type the host name in the *Computer Name* field. (**Note:** The Default host name is Opus7.)
  - Click **Search**. Opus7 appears in a list within the right-frame.
  - Double-click **Opus7**. The MX folder appears within the right-frame.
  - Double-click the MX folder to view its contents.

## Network Security

Opus7 uses several techniques to maintain security on your system:

- The Wireless Router serves as a NAT firewall blocking external computers from gaining direct access to the system.
- The Opus7 system contains an internal firewall that limits access by external systems.



Opus7 attempts to achieve a delicate balance between security and usability in its network implementation. However, a determined hacker may be able to defeat these security measures and utilize the network of the Purchaser in an unauthorized manner. Since each network is different, only the Purchaser can determine whether the security measures discussed here will adequately protect their network.

The Purchaser acknowledges that connection to the Internet and use of the Opus7 Internet features is done at the risk of the Purchaser. In no event shall PianoDisc, its subsidiaries or employees be responsible for unauthorized access to, loss or alteration of the data of the Purchaser or be liable for any damage from intrusions.

## Internet Access

You must have broadband Internet and an Internet Service Provider (ISP) to connect the Opus7 system to the Internet. The following sections explain:

- Internet Connection
- PianoCast
- Electronic Music Delivery

### Internet Connection

**IMPORTANT:** Not all ISPs have usage policies permitting connections to more than one device. Verify your ISP's usage policies before connecting Opus7 to your Internet connection.

#### **What do I need to connect Opus7 to my Internet connection?**

- Broadband modem with an Ethernet port.
- Ethernet cable.
- ISP (Internet Service Provider such as AOL, Earthlink, etc.).

#### **To connect Opus7 to the Internet:**

1. Locate the **Wireless Router** under your piano.
  - One port is reserved for Internet connection.
2. Locate your broadband Internet connection.
  - Some ISPs provide broadband equipment that is installed within your computer. See your ISP provider's documentation regarding sharing your PC's Internet connection with external devices.
3. Plug the Ethernet cable into the **Wireless Router** and your broadband Internet connection.
  - The **Net** is displayed as a media source on the **Main** tab.
  - The web browser on the **Conductor Tablet** is enabled to surf the web.

## PianoCast

With broadband Internet, Opus7 can connect to PianoCast. PianoCast is PianoDisc's Internet radio station. But this is no ordinary radio station. It combines a traditional audio broadcast with a piano performance. PianoCast features special events, interviews and performances by your favorite artists and more.

### To play from a PianoCast stream:

1. Select **Net**.
2. Select **PianoCast Broadcasts**.
3. Select the a PianoCast stream.
4. Tap **Play** (button).
  - You will likely hear only audio (or silence) at the start of the stream. Once the connection is fully established, the name of the PianoCast is shown in the status window.

**Note:** PianoCast is similar to listening to a standard radio broadcast. You cannot pause or fast-forward. Similar to standard radio, it may connect in the middle of a song or segment. Since PianoCast is broadcast simultaneously to many systems, some PianoCast segments may be archived.

## Electronic Music Delivery

Purchase music from **PianoDisc's eMusic Store** at [www.pianodisc.com/emusic/index1.asp](http://www.pianodisc.com/emusic/index1.asp). Music is electronically delivered to your home.

### To purchase and receive music from the eMusic store:

1. Go to [www.pianodisc.com/emusic/index1.asp](http://www.pianodisc.com/emusic/index1.asp).
2. Select and browse a musical genre to find the album you want to purchase.
3. Select the album.
4. Select OP Downloadable as the music format. (Note: Some albums are only available in CD or floppy disk format.)
5. Enter your Opus7 Unit ID number and checkout.
  - Ensure the number is entered correctly. If you enter the number incorrectly, Opus7 will not download the music.
6. Access your Opus7 and manually update your system.
  - Your music is immediately downloaded into the appropriate Opus7 music library.
  - If Automatic Updates is enabled within your Opus7 system, music is received within 24 hours.

**Note:** Electronic delivery requires a broadband Internet connection. The time needed to download and install music depends on your Internet connection speed.

### **eMusic Formats**

Albums at the eMusic Store may be available for purchase in all or some music formats. Music format options are:

**PD.** Floppy disks formatted to play music only on PDS-128, PDS-128Plus, 228CFX and Opus7 systems. Permanently stored on the PD diskettes are a variety of musical performances recorded for:

- solo piano
- piano with synthesized instrumental accompaniment

**CD.** CDs formatted to play music only on PDS-128Plus (with external CD player) and 228CFX systems. Permanently stored on CD are a variety of musical performances recorded for:

- solo piano
- piano with live orchestrated accompaniment
- piano with live orchestrated accompaniment with vocals
- piano with synthesized accompaniment (SymphonyPro not required)

**OP CD.** Opus7 CDs formatted to add music only on Opus7 systems. Opus7 CDs contain Digital Audio, MIDI or PianoSync music files. Permanently stored on OP CDs are a variety of musical performances recorded for:

- solo piano
- piano with live stereo orchestration
- piano with live stereo orchestration and vocals
- piano with stereo synthesized accompaniment (SymphonyPro required)
- piano with pre-recorded synthesized accompaniment (SymphonyPro not required)
- piano performance to accompany off-the-shelf commercial audio CDs (PianoSync)

**OP Downloadable.** Download Digital Audio, MIDI and PianoSync music files directly to the Opus7 system. Downloadable music comes in a variety of musical performances recorded for:

- solo piano
- piano with live stereo orchestration
- piano with live stereo orchestration and vocals
- piano with stereo synthesized accompaniment (SymphonyPro required)
- piano with pre-recorded synthesized accompaniment (SymphonyPro not required)
- piano performance to accompany off-the-shelf commercial audio CDs (PianoSync)

## Stereo / Home Theater Connection

**Note:** If you're not using a whole house audio configuration, connect the SMI's audio-out connection to the stereo receiver's input connection.




If you want to install the (optional) iMic with your Opus7 system,

plug it into an available USB port on the Control Box. Plug a stereo "Y" cable into the **out port** on the iMic and the other end of the cable to the **in port** on the SMI Box. This eliminates connecting the Stereo "Y" cable from the Control Box to the SMI Box.

**TIP:** Music playback from the CD Drive is unavailable if an iMic is installed. An error message appears if you attempt playback.

Below is a **Whole House Audio Wiring Diagram** that illustrates how to connect Opus7 to your whole house audio system. It's provided to give you an overview of the necessary components and wiring. For installation, contact your PianoDisc dealer.

FIGURE 1-19. Whole House Audio Wiring

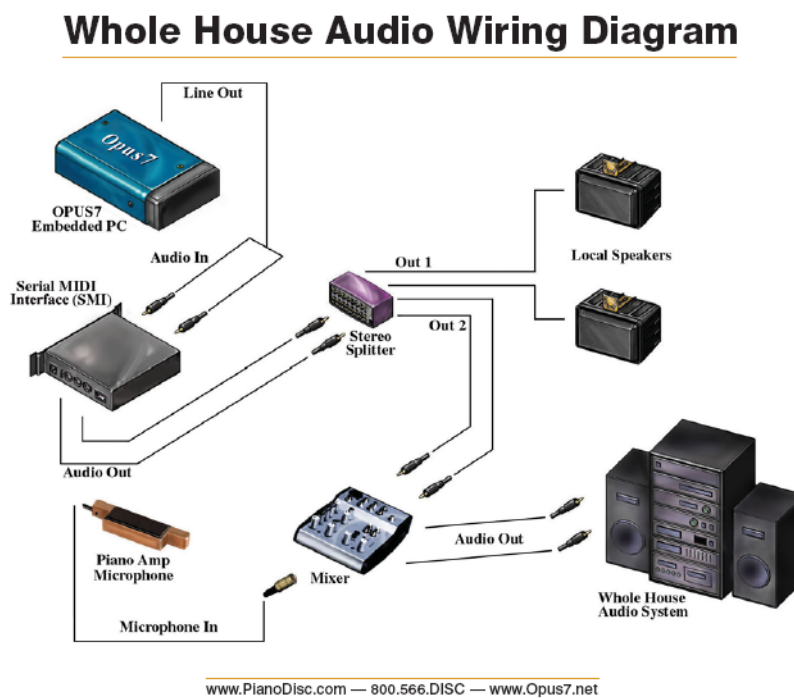



---

# CHAPTER 4: FILE FORMATS

## Supported File Formats

Opus7 supports three primary song file formats:

TABLE 1-1. File formats supported by Opus7

File Format	Description
Standard MIDI (SMF)	<ul style="list-style-type: none"><li>• Contains recordings of piano performances and other instruments.</li><li>• Type 0 and 1 are supported.</li><li>• Playback tempo is adjustable.</li><li>• Transpose function does not affect audio quality.</li><li>• Songs appear in <b>black</b> within a music list.</li><li>• Songs with accompaniment appear in <b>copper</b> within a song list.</li></ul>
MX3 (digital audio with MIDI)	<ul style="list-style-type: none"><li>• Contains piano performances, stereo digital audio accompaniment, other instruments, and vocals.</li><li>• Transpose function degrades the audio quality.</li><li>• Playback tempo is not adjustable.</li><li>• Files are best played without performance modification.</li><li>• Songs appear in <b>blue</b> within a music list.</li></ul>

TABLE 1-1. File formats supported by Opus7

File Format	Description
Tracks	<ul style="list-style-type: none"> <li>• Tracks are digital audio stored on CD or floppy disk.</li> <li>• To playback tracks, Opus7 converts them to MIDI or digital audio.</li> <li>• The conversion process makes tracks slower to load. Copy tracks to the MX3 drive to avoid delayed load and playback times.</li> </ul>
KAR file	<ul style="list-style-type: none"> <li>• Contains a MIDI file with song lyrics for Karaoke.</li> <li>• Songs appear in green within a music list.</li> </ul>
Wav File	<ul style="list-style-type: none"> <li>• Standard personal computer audio file format.</li> <li>• Songs appear in blue within a music list.</li> </ul>

---

*Intentionally Blank*

# Glossary

---

## **BPM**

Beats per minute.

## **Conductor Tablet**

A wireless webpad that uses a web browser to display the user interface.

## **Control Box**

A CPU (central processing unit) mounted underneath the piano. It stores the Opus7 software and the Music Expansion 3 (MX3) hard-drive.

## **Cue**

A play mode that requires the user to press play before each song. Songs are cued in sequential order.

## **iMic**

A USB audio adapter that provides a stereo output. While the Opus7 system produces high quality sound with minimal noise, using an iMic to connect the Control Box to the SMI Box increases the signal to noise ratio.

## **KAR files**

MIDI files with song lyrics added; a combination of MIDI data and text used for karaoke; does not contain audio data.

---

### **Media Source**

A drive or directory that music is stored in. Opus7 has four possible media sources: MX3 (Music Expansion 3), CD, floppy disk (FD) and Internet.

### **MIDI (Musical Instrument Digital Interface)**

A connectivity standard that musicians use to connect musical instruments (such as keyboards and synthesizers) and computer equipment. Using MIDI, a musician creates and edits digital music tracks. The MIDI system digitally records: notes played, length of the notes, dynamics (volume alterations), tempo, and instrument being played.

Because MIDI records each note digitally, editing a track of MIDI music is much easier and more accurate than editing a track of audio. Musicians can change the notes, dynamics, tempo, and even the instrument played.

### **MIDI Controller**

A device, real or virtual, which generates and transmits MIDI data for operating musical devices or other devices which are electronically enabled for MIDI operation.

### **MIDI file**

A computer file format containing musical information and performance data. MIDI files are binary files that require MIDI compatible hardware or software to record and playback. Type 0 MIDI files = one track. Type 1 MIDI files = multiple tracks.

### **MIDI Sound Module**

A stand-alone device or synthesizer that generates music based on an incoming MIDI signal.

---

### **Music Library**

A collection of audio files such as downloaded songs/ albums or music loaded onto Opus7.

### **MX3**

Music Expansion 3. A hard drive containing PianoDisc music or music loaded onto Opus7.

### **Normal**

A play mode that sets playback of music in sequential order.

### **Normal Mode**

A recording mode in which recording begins the moment the Record button is activated. Lag time between the start of recording and the start of play is recorded.

### **PDA (Personal Digital Assistant)**

A handheld computer that serves as an organizer for personal information. It generally includes at least a name and address database, to-do list and note taker. PDAs may be combined with cell phones and other wireless technologies, providing a mobile office for people on the go.

PDAs are pen based and use a stylus to tap selections on menus and to enter printed characters. The unit may also include a small on-screen keyboard which is tapped with the pen. Data are synchronized between the PDA and desktop computer via cable or wireless transmission.

PDAs with a wireless connection and web browser can be used to access Opus7.

---

**PianoCast**

An Internet radio broadcast that streams both audio and MIDI data music.

**Playlist**

A custom index of music that plays in a customized order. You can arrange or customize your own playlists by artist, genre or mood.

**Power-line Networking**

A method of networking computers by using electrical wiring within a home or office.

**Product Interface**

The combination of menus, screen design, keyboard commands, command language and online help, which creates the way a user interacts with a computer.

**Repeat**

A play mode that repeats playback of music previously played. This mode can be used in conjunction with the Normal, Shuffle, Cue and Single play modes.

**Serial MIDI Interface**

Connects the Control Box to the SilentDrive. It has a MIDI In port to connect to an external MIDI controller, and a MIDI Out port to connect to a variety of optional MIDI Sound Modules.

**Shuffle**

A play mode that selects and plays music in random order.

### **SilentDrive**

An electro-mechanical system that plays the piano by controlling the keys and pedals.

### **Single**

A play mode that sets playback for only one song.

### **Smart Mode**

A recording mode in which recording begins the moment music starts playing.

### **Text Editor**

A program that enables users to create and edit text files.

### **Track**

A single song or piece of music on an audio CD or proprietary music floppy. Also refers to a single recording session within a MIDI file.

### **Wave file**

A Wave file is an audio file format, created by Microsoft, that has become a standard PC audio file format for everything from system and game sounds to CD-quality audio. A Wave file is identified by a file name extension of WAV (.wav). Used primarily in PCs, the Wave file format has been accepted as a viable interchange medium for other computer platforms, such as Macintosh. In addition to the uncompressed raw audio data, the Wave file format stores information about the file's number of tracks (mono or stereo), sample rate, and bit depth.



### **Webpad**

A handheld, wireless device designed for Web browsing. A Webpad is like a laptop computer without a fold-down screen and keyboard, which is why it is also called a *Web slate* or *tablet computer*.

### **Wireless Router**

A wireless network device used to extend communication between the *Control Box* and the *Conductor Tablet*, and serves as a connection point for Internet access.

# Appendix

---

## Customized Playlist

Although Opus7 features a built-in playlist editor for simple playlists, you can use a **text editor** (e.g. Wordpad, Notepad, etc.) to create a customized playlist. Type the information for each item, then save the playlist on a CD, floppy disk or network drive, or copy it to the MX3 drive.

### To create a playlist in a text editor:

1. Specify the playlist filename. (**Note:** The filename extension is **.pdl**).
2. Specify the following playlist components: **structure, programming commands, operators, media types** and/or **repeat suffix**. (See **Playlist Components** for more information.)

**Note:** A song's filename includes the file extension (e.g. **.mid, .wav, .ogg, .kar**, etc.) To specify a song, always include the filename and extension.

## Playlist Components

**Playlist File Format.** PianoDisc playlists are plain text files with the file name extension **.pdl**.

**Structure.** A playlist consists of one or more sections. Each section consists of: command, count (optional), media type, and a repeat value. Example:

```
play count  
{  
add media  
remove media  
} repeat
```

**Commands.** A command must start each section of a playlist. Each command can be followed by a *count* (the number of songs to play). After the specified number of songs is played, section playback is complete.

If a repeat value is specified at the end of a section, songs are played again. For example, if the repeat value is (3), the section plays three times.

### Playlist programming commands:

- **Play** - songs are played sequentially.
- **Shuffle** - songs are played in random order. A song is not repeated until all songs within a section are played. A section is not repeated until all songs within the section are played.
- **Cue** - songs are played sequentially, but you must tap **Play** before each song.

**Operators.** An operator must precede each *media line* in a section.

**Use the following operators in a media line:**

- The **+** adds a media source.
- The **-** removes a media source.

**Media.** Media lines list the media source to include or exclude from a playlist. Each line consists of an operator and media type.

**Media types are:**

- **fd** - specifies the floppy disk as the media type. Supports libraries and tracks.
- **cd** - specifies CD as the media type. Supports libraries and tracks.
- **mx** - specifies the MX3 drive as the media type. Supports libraries.
- **nt** - specifies the Internet as the media type. Supports libraries.

**To build a media line:**

- Enclose each section in braces.
- Enter an operator then a media type.
- List the media line without a library/track to indicate inclusion or exclusion of all songs on the media type OR
- List a library/track to indicate the addition/removal of all songs in the library
- List a song's file name to indicate the addition/removal of a single song.

**Remember:** The operator used in the media line determines whether to include, exclude, add or remove music.

- Separate the media type, library, and song with a forward slash (/).

---

**In the media line sample below:**

- All songs on the MX3 drive are added to the playlist.
- The Musical Memories library is removed.
- A single song is added from the floppy disk.

```
{  
  
+mx  
  
-mx/Musical Memories  
  
+fd/3  
  
}
```

**Repeat Suffix.** A numeric value that specifies the number of times a playback section is repeated. The value follows the closing brace of the playback section.

**Note:**

- If the value is (0), playback is repeated indefinitely. The user must tap **Stop** to discontinue.
- If no value is specified, the section is played back once.

**What does the tilde (~) after the song title mean?**

Songs included on the MX3 drive or purchased from PianoDisc may have a tilde (~) and number after the song title. This designation is a PianoDisc catalog number and should be included in the song title.

---

## Playlist Examples

**Note:** A song's filename includes the file extension (e.g. **.mid**, **.wav**, **.ogg**, **.kar**, etc.) To specify a song, always provide the complete filename.

- Play once - all songs - all media types.

```
play
{
+mx
+cd
+fd
+nt
}
```

- Shuffle 10 songs - MX3 - CD - floppy disk media types.

```
shuffle 10
{
+mx
+cd
+fd
}
```

- Cue first (5) songs - MX3 media type - Exclude *Rhapsody in Blue*.

```
cue 5
{
+mx
-mx/Musicals/Rhapsody in Blue~PD4008.mid
}
```

- 
- Play (6) songs - MX3 media type - *Theme* music library - sequential order.

```
play
{
+mx/Theme/CANADA.mid
+mx/Theme/USA.mid
+mx/Theme/FRANCE.mid
+mx/Theme/AFRICA.mid
+mx/Theme/GERMANY.mid
+mx/Theme/SWITZERLAND.mid
}
```

- Shuffle (5) songs - MX3 media type - *Candlelight* music library.

```
shuffle 5
{
+mx/Candlelight
}
```

- Shuffle all songs - MX3 media type - *Candlelight* music library - repeat playback (5) times.

(**Note:** First playback, then repeated four more times equals a repeat of five times.)

```
shuffle
{
+mx/Candlelight
}
5
```

- Play all songs - MX3, CD, Internet and floppy media types - Exclude *Theme* music library on MX3 - Exclude *Track 5* on floppy disk.

```
play
{
+mx
+cd
+nt
+fd
-mx/Theme
-fd/5
}
```

- Shuffle all songs on MX3 once - Shuffle all songs on floppy once - Sequentially play songs on CD.

```
shuffle 1
{
+mx
}
shuffle 1
{
+fd
}
play
{
+cd
}
```



## Figures

FIGURE 1-1. Conductor Tablet - Front Panel .....	30
FIGURE 1-2. Conductor Tablet - Side View .....	31
FIGURE 1-3. Conductor Tablet - Rear Panel .....	32
FIGURE 1-4. Control Box .....	33
FIGURE 1-5. Wireless Router .....	34
FIGURE 1-6. Opus7 User Interfaces .....	37
FIGURE 1-7. Media Sources .....	41
FIGURE 1-8. Destination of copied music .....	46
FIGURE 1-9. Merge - Select MIDI Source .....	49
FIGURE 1-10. Main Tab - New Library .....	56
FIGURE 1-11. Main tab - New List .....	58
FIGURE 1-12. Normal Play Mode .....	67
FIGURE 1-13. Program - Play Mode .....	67
FIGURE 1-14. Performance tab - Instrument .....	72
FIGURE 1-15. Performance tab - Channel Mask .....	73
FIGURE 1-16. Performance - Key Mask .....	75
FIGURE 1-17. Backstage - Date & Time .....	82
FIGURE 1-18. Backstage - Network .....	84
FIGURE 1-19. Whole House Audio Wiring .....	96

*Intentionally Blank*



## FAQs

Are there any copy restrictions? .....	36
Are there any move restrictions? .....	39
Can I see song titles? .....	32
Do I need to use Merge to play PianoSync performances? .....	33
How can I receive eMusic delivery immediately? .....	83
How long does it take to copy a CD? .....	36
What are recording modes and how do I change them? .....	44
What do media sources contain? .....	31
What happens when a playlist is created? .....	46
What is Remote Debugging? .....	75
What is the default status for file sharing? .....	74
What music sources can I merge? .....	38
What's the difference between double-tap and single-tap? .....	10
Why do the library and song titles appear in different colors? ..	11

*Intentionally Blank*

---

# INDEX

## A

add, music to a playlist .....	59
alerts, enable .....	81
auxiliary audio .....	65
adjust .....	65
mute .....	65

## B

Backstage tab 77	
Alerts .....	81
description .....	81
enable .....	81
Date & Time .....	81
description .....	81
set date & time .....	82
set time zone .....	81
Defaults .....	79
copy system default to floppy .....	79
description .....	79
load from floppy .....	79
restore .....	79
Import .....	80
description .....	80
enable CD error fix .....	80
Info .....	80
description .....	80
display information .....	80
Network .....	84
description .....	84
enable file sharing .....	84
remote debugging .....	85

---

Recording .....	83
description .....	83
recording setup .....	83
Symphony .....	77
description .....	77
selecting symphony accompaniment type .....	77
Updates .....	78
description .....	78
manually download .....	78
automatic download .....	78
button description .....	15

## **C**

CD - eject .....	21
CD Drive .....	29, 40
channel mask.....	73
description .....	73
unmasking channel .....	74
using .....	73
Conductor Tablet .....	17, 29
using .....	30
Control Box.....	16, 29
using.....	33
copy .....	46
copy all music .....	46
copy music library .....	46
copy restrictions .....	47
copy specific songs .....	47
customize playlist .....	106

---

## D

delete .....	52
delete music library .....	52
delete music from a playlist .....	59
delete music library .....	52
delete song.....	52
digital audio .....	64
adjust .....	64
mute .....	64

## E

electronic music delivery .....	91
---------------------------------	----

## F

file formats.....	97
file sharing, enable.....	84
floppy drive .....	29
deselect .....	21

## H

Hardware .....	29
----------------	----

## I

import .....	80
description .....	80
fix CD errors and skips .....	80
iMic.....	40, 96
information .....	80
status .....	80
system configuration .....	80

---

Internet .....	91
connection .....	91

## **K**

key mask .....	75
description .....	75
using .....	75
unmasking .....	76

## **M**

Main tab .....	40
description .....	40
Copy .....	46
copy all music .....	46
copy music library .....	46
copy specific songs .....	47
description .....	46
Delete .....	52
delete music library .....	52
delete song .....	52
Edit List .....	59
edit playlist .....	59
Merge .....	48
description .....	48
merge with audio CD .....	48
play merged music .....	49
Move .....	50
description .....	50
move music .....	50
restrictions .....	50
Name .....	51
description .....	51
rename music library .....	51
rename song .....	51



---

New Library .....	56
create new music library .....	56
description .....	56
New List .....	57
create .....	57
description .....	57
exclude music .....	58
Schedule .....	45
description .....	45
schedule music for playback .....	45
master audio .....	62
adjust .....	62
mute .....	62
master controller .....	62
media, selecting .....	41
media source .....	18, 40
merge, MIDI files .....	48
merged music, play .....	49
metronome .....	71
description .....	71
enable .....	71
microphone audio, adjust .....	65
MIDI Controller .....	35
MIDI In .....	35
connecting .....	35
MIDI Out .....	36
connecting .....	36
MIDI Sound Module .....	36

---

move music .....	50
move music music up or down a playlist .....	59
move restrictions .....	50
Mute Sound .....	25
MX3 .....	33, 100

## **N**

network security .....	90
Normal Mode .....	55, 83

## **P**

PC .....	87
access MX3 from .....	89
connection .....	88
system requirements .....	88
Performance Tab .....	69
Channel Mask .....	73
description .....	73
masking a channel .....	73
unmask a channel .....	74
Instrument .....	72
description .....	72
enable .....	72
select .....	72
Key Mask .....	75
description .....	75
masking a key .....	75
unmasking keys .....	76
Metronome .....	71
description .....	71
enable .....	71

---

Sync .....	71
description .....	71
sync piano & accompaniment .....	71
Tempo .....	69
description .....	69
set tempo .....	69
Transpose .....	70
description .....	70
transpose key .....	70
piano audio .....	63
adjust .....	63
mute .....	63
PianoCast .....	91
using .....	92
PianoSync .....	42
using .....	42
play mode, setup .....	66
play modes .....	66
cue .....	66
normal .....	66
repeat .....	66
shuffle .....	66
single .....	66
Play Music .....	19

---

Playlist .....	57
build a media line .....	108
commands .....	107
create .....	57
description .....	57
edit .....	59
examples of .....	110
file format .....	107
media type .....	108
operators .....	108
repeat suffix .....	109
structure .....	107
add music .....	59
delete music .....	59
exclude music .....	58
move music up or down .....	59
power light .....	30
Product Interface .....	14, 37
access to .....	17
Flash .....	37
HTML .....	37, 38
Simplified HTML .....	37
Program tab .....	66
description .....	66
Play Mode .....	66
set play mode .....	66
Schedule .....	68
description .....	68
schedule music .....	68

---

## R

Record .....	23, 53
record new song .....	23, 53
record new track for existing recording .....	24, 54
recording modes .....	83
recording, setup .....	83
recording, source .....	83
remote debugging, enable .....	85
reset the system .....	21

## S

Schedule Music .....	22
Serial MIDI Interface .....	29
using .....	35
Shuffle Music .....	21
SilentDrive .....	29
description .....	35
sleep mode .....	30
Smart Mode .....	55, 83
SMI .....	35
Stop Music .....	21
symphony accompaniment .....	77
description .....	77
selecting .....	77
symphony audio .....	63
adjust .....	63
mute .....	64

---

Symphony Pro .....	77
sync .....	71
description .....	71
piano & accompaniment .....	71
system date .....	81
description .....	81
set date .....	82
set time zone .....	81
system default .....	79
copy to floppy .....	79
load from floppy .....	79
restore .....	79
System Settings .....	26
restore .....	26
system time .....	81
description .....	81
set time .....	82
set time zone .....	81
system updates .....	78

## **T**

tab description .....	14
Tabs .....	38
text editor .....	106
transpose key .....	70
transpose, description .....	70

---

## U

updates .....	78
automatic download .....	78
description .....	78
manually download .....	78

## V

Volume .....	25
adjust volume levels .....	25
Volume tab .....	62
description .....	62
Auxiliary .....	65
adjust .....	65
description .....	65
mute .....	65
Digital .....	64
adjust .....	64
description .....	64
mute .....	64
Master .....	62
adjust audio .....	62
description .....	62
mute .....	62
Microphone .....	65
adjust .....	65
description .....	65
Piano .....	63
description .....	63
mute .....	63
Symphony .....	63
adjust .....	63
description .....	63
mute .....	64

---

## **W**

Wireless Router .....	17, 29
using .....	34



---

## OPUS7 MX3 Music List

## Candlelight & Wine

A Cottage For Sale.....	PD2406
After The Gold Rush.....	PD2401
Anything Can Happen .....	PD2408
As Time Goes By .....	PD2402
Autumn Leaves .....	CD12401
Black Orpheus.....	PD2407
Blue Velvet .....	PD2407
Body And Soul .....	CD12401
Body And Soul .....	PD2404
Cheek To Cheek .....	PD2406
Close To You .....	PD2407
Edelweiss .....	PD2401
Fire And Rain .....	PD2401
Fly Me To The Moon .....	PD2403
Full Moon .....	PD2406
Georgia On My Mind .....	CD12401
Go Away From My Window.....	PD2405
Here I'll Stay .....	PD2405
I Didn't Know.....	PD2406
I'll Be Seeing You .....	CD12402
Lil' Darlin' .....	CD12402
Love Is A Many Splendored Thing .....	PD2402
Lush Life .....	PD2403
Moon River .....	PD2407
Morning Dance.....	CD12401
My Funny Valentine .....	CD12401
My Little Boat .....	CD12401

---

Oh What A Beautiful Morning .....	CD12402
Old Devil Moon.....	CD12402
Over The Rainbow .....	PD2402
Picnic.....	PD2408
Red Roses For A Blue Lady.....	PD2404
She's Always A Woman .....	CD12402
Skylark .....	PD2407
Some Enchanted Evening .....	CD12403
Start Of Something Big .....	PD2408
Tangerine .....	CD12402
The Rains Of April.....	PD2408
This Masquerade .....	PD2403
Unchained Melody .....	PD2405
Unforgettable.....	PD2407
What A Difference A Day Makes.....	PD2407
When I Fall In Love.....	CD12403
When I Fall In Love.....	PD2404
When Sunny Gets Blue.....	CD12401
Witchcraft.....	CD12401

## Christmas

Angels We Have Heard On High .....	CD19001
Angels We Have Heard On High .....	PD9005
Ave Maria .....	PD9006
Away In A Manger .....	CD19001
Away In A Manger .....	PD9005
Bells Of Joy .....	PD9005
Carol Of The Bells .....	CD19001
Carol Of The Bells .....	PD9005
Charlie Brown .....	PD9004
Christmas Eve .....	PD9004
Christmas Meditation .....	PD9005
Christmas Medley .....	CD19001
Coventry Carol .....	CD19001
Coventry Carol .....	PD9006
Cradle For A Lamb .....	PD9005
Deck The Halls .....	CD19002
Deck The Halls .....	PD9001
Fairest Lord Jesus .....	PD9005
For Unto Us A Child Is Born .....	PD9002
Frosty The Snowman .....	CD19002
Frosty The Snowman .....	PD9004
Go Tell It On The Mountain .....	PD9006
God Rest Ye Merry, Gentlemen .....	PD9005
Good King Wenceslas .....	PD9005
Hard Candy Christmas .....	PD9001
Hark! The Herald Angels Sing .....	PD9006
Hark! The Herald Angels Sing .....	CD19001

---

Have Yourself A Merry Little Christmas .....	PD9003
I Heard The Bells On Christmas Day .....	CD19002
I Wonder As I Wander .....	PD9002
It Came Upon A Midnight Clear.....	PD9005
It's Beginning To Look A Lot Like Christmas.....	CD19002
It's Beginning To Look A Lot Like Christmas.....	PD9003
Jesu Bambino .....	PD9002
Jesu, Joy Of Man's Desiring .....	PD9005
Jingle Bells .....	PD9003
Joy To The World .....	PD9002
Let It Snow, Let It Snow, Let It Snow .....	CD19002
Lo How A Rose E'er Blooming .....	PD9006
Masters In This Hall .....	PD9002
O Come All Ye Faithful .....	CD19003
O Come, All Ye Faithful .....	PD9005
O Come, O Come Emmanuel .....	PD9005
O Come, O Come Emmanuel .....	CD19001
O Holy Night.....	CD19001
O Holy Night.....	CD19005
O Holy Night.....	PD9006
Rudolph The Red-nosed Reindeer.....	PD9003
Santa Baby.....	CD19004
Silent Night .....	PD9005
Silver And Gold .....	PD9001
Silver Bells .....	PD9003
Still, Still, Still.....	PD9002
The Christmas Song.....	CD19002
The Christmas Song.....	PD9006
The First Noel .....	PD9005

**Christmas**

---

The Star Medley .....	CD19003
Twelve Days Of Christmas .....	CD19002
We Three Kings Of Orient Are.....	CD19001
We Three Kings Of Orient Are.....	PD9002
We Three Kings Of Orient Are.....	CD19005
We Wish You A Merry Christmas .....	CD19002
What Child Is This? .....	CD19001
What Child Is This? .....	PD9006
While Shepherds Watched Their Flocks .....	PD9005
White Christmas.....	PD9006
Winter Holiday .....	PD9004

---

## Classical

Aeolian Harp Etude .....	PD3018
Aida Selections.....	PD3010
Allelujah!.....	PD3010
Andante Con Moto Tranquillo .....	CD13004
Anime.....	PD3016
Arabesque No. 2.....	PD3001
Arabesque .....	PD3011
Arabesque .....	PD3020
Aria .....	CD13005
Baba Yaga, Kiev Gate .....	PD3019
Ballade In F Minor .....	PD3022
Blue Danube Waltz .....	CD13002
Butterfly Etude.....	PD3022
Carmen-habanera.....	PD3023
Carnaval-pierrot .....	PD3023
Chopin: Minute Waltz .....	PD3023
Clair De Lune .....	PD3029
Cujus Animam .....	PD3011
Danse Macabre .....	PD3015
Danse Des Elfes .....	PD3010
Emperor Waltz .....	CD13002
Etude Op. 10 No. 8 .....	PD3020
Etude Op. 10 No. 3 .....	PD3024
Etude Op. 104 No. 1 .....	PD3012
Fugace.....	CD13004
Fur Elise	
Gavotte Op. 5 No. 2.....	PD3014

Ghost: Dance Terror .....	PD3030
Gigue .....	PD3016
Grieg Conc. Mvt. 1.....	PD3009
Grieg Conc. Mvt. 2.....	PD3009
Hungarian Dance No. 1 .....	CD13002
Hungarian Dance No. 5 .....	CD13002
Hungarian Dance No. 6 .....	CD13002
Hungarian Rhapsody.....	PD3010
I Love Thee .....	CD13005
Intermezzo.....	CD13005
Islamey.....	PD3018
Jazzy .....	CD13004
Jesu, Joy Of Man's Desiring.....	PD3023
K.467 Allegro Maestoso .....	CD13001
K.467 Andante.....	CD13001
K.488 Allegro.....	CD13001
K.332 1st Movement.....	PD3020
K.333 - Andante.....	PD3017
K.576 - Adagio.....	PD3017
K.576 - Allegretto.....	PD3017
Loure.....	PD3016
Meditation .....	CD13005
Melodie In F.....	CD13005
Melodie .....	CD13005
Menuet .....	CD13005
Modere .....	PD3016
Molto Allegro Ed Agitato .....	CD13004
Moonlight Sonata	
Mouvement De Menuet.....	PD3016



---

New World Symphony .....	PD3014
Nocturne In B Major.....	PD3018
Nocturne In F# Major.....	PD3015
Pastoral Variations .....	PD3011
Pester Karneval .....	CD13002
Peter And The Wolf	
Polovetsian Dance	
Prelude & Fugue In G Minor .....	PD3030
Prelude .....	PD3030
Reflets Dans L'eau .....	PD3022
Rigoletto Paraphrase .....	PD3016
Romance Sans Paroles .....	PD3024
Sabrina .....	CD13005
Scherzo - Leggero E Vivace.....	CD13004
Scherzo Op. 16 No. 2 .....	PD3012
Sevillanas.....	PD3015
Sicilienne .....	CD13005
Sonata In B Flat Major K.488 .....	PD3021
Sonata In C Major K.501 .....	PD3021
Souvenir De Porto Rico.....	PD3018
Spinning Song.....	PD3022
Staccato Caprice .....	PD3010
The Swan .....	CD13005
To Spring .....	PD3013
Traumerei.....	CD13005
Troika .....	PD3008
Trois Ecosaise.....	PD3012
Un Sospiro .....	PD3022
Valse In C# Minor.....	PD3022

**Classical**

---

Valse .....	PD3024
Veloce.....	CD13004
Waltz Op.64 No.2 .....	PD3010
Waltz Op.64 No.3 .....	PD3010

---

## Country & Western

A Better Man .....	CD11004
Always On My Mind.....	PD1003
Behind Closed Doors.....	CD11004
Blue Eyes Cryin' In The Rain .....	PD1003
Blueberry Hill Medley .....	CD11005
Chattanooga Choo Choo .....	PD1003
Cool Water .....	CD11004
Crazy.....	CD11005
Dim Lights, Thick Smoke And Loud Music.....	CD11004
Don't It Make My Brown Eyes Blue.....	PD1001
Don't You Know How Much I Love You .....	CD11004
Faded Love.....	PD1003
Friends And Lovers .....	PD1001
Friends In Low Places.....	CD11004
Georgia On My Mind.....	CD11005
God Bless The Usa.....	PD1002
Grandpa Tell Me About The Good Old Days.....	PD1002
Green, Green Grass Of Home .....	PD1003
Help Me Make It .....	PD1003
I Believe In Music .....	PD1001
I Can't Stop Lovin' You .....	PD1003
I'm So Lonesome I Could Cry .....	CD11004
If The Devil Danced In Empty Pockets .....	CD11004
If You Love Me Let Me Know.....	CD11004
Jose Cuervo .....	CD11004
Last Date .....	CD11005
Last Date .....	PD1003

A Long And Lasting Love .....	PD1001
Love Me Tender .....	PD1003
Memory .....	CD11005
Most Beautiful Girl In The World .....	PD1001
Mountain Music .....	PD1001
New Fool At An Old Game.....	PD1002
Put Your Hand In The Hand.....	PD1001
Root Beer Rag.....	PD1003
San Antonio Rose .....	CD11005
She Keeps The Home Fires Burning.....	PD1002
Slow Hand.....	PD1002
Southern Nights .....	CD11004
Southern Nights .....	PD1001
Stand By Your Man .....	PD1002
Sunrise Serenade .....	CD11005
The Homecoming .....	PD1003
The Rose.....	PD1001
Tulsa Time.....	CD11004
Vows Go Unbroken .....	CD11004
We've Got Tonight .....	PD1001
You Decorated My Life.....	CD11004
You Don't Know Me.....	CD11005
Your Cheatin' Heart.....	PD1002

---

## Jazz

's Wonderful .....	CD16005
Agua De Beber.....	CD16007
All The Things You Are .....	.pd6006
Amazone.....	CD16004
As Time Goes By .....	PD6005
Baroque And Blue.....	CD16003
Bess, You Is My Woman .....	CD16005
Blue Bossa .....	CD16001
Blue Charlie Brown .....	CD16001
Blue Prelude .....	CD16003
Brazil .....	CD16006
Broadway .....	CD16004
C Jam Blues.....	PD6009
Cherokee .....	CD16006
Darn That Dream .....	PD6008
Days Gone By .....	CD16016
Do Nothing Till You Hear From Me.....	PD6009
Don't Mean A Thing If Ain't Got That Swing .....	PD6009
Embraceable You .....	CD16004
Emily .....	PD6010
Fascinating Rhythm .....	CD16005
Heidi's Song .....	CD16010
Hot Salsa .....	CD16009
How Deep Is The Ocean .....	PD6010
I Will Be Here For You .....	CD16008
In My Highest Place .....	PD6010
It's You .....	CD16008

Killer Joe .....	CD16003
Killer Joe .....	CD16009
Make Me A Memory .....	CD16008
Makin' Whoopee .....	PD6003
Mas Que Nada.....	CD16008
Misty .....	PD6008
Moondance .....	CD16015
More Than You Know .....	PD6007
My Blue Heaven .....	PD6007
My Funny Valentine .....	PD6005
My Romance .....	CD16004
Nardis.....	CD16004
Night In Tunisia .....	PD6004
Oh Lady, Be Good.....	CD16005
Oleo .....	CD16004
On Green Dolphin St.....	PD6008
On The Alamo .....	CD16003
Pensativa .....	PD6006
Pick Yourself Up .....	PD6008
Playin'.....	CD16016
Prelude To A Kiss.....	PD6009
Pretty Women .....	PD6006
Punta Del Soul .....	CD16008
Samba Alegre .....	CD16008
Seaside.....	CD16003
Sentimental Journey .....	CD16006
Serpentine Fire .....	CD16016
Sheik Of Araby.....	PD6007
Sol To Soul .....	CD16501

---

Someone To Watch Over Me.....	CD16005
Songbird .....	CD16008
St. Thomas.....	CD16004
Star Eyes .....	PD6010
Stonewall Blues.....	PD6004
Stormy Weather .....	PD6005
Sunny Side Up .....	CD16501
Return Of The Barron .....	PD6001
The Lady Is A Tramp .....	PD6003
They Can't Take That Away From Me .....	CD16005
Threnody.....	PD6006
Triste .....	CD16004
Tropical Breeze.....	CD16008
Tuxedo Junction .....	CD16006
Wave .....	CD16002
We'll Be Together Again .....	CD16004
Witchi Tai-to .....	CD16010
Woodchopper's Ball.....	CD16006
Younger Than Springtime .....	PD6003

## Musical Memories

Begin The Beguine.....	PD2201
Bess You Is My Woman .....	PD2205
Blue Monday.....	PD2206
Bumble Boogie.....	PD2201
Embraceable You.....	PD2205
I Get A Kick.....	PD2203
I Got Rhythm.....	PD2204
I've Got You Under My Skin .....	PD2203
It Ain't Necessarily So.....	PD2204
It's De Lovely.....	PD2203
Jilted .....	PD2205
Lullaby.....	PD2206
Meadow Serenade .....	PD2205
Nice Work If You Can Get It .....	PD2204
Prelude No. 1 .....	PD2206
Prelude No. 4.....	PD2206
Prelude No. 6.....	PD2206
Sleepless Night .....	PD2205
Someone To Watch Over Me.....	PD2205
Summertime.....	PD2205



---

## Musicals

A Wonderful Guy .....	PD4005
All I Ask Of You .....	PD4004
At The End Of The Day .....	PD4004
Can't Help Lovin' Dat Man.....	PD4005
Climb Every Mountain .....	PD4001
Edelweiss .....	PD4003
Hear The People Sing .....	PD4004
I Feel Pretty .....	PD4002
I've Grown Accustomed To Her Face.....	PD4002
I'm Gonna Wash That Man Right Out Of My Hair .....	PD4005
If Ever I Would Leave You .....	PD4003
If I Were A Rich Man .....	PD4001
Ol' Man River .....	PD4005
Overture - Show Boat .....	PD4005
Summertime.....	PD4001
Sunrise, Sunset.....	PD4003
Try To Remember .....	PD4002
Tomorrow .....	PD4001

## New Age

Angel Voices .....	CD17001
Day After Day .....	PD7003
Everything Must Change .....	CD17001
Fire And Rain .....	PD7002
Girl I Love You .....	PD7003
Greensleeves .....	PD7002
Keys To The Heart .....	CD17001
Layla .....	PD7003
Scarborough Fair .....	PD7002
The Water Is Wide .....	CD17001
Tuscany .....	PD7001
Vincent .....	PD7002
While My Guitar .....	PD7001

---

## Popular

A Summer Place.....	CD12001
After The Love Is Gone.....	CD12013
Aja .....	PD2007
Alone Again Naturally.....	CD12011
America .....	CD12012
Aubrey.....	CD12011
Axel F. Theme .....	CD12006
Baby Grand .....	PD2006
Back In The Highlife.....	PD2003
Back In The Ussr .....	PD2004
Blackbird .....	PD2002
Blue On Blue.....	CD12004
Blue Suede Shoes.....	CD12004
Bridge Over Troubled Water .....	CD12007
Bridge Over Troubled Water .....	CD12012
California Dreaming .....	PD2005
Clair .....	CD12011
Classical Gas.....	PD2008
Close To You .....	CD12011
Come Sail Away .....	PD2002
Daniel.....	PD2005
Do You Know The Way To San Jose .....	CD12011
Don't It Make My Brown Eyes Blue.....	PD2002
Don't Let Me Be Lonely Tonight.....	CD12012
Downtown .....	CD12011
Dust In The Wind .....	PD2002
Englishman In New York.....	CD12002

Popular

---

Every Breath You Take .....	CD12013
Every Time You Go Away .....	CD12009
Fantasy .....	CD12013
Fire & Rain .....	CD12012
Georgy Girl.....	PD2006
Good Vibrations.....	PD2008
Goodbye Yellow Brick Road .....	CD12009
Heard It Through The Grapevine.....	PD2003
Hold The Line.....	CD12013
Homeward Bound .....	CD12012
Hotel California .....	CD12012
How Sweet It Is .....	CD12012
How Will I Know .....	CD12006
Ice Castles .....	CD12011
Isn't She Lovely .....	PD2001
Jamaica Farewell .....	PD2006
Johnny B. Goode .....	CD12009
Kokomo .....	CD12002
Laughter In The Rain .....	CD12011
Listen To The Music.....	CD12014
Longer .....	CD12011
Love Me Like A Rock .....	PD2006
Margaritaville.....	CD12013
Maybe I'm Amazed .....	PD2007
Moondance .....	PD2006
My Cherie Amour.....	CD12007
My Cherie Amour.....	CD12011
Never My Love .....	CD12004
New Kid In Town .....	CD12012

---

New York State Of Mind.....	PD2005
Nights In White Satin .....	PD2008
Old Time Rock & Roll.....	CD12007
Raindrops Keep Falling On My Head .....	CD12007
Rosanna .....	CD12013
Roundabout .....	PD2007
Running With The Night.....	CD12002
Songbird .....	PD2003
Sounds Of Silence .....	CD12004
Sweet Love.....	PD2003
Takin' It To The Streets .....	CD12014
Tears In Heaven .....	CD12013
Tequila Sunrise.....	CD12012
Tequila .....	CD12004
That'll Be The Day .....	CD12009
The Summer Knows.....	CD12011
The Way It Is.....	PD2005
Tijuana Taxi .....	CD12001
Time In A Bottle .....	CD12009
Tin Man.....	CD12013
Traces.....	CD12001
Unchained Melody .....	CD12004
What A Fool Believes.....	CD12014
When I'm 64.....	PD2006
Where Do I Begin .....	CD12011
Wind Beneath My Wings.....	CD12006
You've Got To Hide Your Love Away.....	PD2004

## Ragtime & Stride

Tain't Nobody's Bizness If I Do .....	PD5012
Ain't She Sweet.....	PD5010
Ain't Misbehavin' .....	PD5009
Alabama Dream .....	PD5005
Black Beauty.....	PD5010
Beat Me Daddy Eight To The Bar.....	PD5012
Ben Hur Chariot Race.....	PD5007
Blue Turning Gray Over You .....	PD5009
Blues In The Night.....	PD5012
Charleston Rag .....	PD5009
Cow Cow Boogie.....	PD5012
Cuban Love Song .....	PD5007
Death Ray Boogie.....	PD5007
Deep Elm Blues .....	PD5004
Dude .....	PD5008
Easy Winners.....	PD5001
Ecuadorian Memories .....	PD5009
Elephant .....	PD5007
Entry Of The Gladiators .....	PD5007
Glow Worm.....	PD5008
Great Scott Rag .....	PD5002
Honeysuckle Rose.....	PD5010
Haitian Blues .....	PD5004
Hello Love .....	PD5009
Honky Tonk Train.....	PD5012
Hot Chocolate .....	PD5001
How Long Blues .....	PD5009

---

I Ain't Got Nobody .....	PD5010
I'm Crazy 'bout My Baby.....	PD5002
If I Could Be With You One Hour Tonight.....	PD5009
Ja-da .....	PD5010
Judy .....	PD5010
Jail House Blues .....	PD5004
Joplin's New Rag .....	PD5006
Kansas City .....	PD5012
Kitten On The Keys .....	PD5001
Lazy River .....	PD5010
Love Is Just Around The Corner .....	PD5010
Let Me Call You Sweetheart.....	PD5008
Lonesome Mama Blues .....	PD5004
Maple Leaf Rag .....	PD5006
Mr. Jelly Lord .....	PD5003
Muscle Shoals Blues.....	PD5012
Neapolitan Nights .....	PD5007
Oh! Lady Be Good .....	PD5010
Pacific Coast Blues .....	PD5005
Papa Better Watch Your Step.....	PD5003
Pennies From Heaven.....	PD5008
Pianodisc Boogie .....	PD5012
Pinetop's Boogie Woogie.....	PD5012
Railroad Blues .....	PD5004
Rialto Ripples.....	PD5005
Rollin' The Boogie .....	PD5012
Rosetta .....	PD5001
Rubies And Pearls .....	PD5003
Something Doing.....	PD5006

Spanish Venus .....	PD5009
St. Louis Blues .....	PD5005
Stars 'n' Stripes .....	PD5008
Stormy Weather .....	PD5008
Take Me Out To The Ball Game .....	PD5008
The Cascades.....	PD5006
The Entertainer .....	PD5006
Tia Juana .....	PD5002
Vicksburg Blues.....	PD5012
When I Take My Sugar To Tea.....	PD5010
Washington Post.....	PD5008
Weeping Willow .....	PD5001
What'd I Say? .....	PD5012
Working Man Blues .....	PD5009



---

## Sacred

A Mighty Fortress Is Our God .....	PD8002
Abide With Me.....	PD8005
All Creatures Of Our God And King.....	PD8006
Amazing Grace.....	PD8005
And Can It Be .....	PD8003
And Can It Be .....	CD18004
As The Deer.....	CD18003
Brethren, We Have Met To Worship .....	PD8002
Be Glorified .....	CD18004
Blessed Assurance .....	PD8008
Come Thou Fount Of Every Blessing .....	PD8002
God Be With You .....	PD8002
Guide Me, O Thou Great Jehovah.....	PD8006
Give Thanks.....	CD18003
God Will Make A Way .....	CD18004
Golden Bells Medley.....	CD18001
He Leadeth Me .....	PD8006
He Has Made Me Glad .....	CD18003
He Hideth My Soul.....	PD8004
Hiding In Thee .....	PD8004
Horse And Rider .....	CD18004
I Am His.....	PD8003
I Need Thee Every Hour .....	PD8005
I Will Sing Of My Redeemer .....	PD8004
If Thou But Suffer God To Guide Thee .....	PD8002
Immortal, Invisible God Only Wise .....	PD8007
It Is Well With My Soul.....	PD8005

In The Garden.....	PD8008
Jesus, I Am Resting, Resting .....	PD8002
Jesus, The Very Thought Of Thee.....	PD8004
Love That Will Not Let Me Go .....	PD8005
Lead Me To The Rock .....	CD18004
Leaning On The Everlasting Arms .....	PD8008
More Precious More Silver.....	CD18004
Nothing But The Blood .....	PD8005
Now Unto Him.....	CD18003
O Could I Speak The Matchless Worth .....	PD8002
O God, Our Help In Ages Past .....	PD8002
O Sacred Head Now Wounded .....	PD8004
O, I Want To Know You More .....	CD18003
Old Rugged Cross.....	CD18001
Praise, My Soul .....	PD8006
Rock Of Ages .....	PD8004
Soon We'll Be Done With The Troubles Of The World.....	PD8007
Sweet Hour Of Prayer .....	PD8008
The Church's One Foundation.....	PD8002
There Is A Balm In Gilead.....	PD8006
There's A Song In The Air .....	PD8007
There's A Wideness In God's Mercy .....	PD8005
This Is My Father's World.....	PD8002
To God Be The Glory .....	PD8001
When Morning Gilds The Skies .....	PD8002
Were You There? .....	PD8001

## Sampler

Big Country .....	CD19903
Birdland .....	CD19903
Dance Of The Sugar Plum Fairy .....	CD19901
Have You Met Miss Jones .....	CD19903
Jesu, Joy Of Man's Desiring.....	CD19901
Limehouse Blues .....	CD19902
Love For Sale.....	CD19901
Prelude No. 1 .....	CD19903
Prelude No. 2.....	CD19903
Prelude No. 3.....	CD19903
Rosanna.....	CD19903
Russian Trepak.....	CD19902
Summertime.....	CD19903
Sweet And Lovely .....	CD19902
Tournament Galop .....	CD19901
Unchained Melody .....	CD19902
Whoever's In New England .....	CD19903

## Theme

Affair To Remember .....	PD9302
America The Beautiful .....	PD9303
Anchors Aweigh .....	PD9303
Auld Lang Syne .....	PD9303
Beer Barrel Polka.....	PD9303
Brahm's Lullaby .....	PD9303
Cheers .....	CD19301
Chim-chim-cherie .....	PD9301
Country Comedy Medley.....	CD19301
Entertainment Tonight.....	CD19301
Gentle Rain.....	PD9302
God Bless America.....	PD9303
Godfather Theme .....	PD9302
Happy Birthday .....	PD9303
Happy Trails.....	PD9303
Havah Nagilah.....	PD9303
Hi-lilli Hi-lo .....	PD9302
Hogan's Heroes .....	CD19301
I Found Love.....	PD9302
Invitation .....	PD9302
Inspector Gadget.....	CD19301
Laura.....	PD9302
Love Story.....	PD9302
Let's Go Fly A Kite .....	PD9301
Marine Hymn .....	PD9303
My Dad Can't Be Crazy, Can He .....	PD9302
Mickey Mouse March .....	PD9301

---

Mission Impossible.....	CD19301
Monster Medley .....	CD19301
Once Upon A Time In The West .....	PD9302
Pink Panther .....	PD9302
Peter Gunn .....	CD19301
Recessional.....	PD9303
Right From The Heart.....	PD9302
Rockford Files .....	CD19301
Spellbound .....	PD9302
Stella By Starlight .....	PD9302
So This Is Love .....	PD9301
Someday My Prince Will Come.....	PD9301
Spoonful Of Sugar .....	PD9301
Taxi .....	CD19301
The Bare Necessities.....	PD9301
The Odd Couple .....	CD19301
Under The Sea .....	PD9301
We're In The Money.....	PD9303
When You Wish Upon A Star .....	PD9301

## Vintage Selections

'til We Meet Again.....	PD2306
Berceuse .....	PD2303
Beyond The Blue .....	PD2304
Did You Ever See A Dream Walking .....	PD2305
Idilio.....	PD2304
Japanese Sandman.....	PD2304
Just Like A Gypsy .....	PD2306
Love, Here Is My Heart.....	PD2306
Say It Isn't So .....	PD2306
Teddy Bear's Picnic .....	PD2305
Three O'clock In The Morning .....	PD2304
Yoo Hoo .....	PD2304

## World Music

Danny Boy.....	PD9101
I'm Looking Over A Four Leaf Clover .....	PD9101
Inolvidable .....	PD9102
My Wild Irish Rose .....	PD9101
Sabor A Mi.....	PD9102
Sin Ti.....	PD9102
Too-ra-loo-ra-loo-ra - That's An Irish Lullaby .....	PD9101
Whiskey In A Jar .....	PD9101