



disklavier™ E3

Quick reference

Starting

Listening

Starting

Learning about the Control Unit

Buttons that you will use for playback and recording.

ON/OFF Turns on or shuts down the Disklavier.
EJECT Opens the CD tray.
PLAY/PAUSE Starts and pauses playback/recording.
STOP Stops playback/recording.
SELECT Opens the media selection screen.
ENTER (center) Executes the selection.
CURSOR Selects the item.
RECORD Gets the Disklavier ready to record.

Learn More? See page 2 on *Operation Manual*.

Learning about Media

Media that you can use on the Disklavier.

Compact Disc The Disklavier can play songs on commercial audio CDs and data CDs (such as PianoSoft•PlusAudio, etc)
Internal Flash Memory The Disklavier comes with a total of 128 megabytes of internal flash memory that allows you to store song data.
USB Flash Memory You can also use commercially available USB flash memory to store song data.

Note: Yamaha does not assure the operation of commercially available USB flash memories. For a list of compatible products, please visit: www.yamaha.com/disklavier.

Learn More? See page 14 on *Operation Manual*.

Listening to a Song

Listening to a CD included with the Disklavier

1 Connect the Disklavier to mains.

[EJECT] >> [ON/OFF] >> PLEASE WAIT >> [Memory] A01-001 <00-00> Invention 1

2 Turn your Disklavier on.

[ON/OFF] >> [SELECT] [CURSOR] [ENTER]

Your Disklavier is now ready for use!

3 Select an album.

[CURSOR] [ALBUM SELECT= 02:Classic BG] >> [ENTER] [SONG SELECT= 001:Sonata K380, L]

4 Select a song.

[CURSOR] [SONG SELECT= 002:Eine Kleine Na

5 Shut your Disklavier down.

[ON/OFF] See you again

6 Start song playback.

[PLAY] [CD] A02-002 LR SO V+00 <00-01> Eine Kleine

7 Stop song playback.

[STOP] [CD] A02-002 LR SO V+00 <00-00> Eine Kleine

Learn More?

- To change the playback tempo >> See page 27 on *Operation Manual*.
- To play in a different key (Transposition) >> See page 27 on *Operation Manual*.
- To repeat playback >> See page 28 on *Operation Manual*.
- To use the timer >> See page 34 on *Operation Manual*.

Listening to a Free DisklavierRadio Channel

Listening to a Free DisklavierRadio Channel

Before operating...

Connect the Disklavier to a router or a modem equipped with a router that is connected to the Internet.

For more details on connections, see page 93 on *Operation Manual*.

1 Select "D-Radio" as the playback source.

[SELECT] [CURSOR] [MEDIA SELECT= Playlist D-Radio] >> [ENTER] [RADIO SELECT= 01:Introduction Ch]

2 Select a free channel.

[CURSOR] [RADIO SELECT= 01:Introduction Ch]

Note: The free channel is "CH-01".

3 Turn the DisklavierRadio on!

[ENTER] [D-Radio] CH-01 Welcome to

4 Turn the DisklavierRadio off...

[SELECT] [MEDIA SELECT= Playlist D-Radio]

Learn More?

- To use a subscriber-only DisklavierRadio channel >> See page 92 on *Operation Manual*.
- To mute the DisklavierRadio >> See page 26 on *Operation Manual*.