


New floppy disks must be formatted before they can be used with the Disklavier piano. Formatting prepares the disk so that it is ready to store Disklavier piano song data. Formatting a disk erases all the data previously stored on the disk, so always make sure that the disk you are going to format does not contain songs that you want to keep.

What Type of Floppy Disk

The Disklavier uses MF2-DD (double sided, double density) 3.5 inch floppy disks. If you are not sure which type of disk to buy, please ask your Disklavier dealer.

1 Make sure that the disk's erasure protection tab is set to unprotected as shown above.

2 Insert the floppy disk into the disk drive.

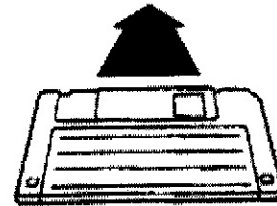

If the disk has not been formatted, the following display will be shown.

UNFORMATTED DISK

3 Press the [DISK] button.



The green DISK indicator will light up and the following display will be shown.

▶FORMAT *SONG DELETE
(+,+,ENT) *SONG COPY →

4 Press the [ENTER] button.



The following display will be shown.

==DISK FORMAT== SURE?
FORMAT START (YES-NO)

5 Press the [+ / YES] button to start the disk formatting process.



If you do not want to continue with the formatting process, press the [- / NO] button and the previous display will be shown.

During the disk formatting process, the following display is shown and the RECORD indicator flashes.

WRITING TO DISK
DO NOT REMOVE DISK!

Formatting a disk takes about a minute.