 
 


Making Backups and Restoring the Song Library

You can make a backup copy of the song libraries and play lists, and restore the songs in the Disklavier. In order to protect your valuable music data, Yamaha strongly recommends that you backup your Mark IV hard drive on a regular basis.

Note: Be sure to use a USB HDD formatted in a FAT32 file system in the following procedure. The NTFS file system is not supported for this function.

 
 
Making Backups

- 1 Connect an external USB HDD to the USB port on the Media Center.
- 2 Tap on  in the [Main] screen, and then .
- 3 Tap on  in the [System] screen, , and then .
- 4 Tap on .
 


The screenshot shows a dialog box with a question mark icon. The text reads: "It takes about 17 minutes to backup. Do you wish to continue?". There are "Continue" and "CANCEL" buttons at the bottom.
- 5 Tap on .

The Disklavier will start making backups.
- 6 Tap on  after the completion message appears, and then .

Restoring the Song Library

- 1 Perform steps 1 and 2 in "Making Backups" above.
- 2 Tap on  in the [System] screen, , and then .

- 3 Tap on .

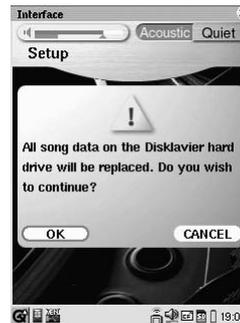

- 4 Tap on .



- 5 Tap on .

The Disklavier will start restoring the song library.
- 6 Tap on  after the completion message appears, and then .