


How to Format Disks

In order to be able to use newly purchased disks with the Disklavier, they first have to be "formatted". It is not necessary to format the supplied pre-recorded disk and Piano Soft™ disks for Disklavier. (Doing so would erase the recorded music!)

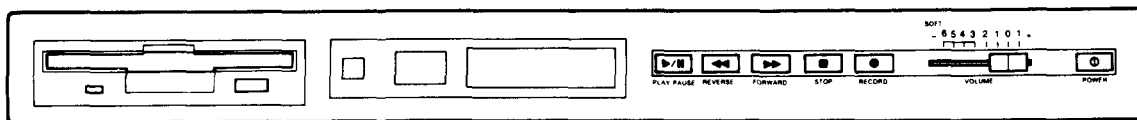

1

Insert the floppy disk.

UNFORMATTED DISK

2

After inserting a disk, press the Rec. button while keeping the Stop button depressed. You can release these buttons when the display reads "FORMAT OK?".

FORMAT OK?

3

In answer to the above message, press the Play/Pause button.

FORMAT OK??

4

Reconfirm the above question by again pressing the Play/Pause button.

FORMATTING NOW!

5

After a few minutes, formatting is completed and the display will change as follows.

If you decide not to proceed with formatting, press the stop button when the display shows "FORMAT OK?" or "FORMAT OK??".