 
 


## ■ How to Format Disks **MX100A/B.**

 
- ① After inserting a disk, press the Rec. button while keeping the Stop button depressed. You can release these buttons when the display reads "FORMAT OK?".

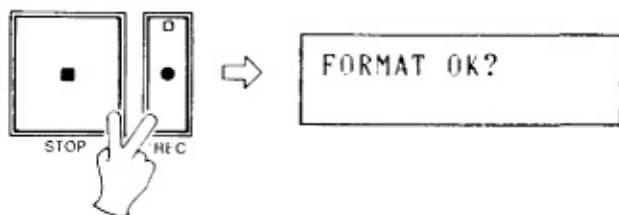


- ② In answer to the above message, press the Start/Pause button. (If you should decide not to proceed with formatting, remove the disk instead.)

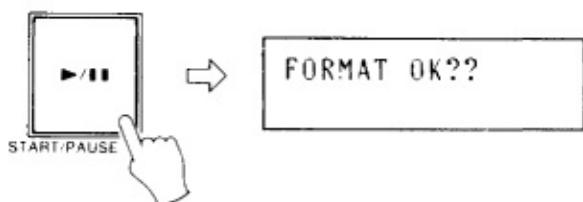

- ③ Reconfirm the above question by again pressing the Start/Pause button. (If you decide not to proceed with formatting, remove the disk instead.)

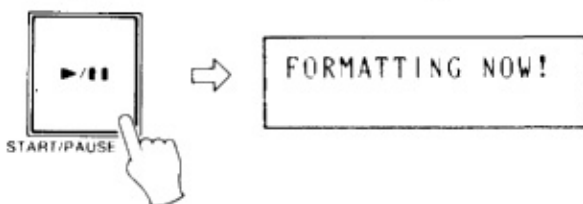

 - ④ After a few minutes, formatting is completed and the display will change as follows.



### ● Erasing recordings

Should you wish to delete all recordings on a disk at once, you can format that disk as described.

### **Song Delete**

**Select song: Hold STOP press REVERSE. Press PLAY twice.**