

## **How to make a boot floppy on the MARK IV.**

**\*\*Unit must be completely booted-green standby light solid green-\*\***

**\*\*Floppy must have the Protect tab to the Unlock position-hole is covered-. \*\***

- 1- Insert one Blank High Density Disk--HD--into the floppy drive.
  - 2- On the PRC-100, from the "Interface Main" tap on "Next -->" located on the bottom right corner, it will take you to the next page.
  - 3- Tap on the "Setup" Icon
  - 4- Tap on "Next -->" Bottom right corner.
  - 5- Tap on "System".
  - 6- Tap on "Make Install FD". It will take approximately 2 minutes to create the boot Disk.
  - 7- Tap on "OK" when the "Complete" message is displayed.
  - 8- Press on the Back button repeatedly-the button that has the U turn arrow-until you see the "Interface Main"
  - 9- Open the Cd tray and insert the Update CD and close the tray. Follow the update Instructions.
- \*\* There is no need to remove the floppy to set the Protect tab to the lock position - Window open-. \*\***

Fredy Atcheson  
[fatcheson@yamaha.com](mailto:fatcheson@yamaha.com)  
800 854 1569